

Evaporator



Removal

NOTE: *The evaporator is available only as part of the climate control housing.*

1. Remove the climate control housing.

Refer to: [Climate Control Housing - 2.3L EcoBoost \(231kW/314PS\)/2.3L EcoBoost \(257kW/350PS\) – MI4](#) (412-00 Climate Control System - General Information, Removal and Installation).

Refer to: Climate Control Housing - 3.7L Duratec (227kW/301PS) (412-00) .

Refer to: [Climate Control Housing - 5.0L 32V Ti-VCT](#) (412-00 Climate Control System - General Information, Removal and Installation).

Installation

1. Transfer the components from the old housing to the new housing as required.
2. To install, reverse the removal procedure.