

## Hood Latch Release Handle




### Removal

**NOTE:** LHD shown, RHD similar.

1. **NOTE:** Insert a 10 mm 1/4 inch drive socket to release the clips.

Remove the hood latch release handle.

1. Remove the hood latch release handle access cover.
2. Release the clips releasing the hood latch release handle.
3. Remove the hood latch release handle.

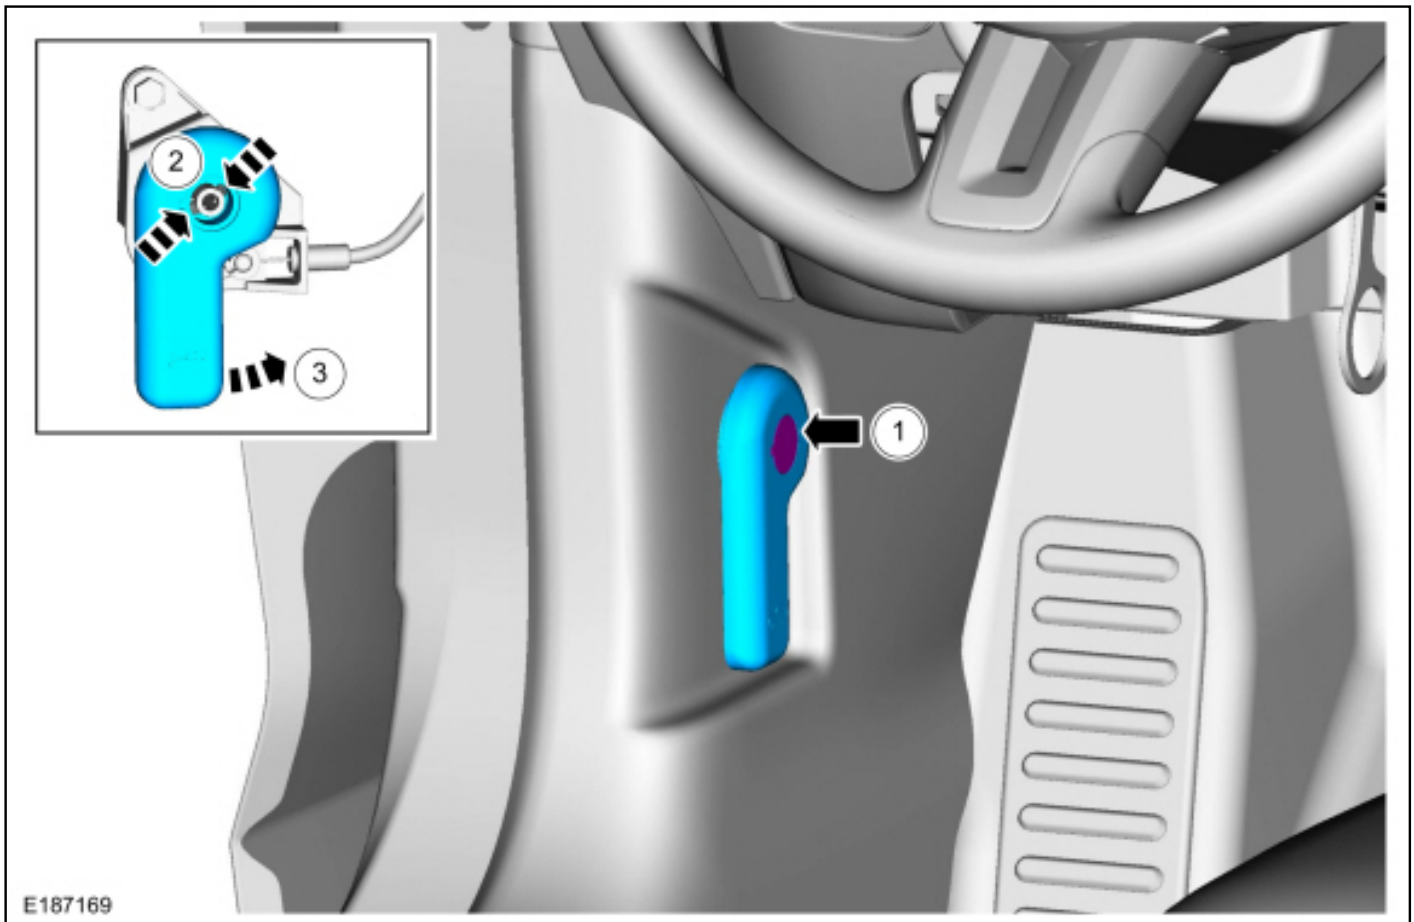

## **Installation**

1. To install, reverse the removal procedure.

© Copyright 2020, Ford Motor Company.

---