

## Brake Caliper - Vehicles With: 6-Piston Brake Caliper


### Removal

**NOTICE:** Make sure that all openings are sealed.


**NOTICE:** If the fluid is spilled on the paintwork, the affected area must be immediately washed down with cold water.

**NOTE:** Removal steps in this procedure may contain installation details.

1. Remove the brake pads.  
Refer to: [Brake Pads - Vehicles With: 6-Piston Brake Caliper](#) (206-03 Front Disc Brake, Removal and Installation).
2. Remove the brake caliper flow bolt and disconnect the brake hose. Discard the washers.  
*Torque: 30 lb.ft (40 Nm)*

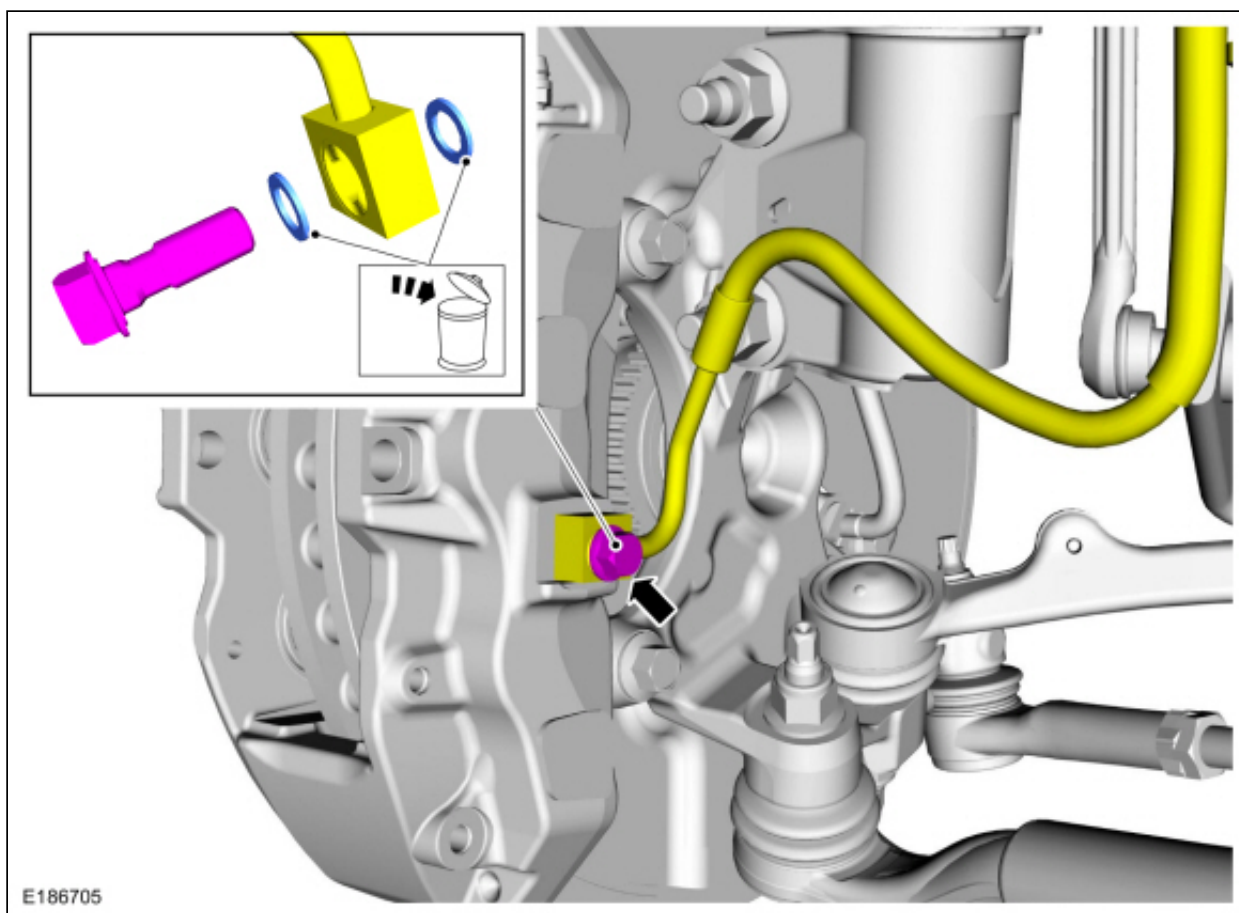

3. Remove the 2 bolts and the brake caliper. Discard the bolts.  
*Torque: 85 lb.ft (115 Nm)*

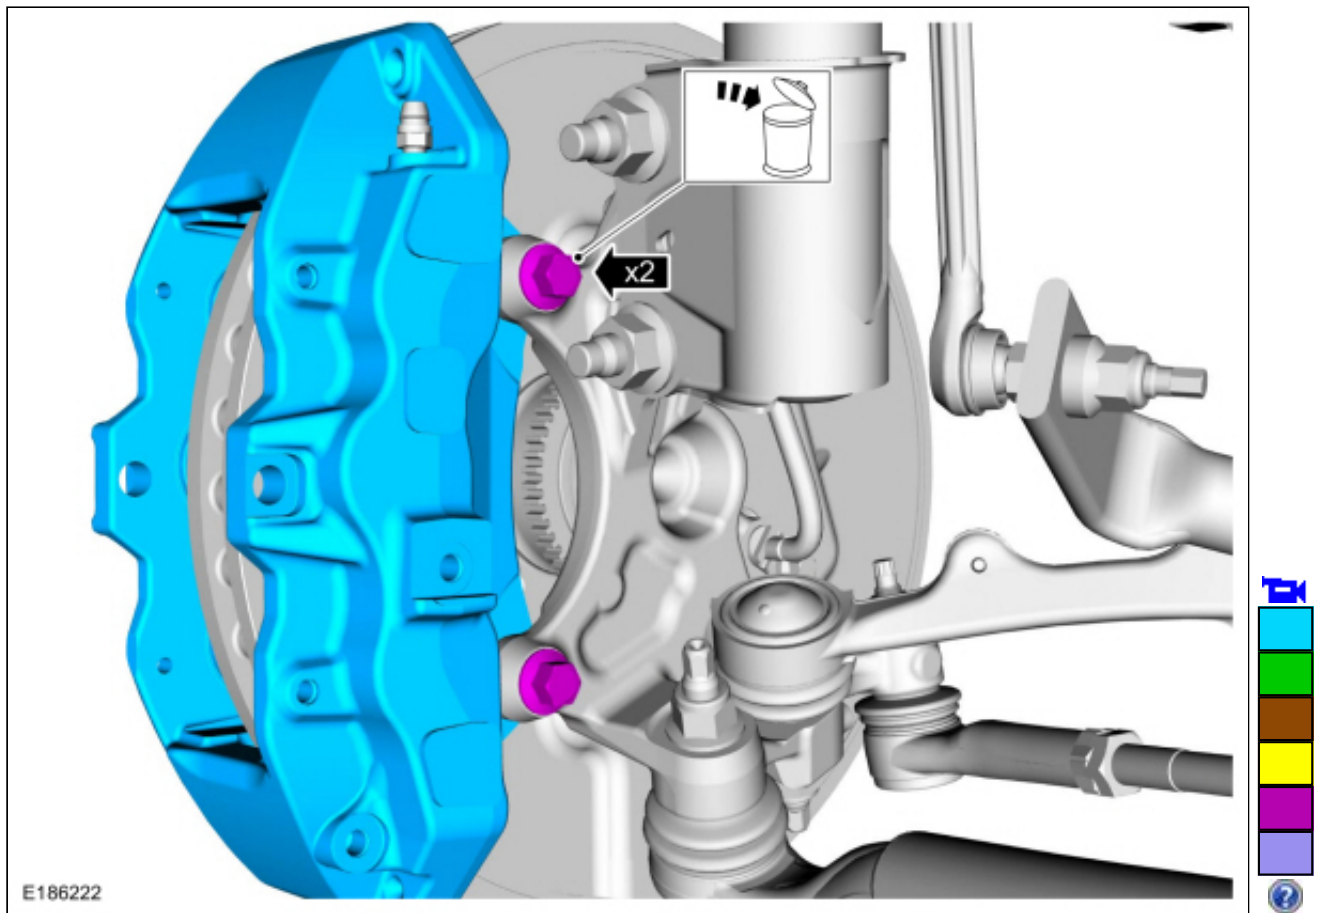

## Installation

1. To install, reverse the removal procedure.
2. Bleed the brake system.

Refer to: [Brake System Pressure Bleeding](#) (206-00 Brake System - General Information, General Procedures).

Copyright © 2015 Ford Motor Company

