




Rear Toe Adjustment

Special Tool(s) / General Equipment

Wheel Alignment System

Adjustment

1. Using a holding device, hold the steering wheel in the straight-ahead position.

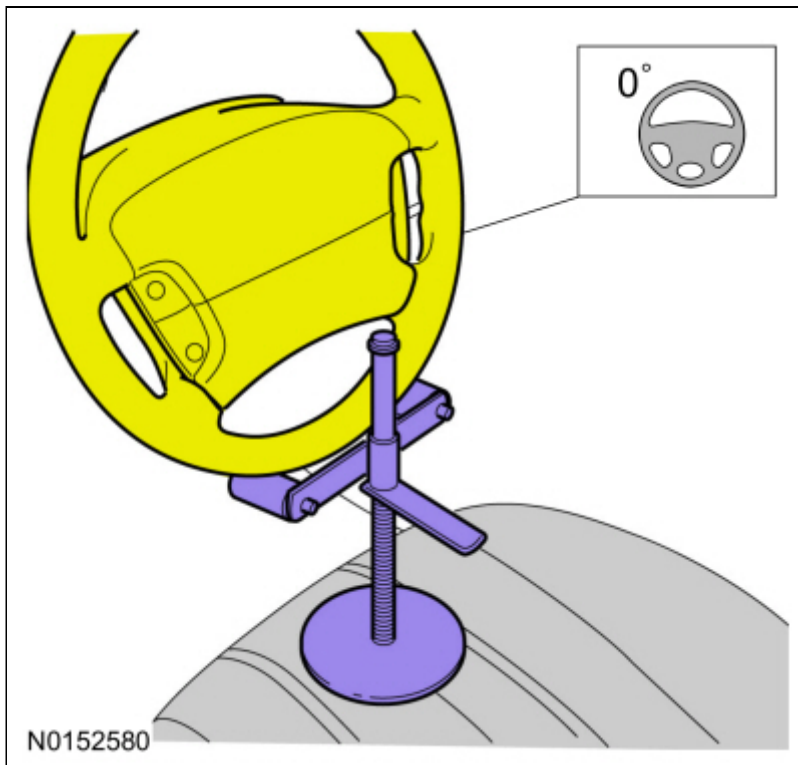

2. Using alignment equipment and the manufacturer's instructions, check the rear toe setting on both sides.
Use the General Equipment: Wheel Alignment System


3.

1. **NOTE:** Make sure that the toe settings are not disturbed while tightening the nuts.

Loosen the toe link nut approximately one full turn.

Torque: 129 lb.ft (175 Nm)

2. Rotate the toe link bolt to achieve the specified toe setting.

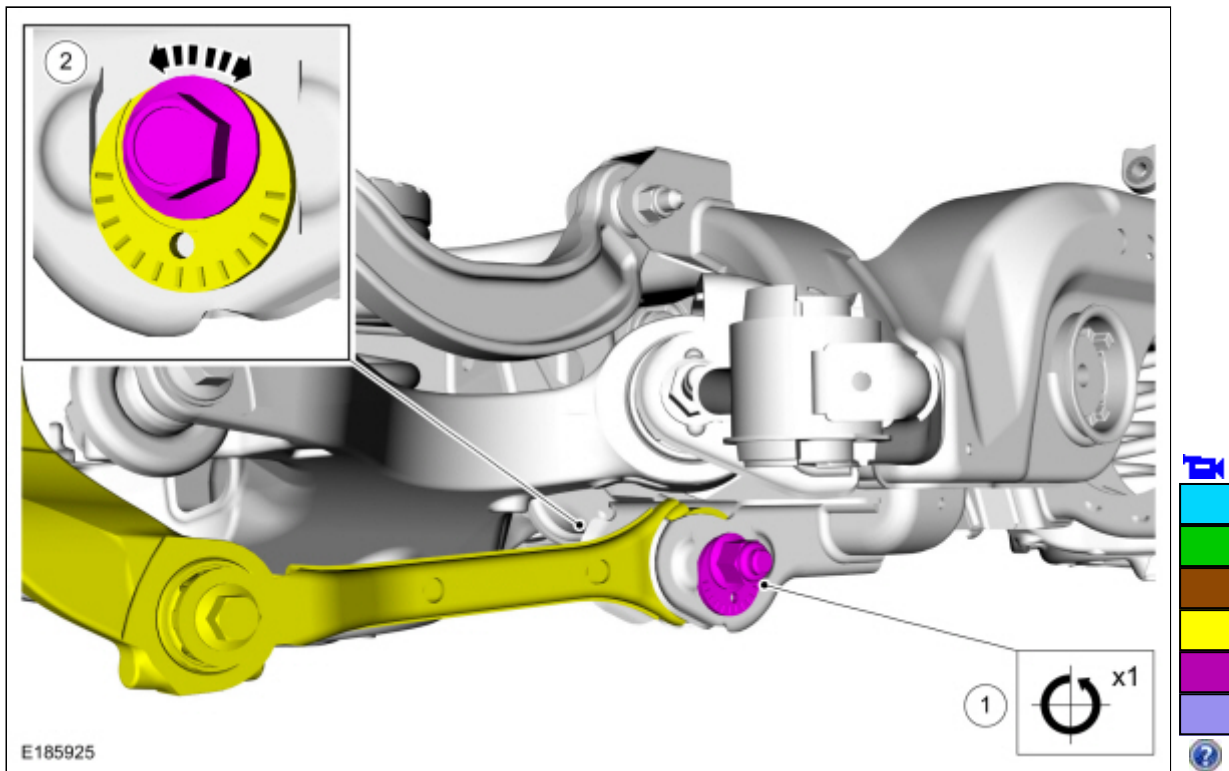

4. Recheck the rear toe settings and adjust as necessary.

Copyright © 2016 Ford Motor Company