


## Cowl Panel Grille



### Removal


**NOTE:** LHD shown, RHD similar.

1. Remove the wiper pivot arms.  
Refer to: [Windshield Wiper Pivot Arm - LHD](#) (501-16 Wipers and Washers, Removal and Installation).
2. Remove the retainers and the battery cover.

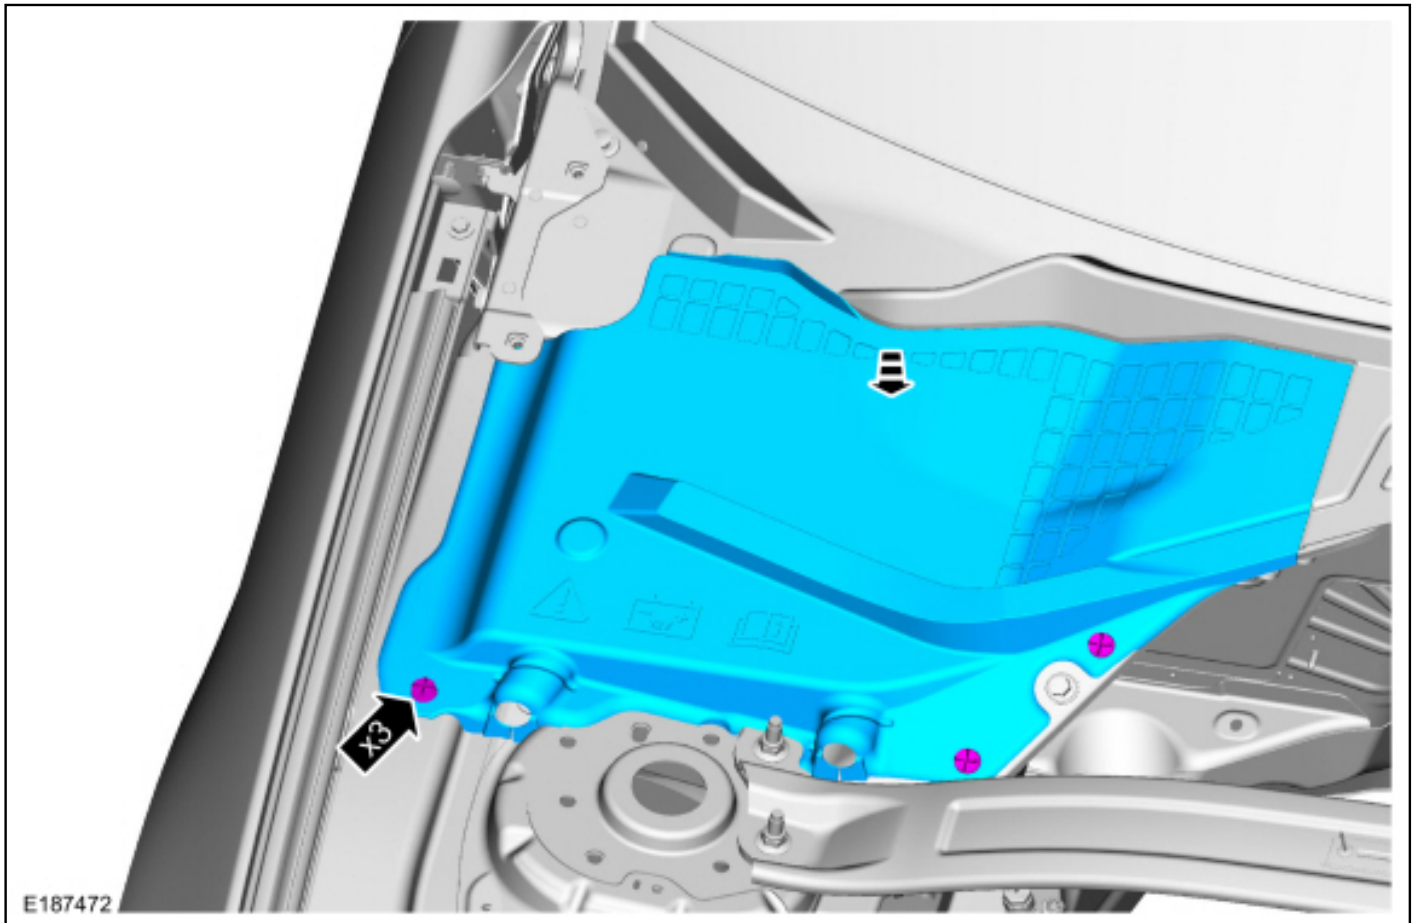

3. Remove the retainers and the clips.



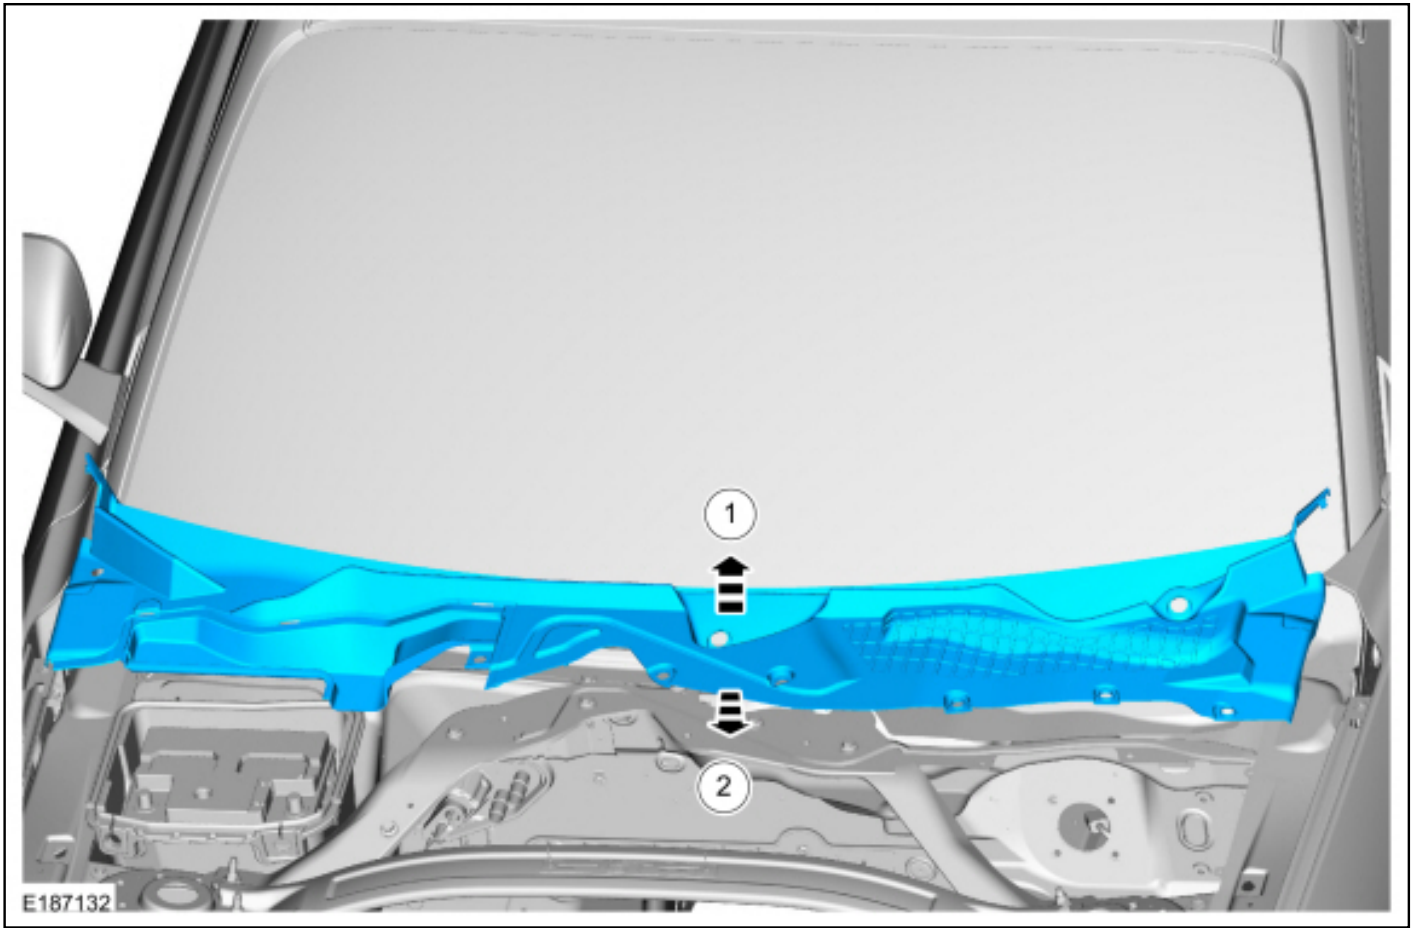

## Installation

1. To install, reverse the removal procedure.