

Floor Console



Special Tool(s) / General Equipment


Interior Trim Remover

Removal


NOTE: Removal steps in this procedure may contain installation details.

All vehicles

1. Release the clips and remove the floor console RH side trim panel.
Use the General Equipment: Interior Trim Remover

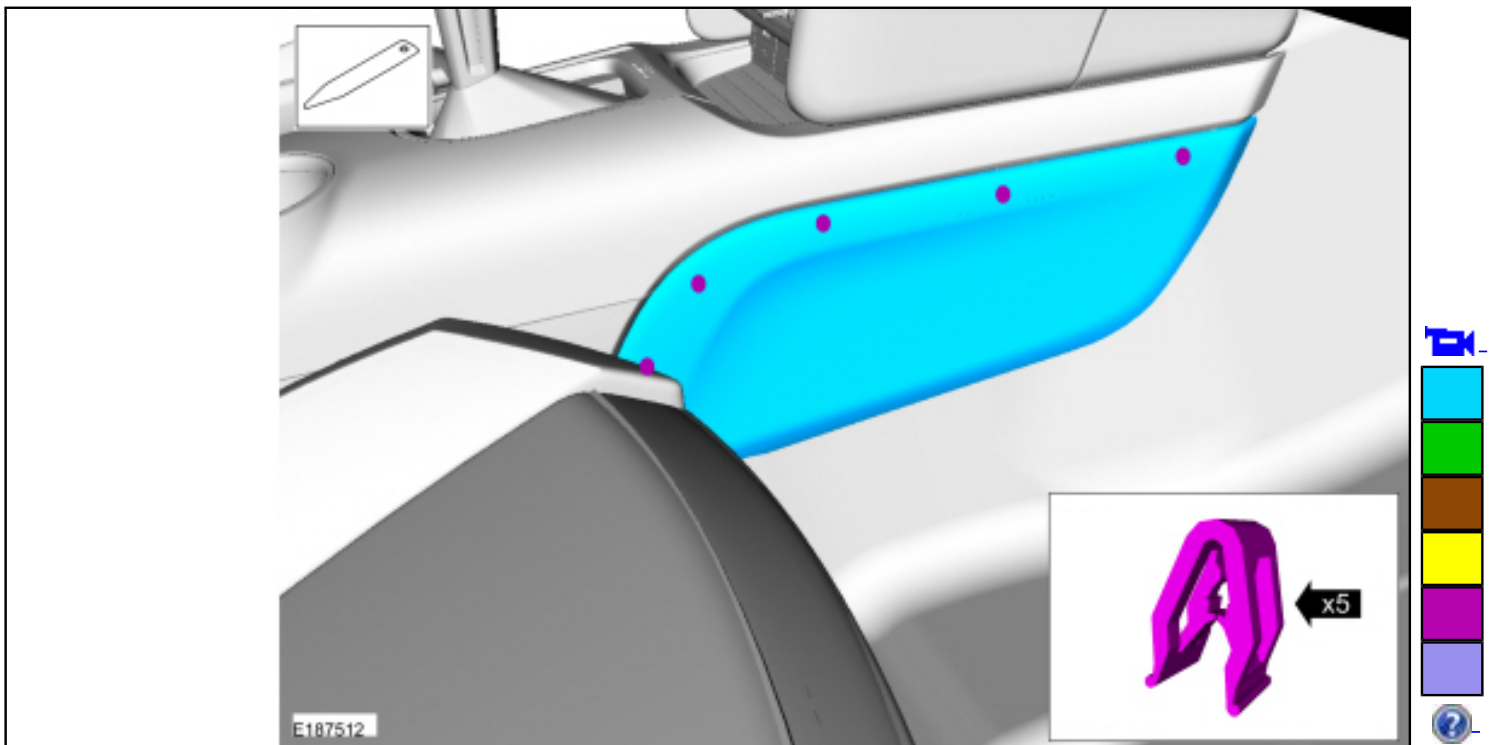


2. Release the clips and the floor console LH side trim panel.
Use the General Equipment: Interior Trim Remover

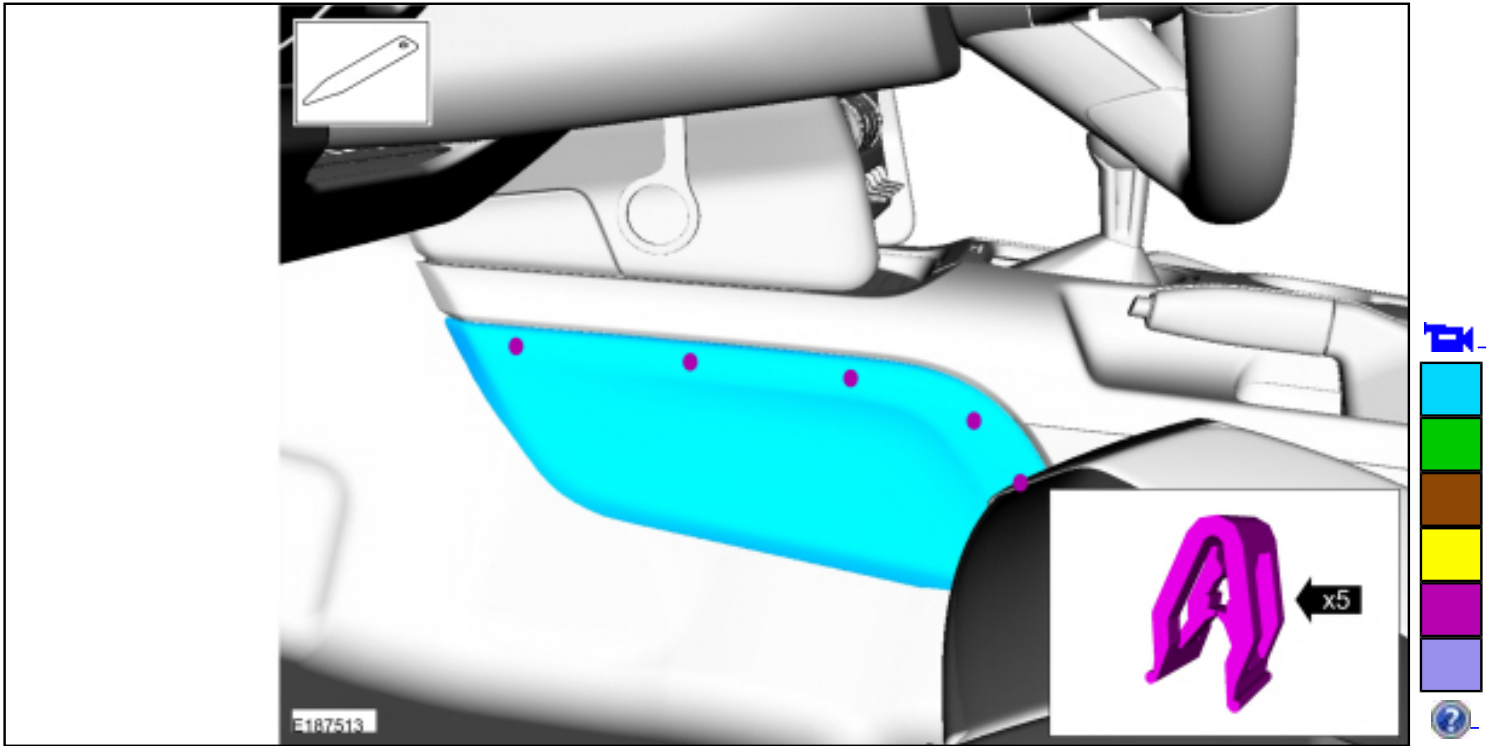


Vehicles without Rotary selector dial

3. Remove the stowage area mat.

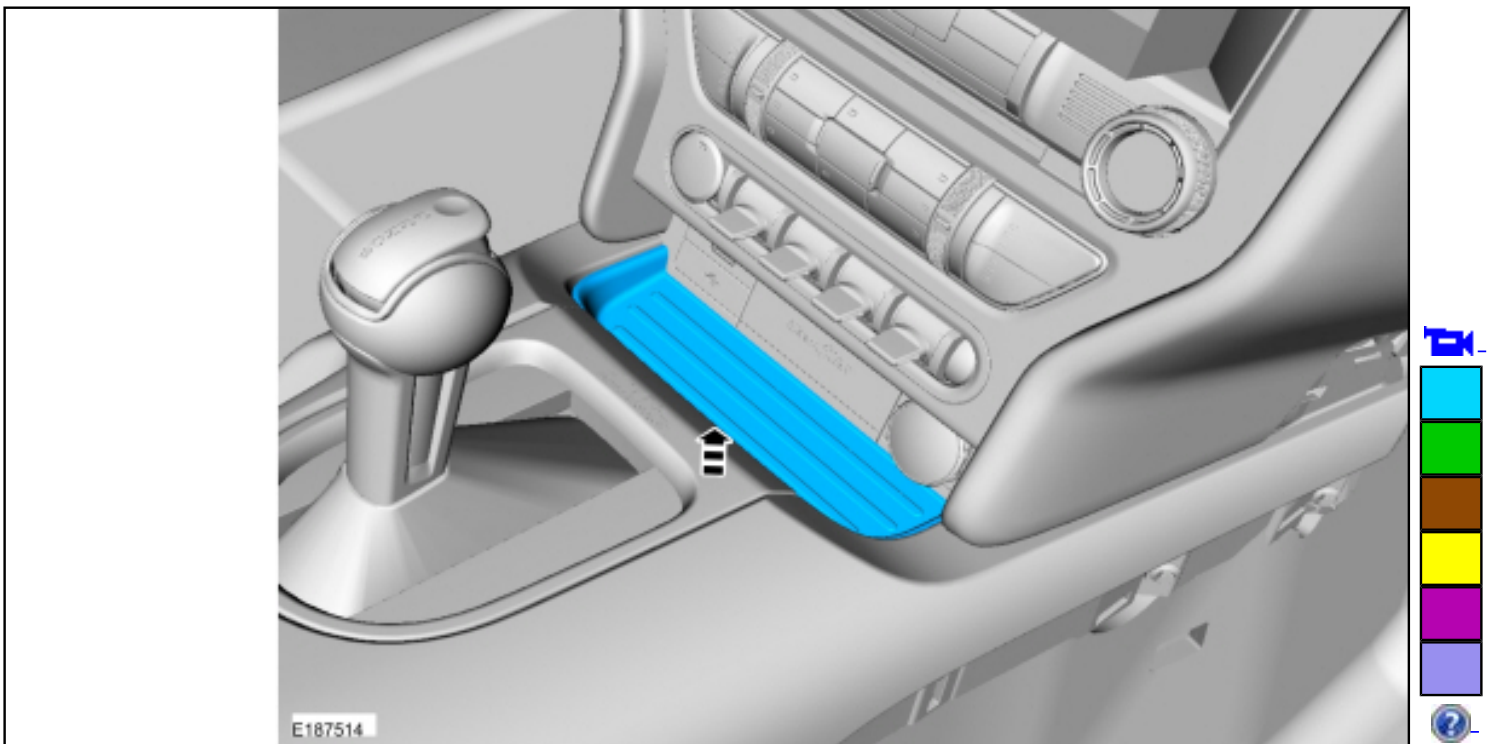


4. Remove the floor console upper bolts.
Torque: 18 lb.in (2 Nm)

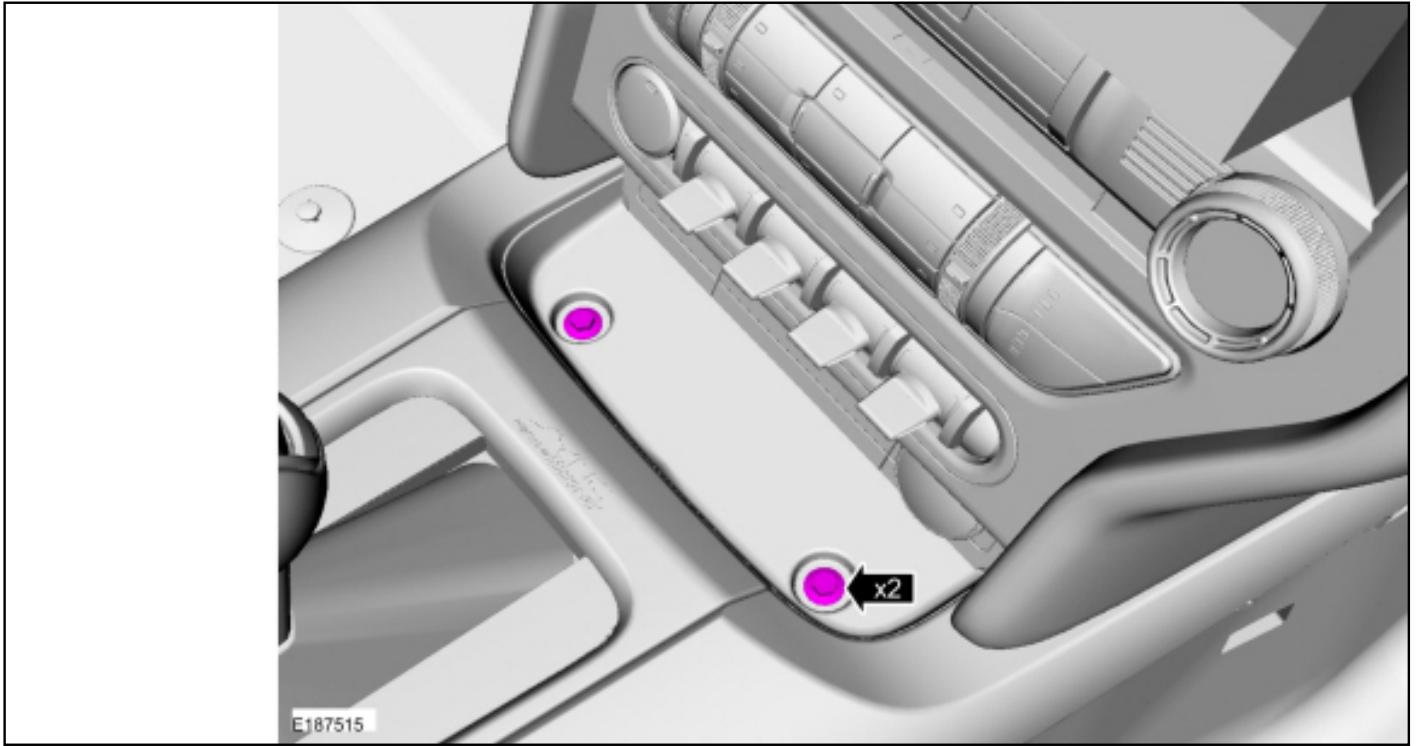


5. **NOTE:** Automatic transmission shown, manual transmission similar.

Starting from the front corners, carefully pry up the bezel and position it out of the way.
Use the General Equipment: Interior Trim Remover

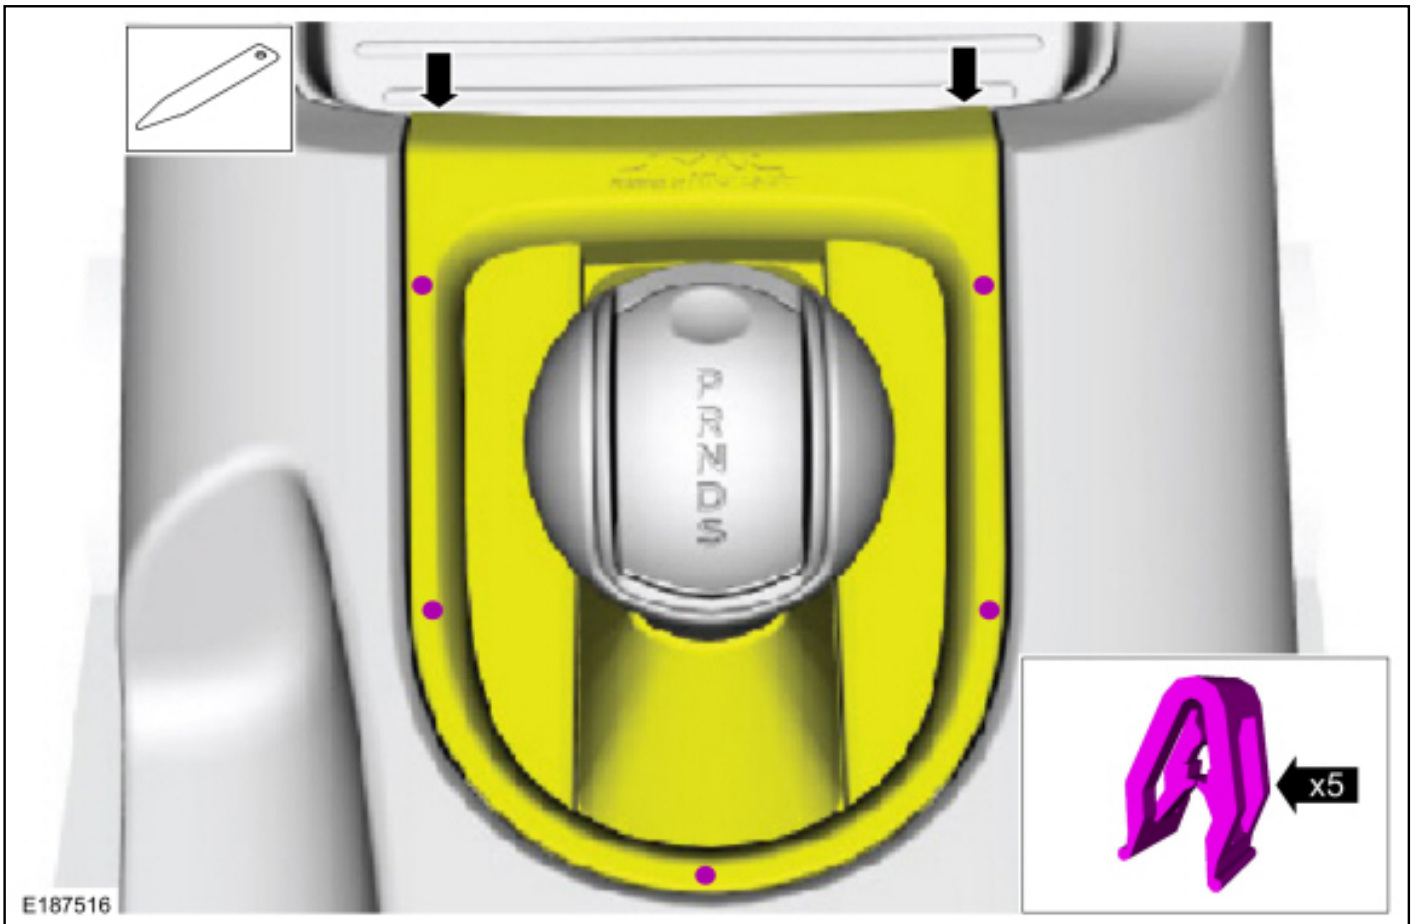


6. Disconnect the electrical connector.

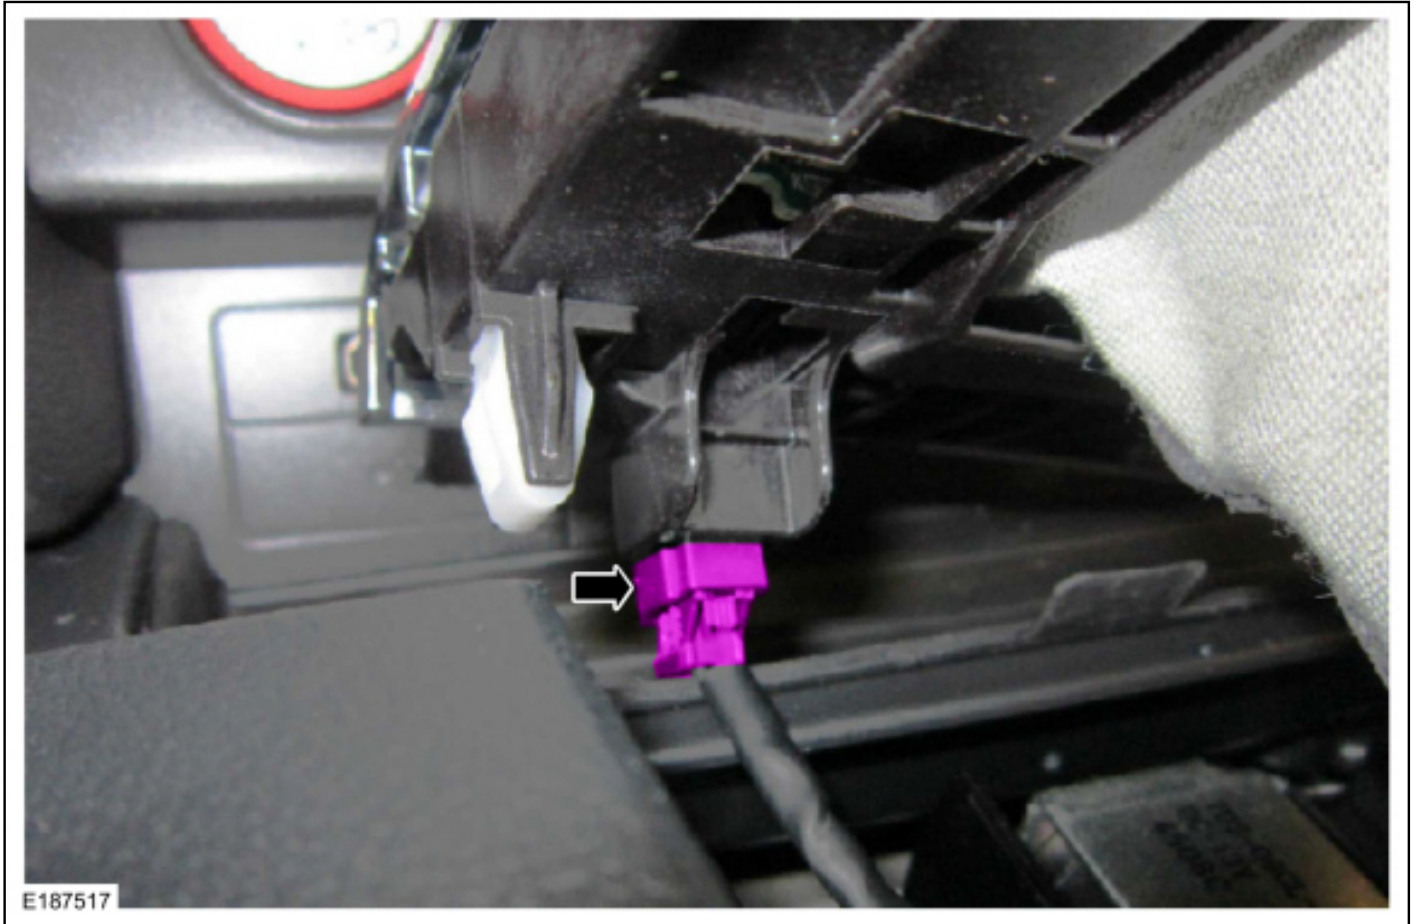


All vehicles

7. Open the floor console lid.

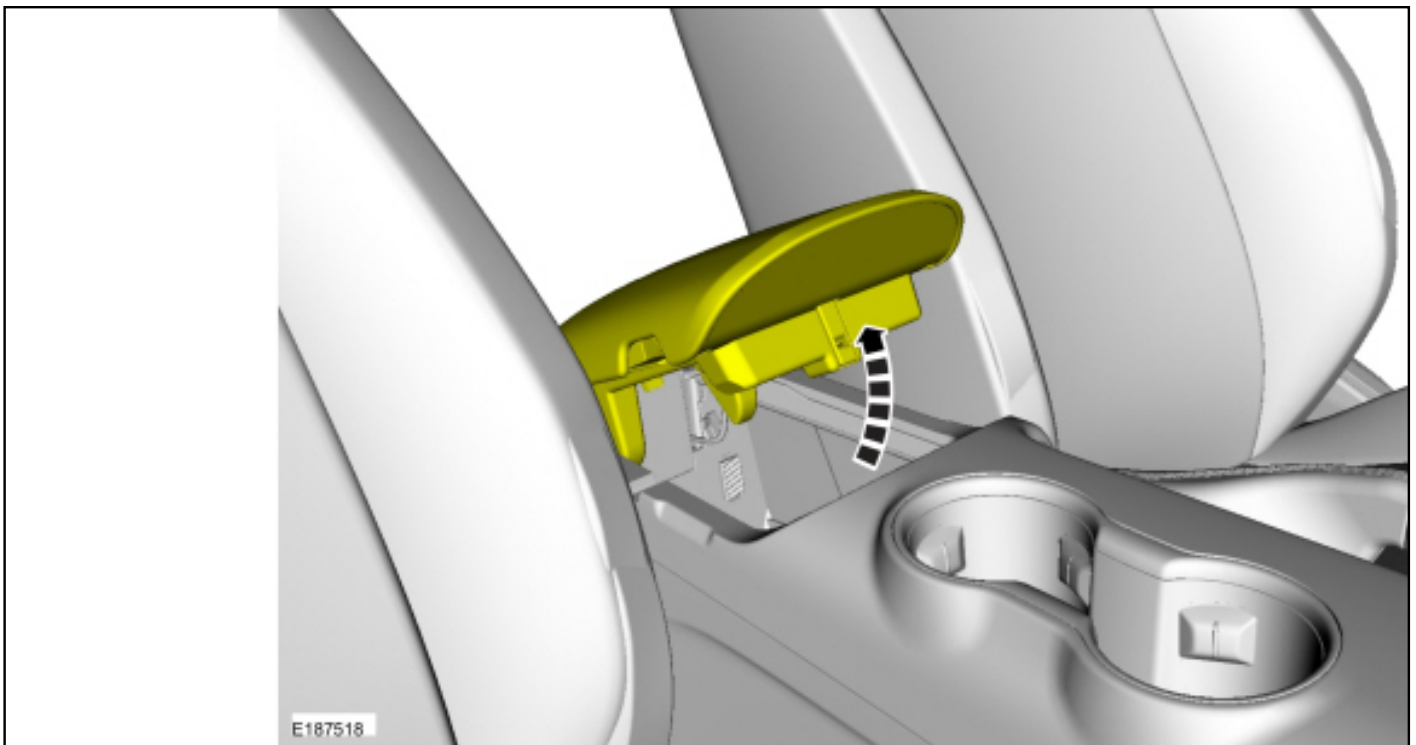


8. Remove the RH side front retainers.

Torque: 18 lb.in (2 Nm)

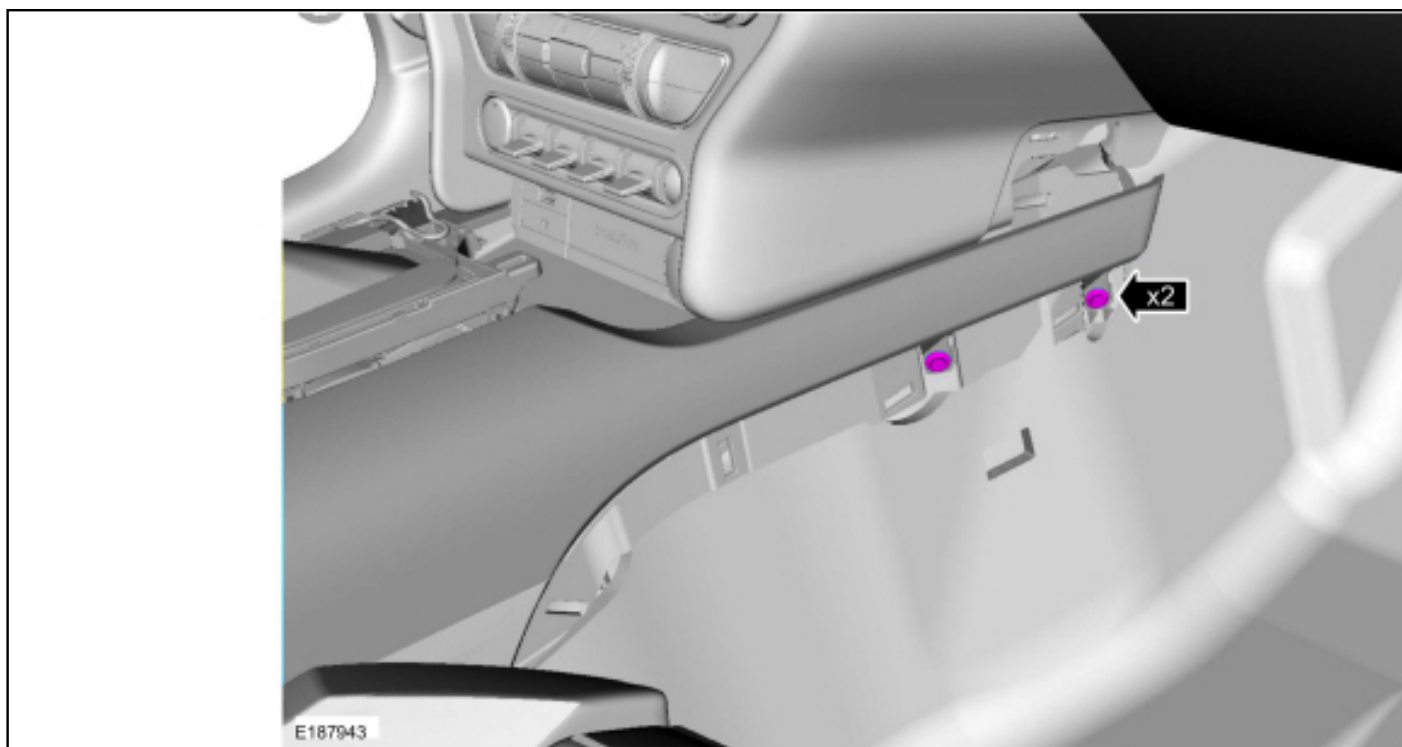

9. Remove the LH side front retainers.

Torque: 18 lb.in (2 Nm)

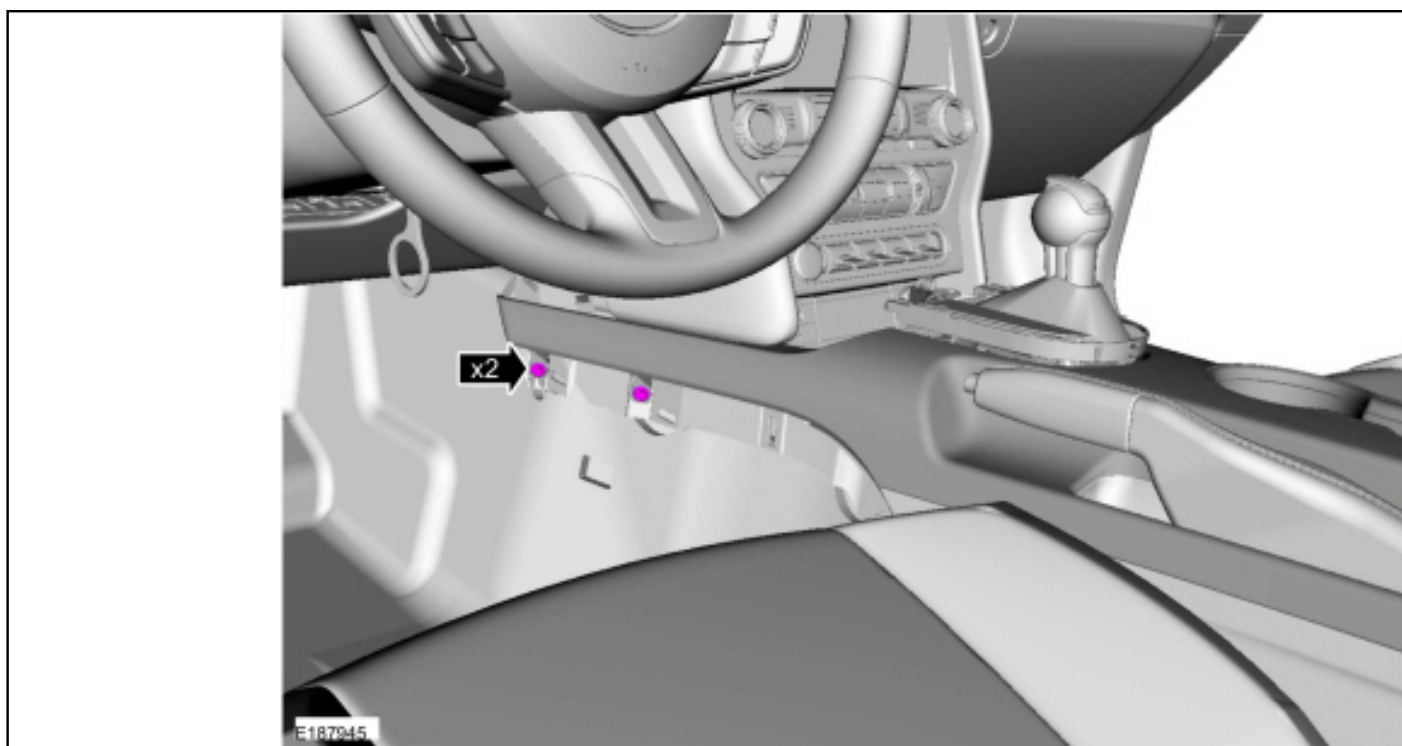


10.

Release the clips, position the gear selector cover aside and remove the floor console upper trim panel.


- Disconnect the electrical connectors.

Use the General Equipment: Interior Trim Remover

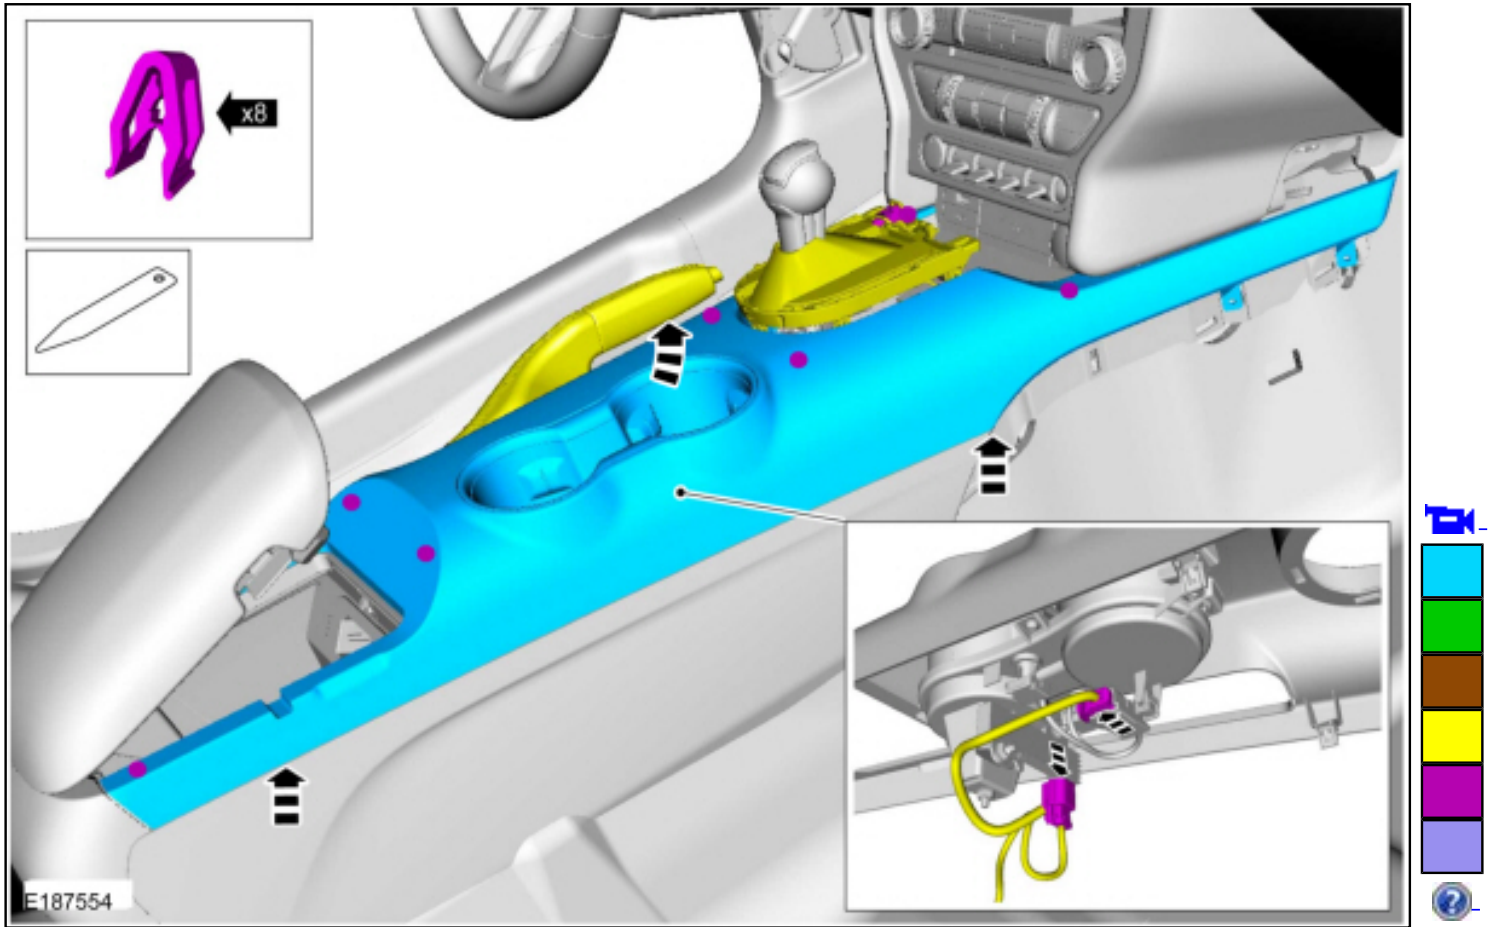


Vehicles with Rotary selector dial

11. Remove the bolts and the push pin.
Torque: 18 lb.in (2 Nm)

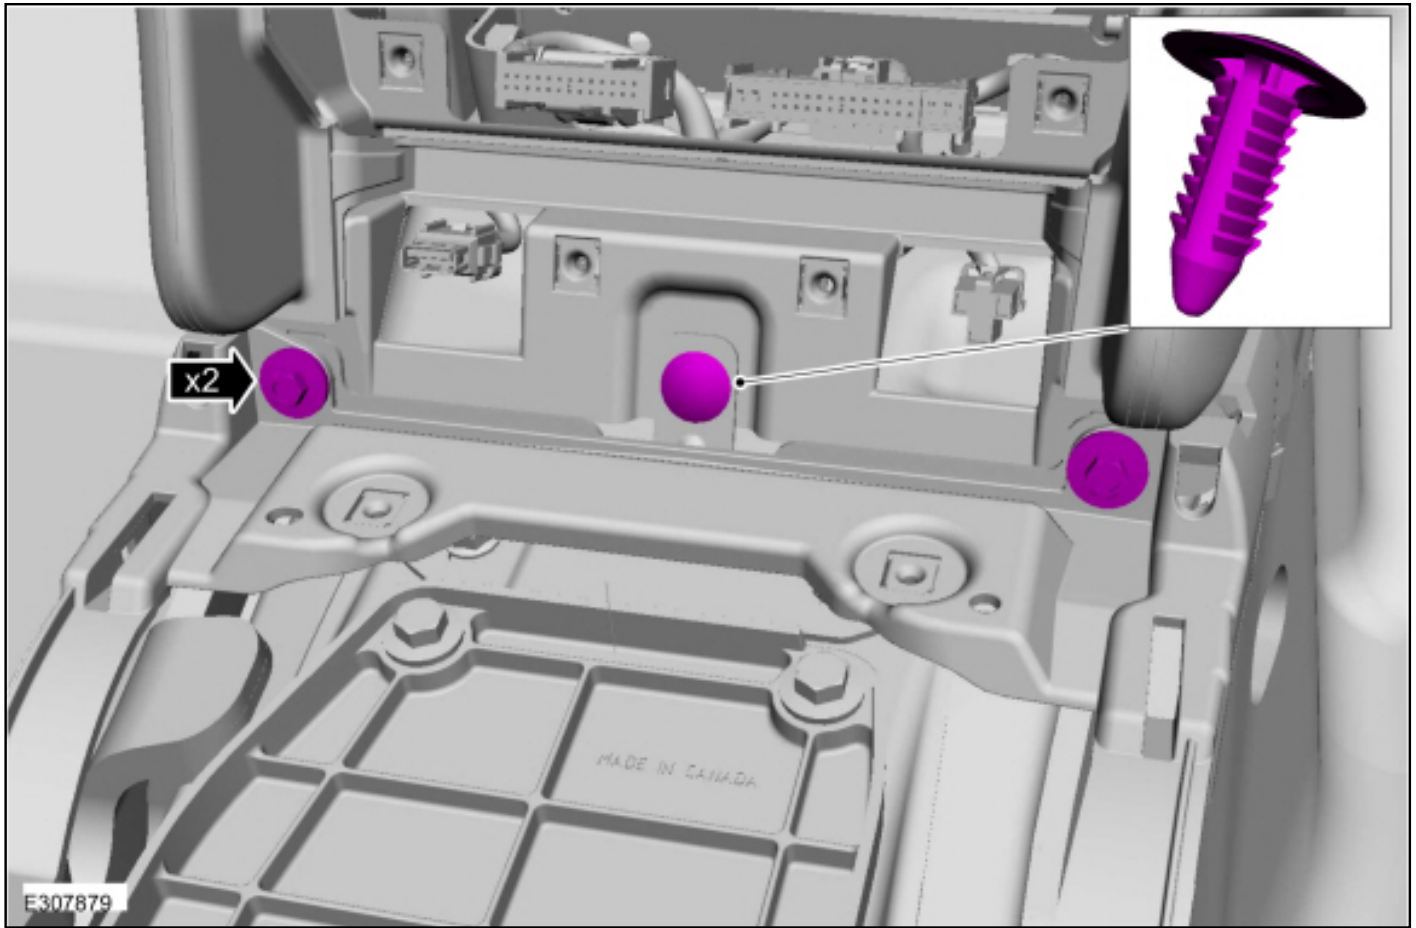


All vehicles


12. Release the clips and remove the floor console RH side bolt cover.
Use the General Equipment: Interior Trim Remover

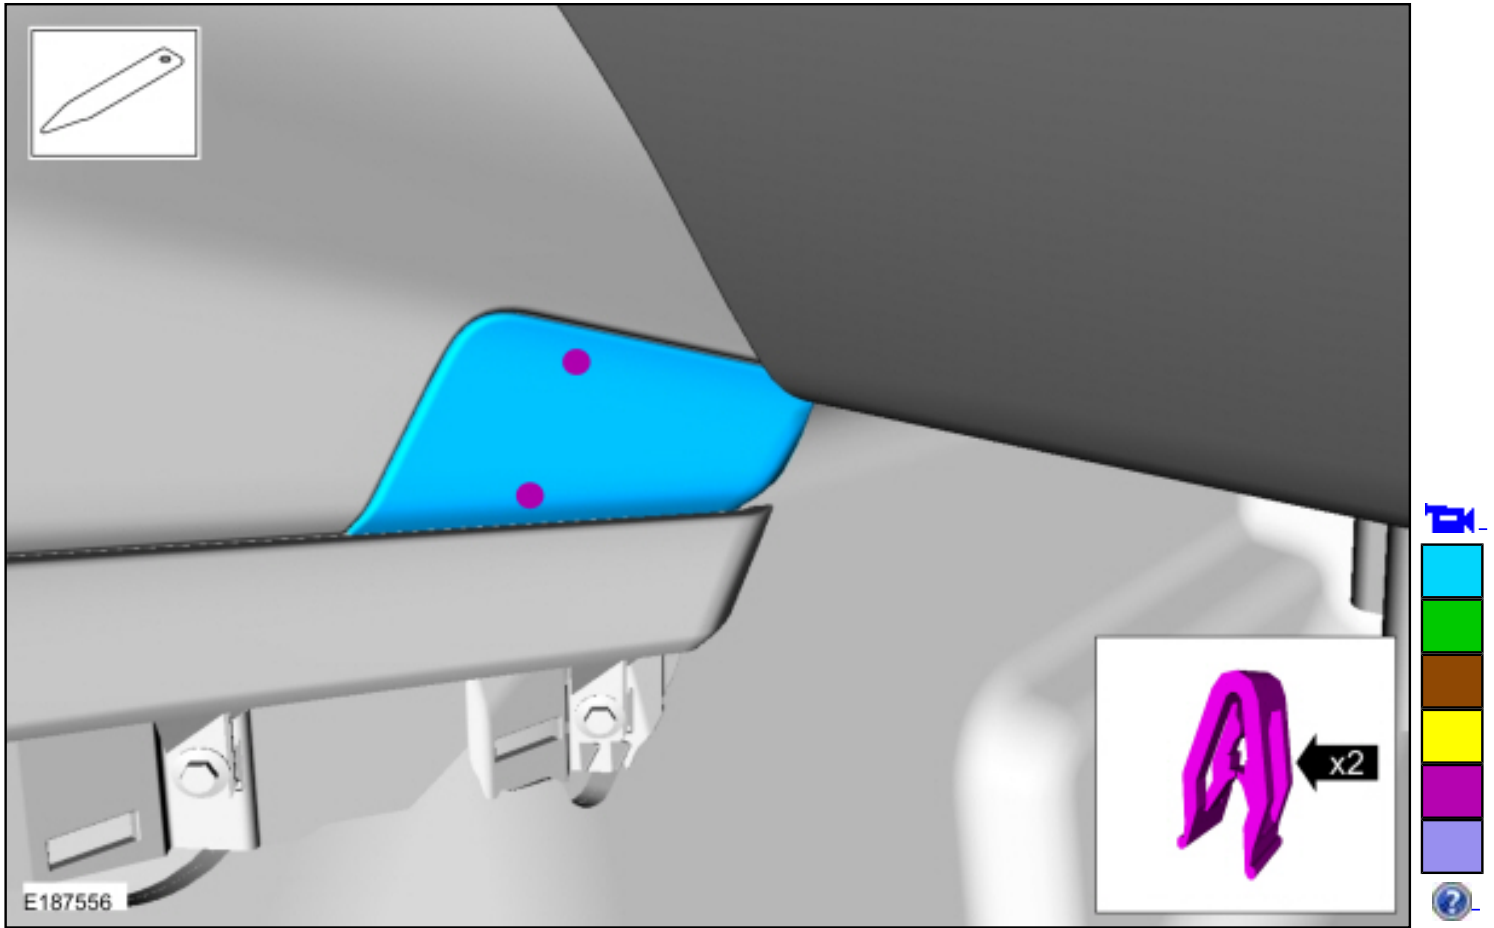


13. Release the clips and the floor console LH side bolt cover.
Use the General Equipment: Interior Trim Remover

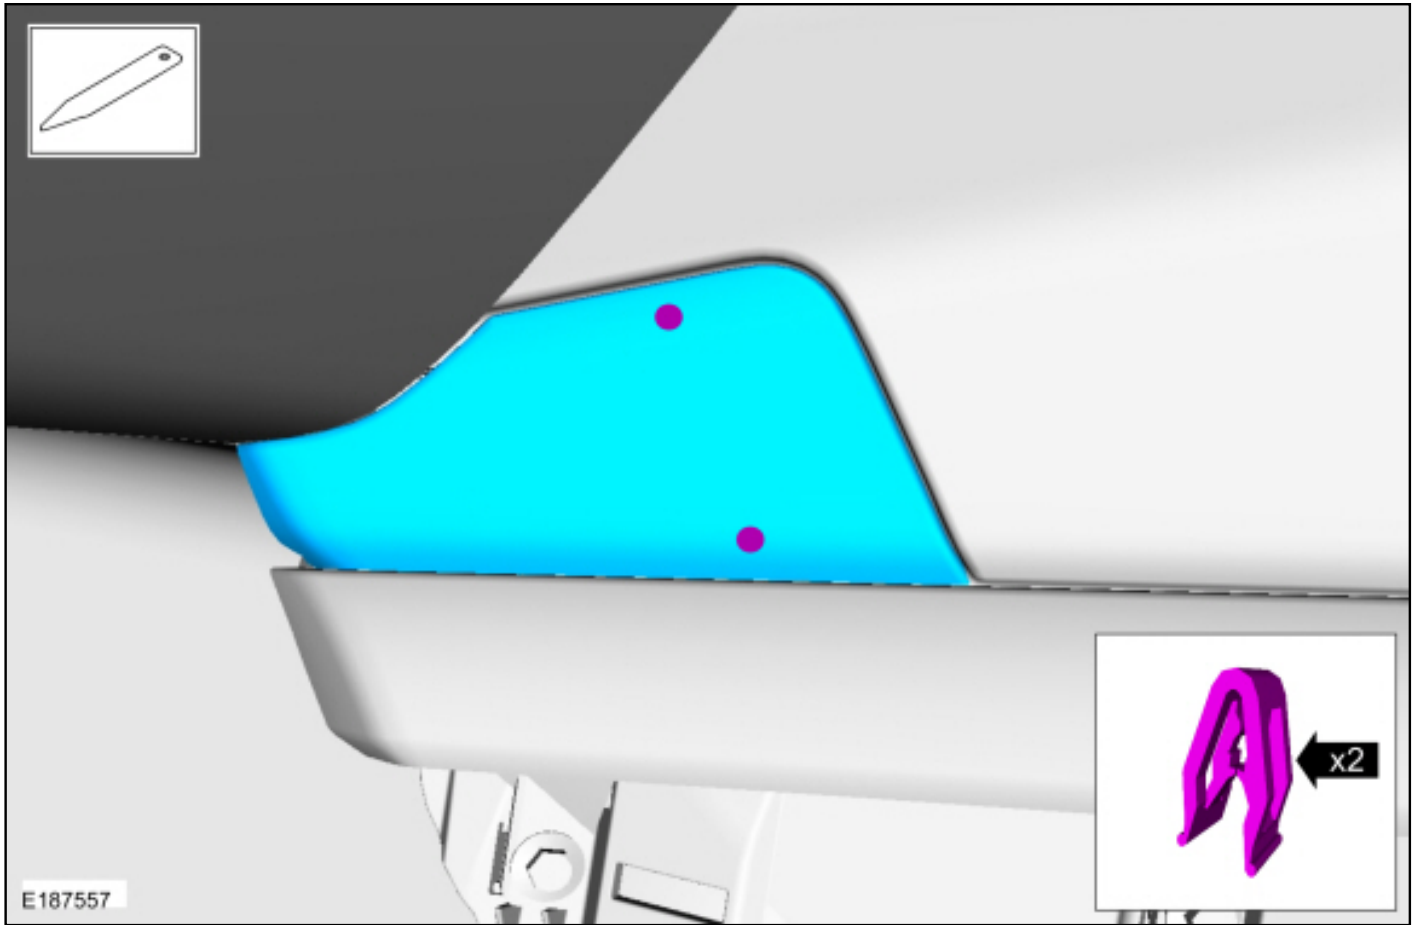

14. Remove the floor console storage bin mat.

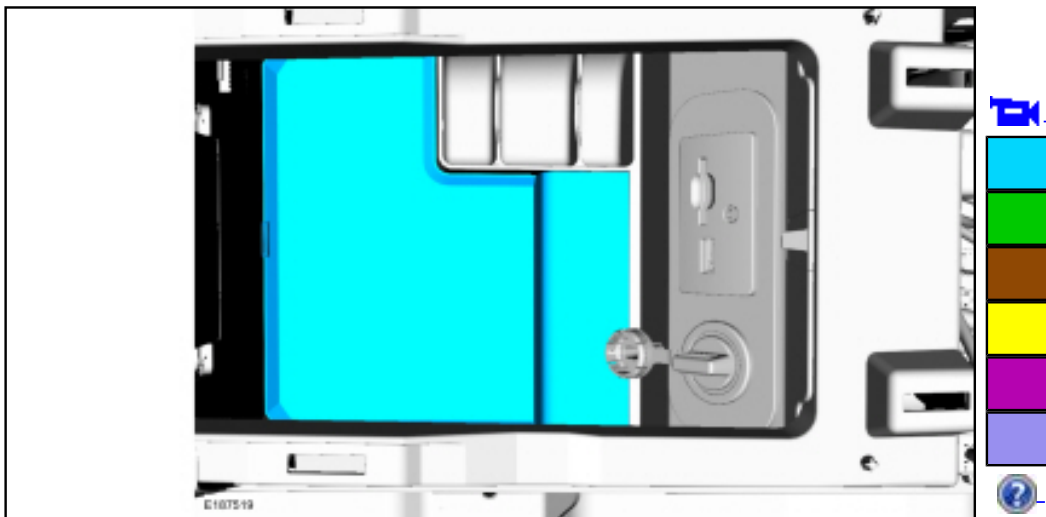


15. Remove the two nuts.
Torque: 18 lb.in (2 Nm)

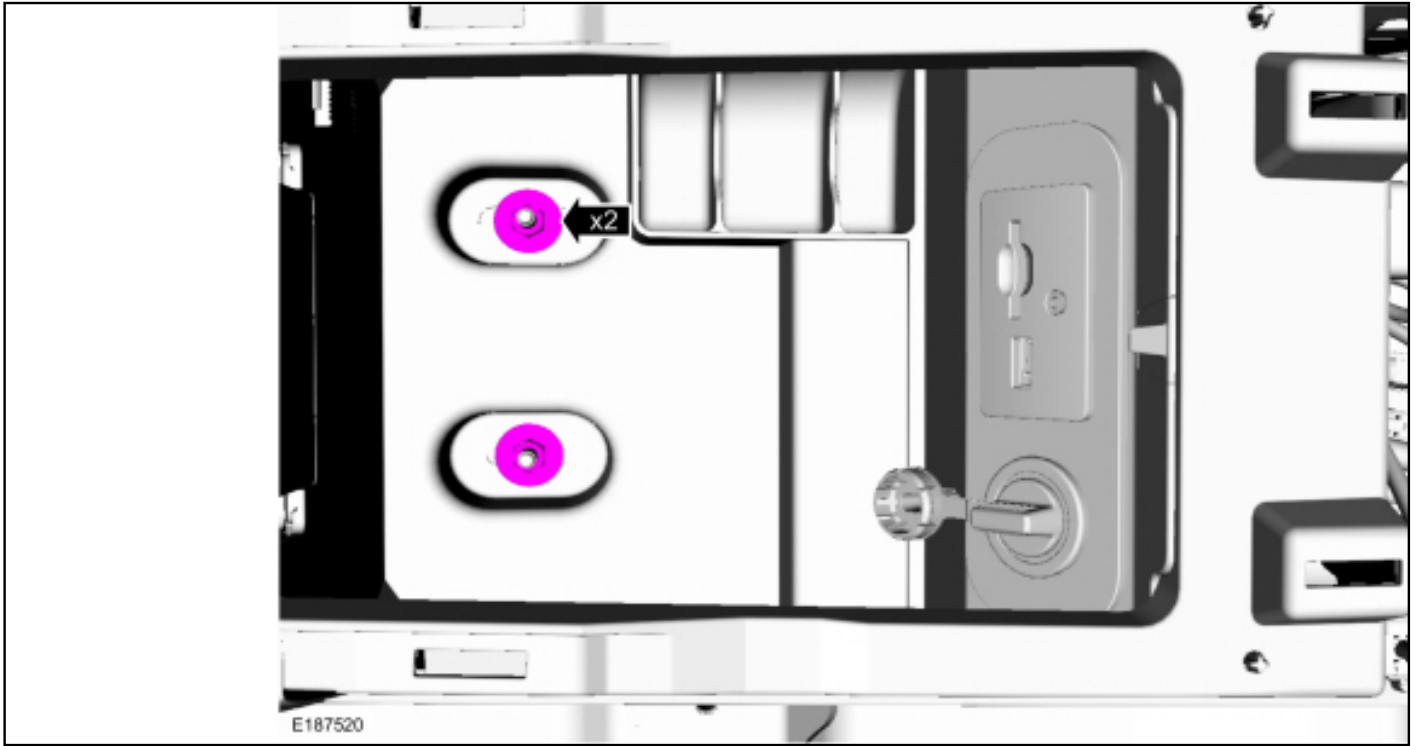


Vehicles without Rotary selector dial

16. Remove the stowage area tray.

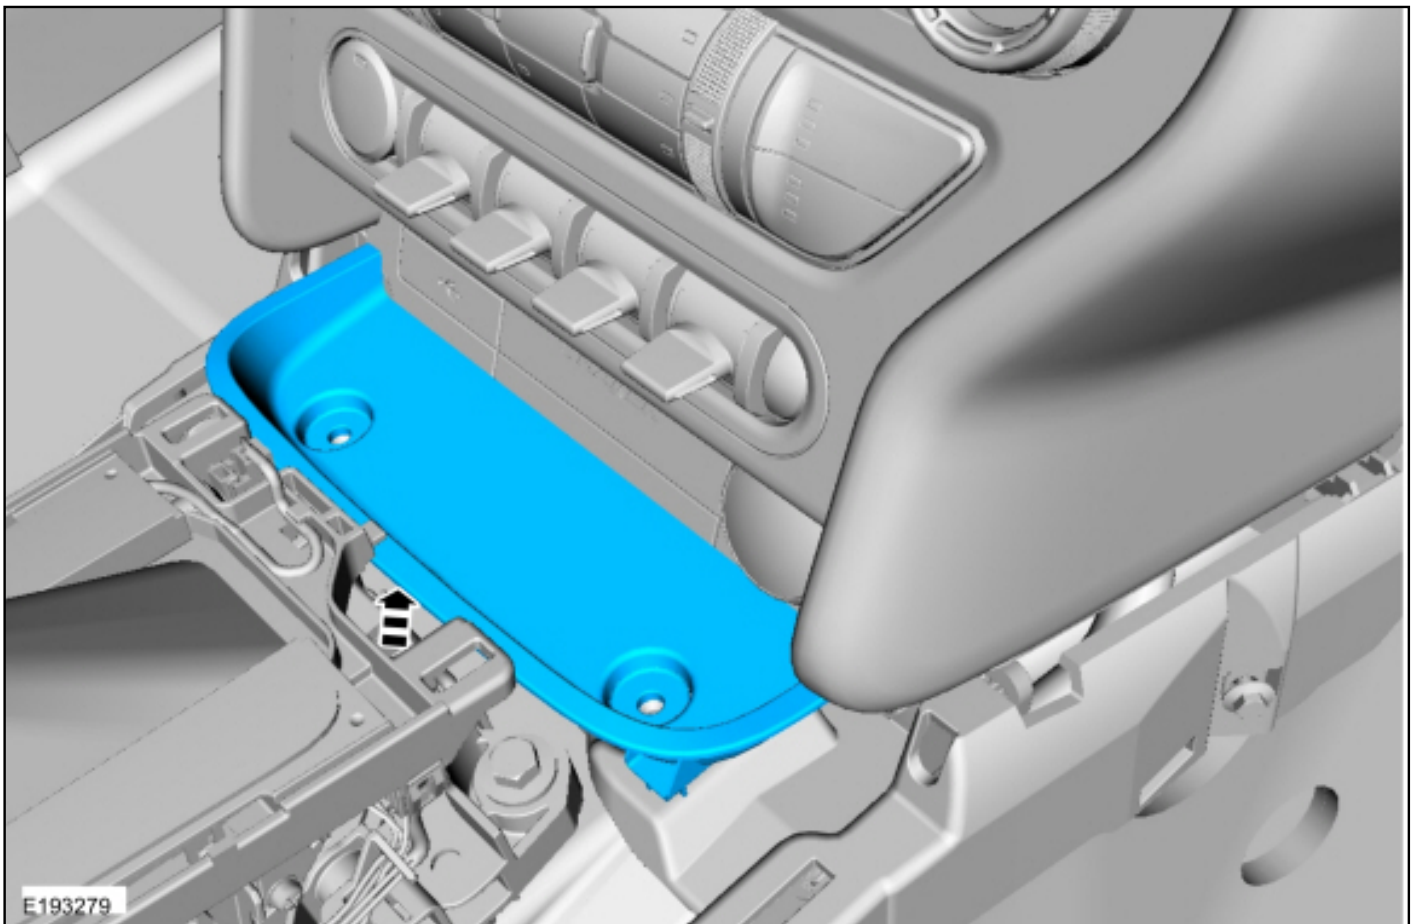


17. Remove the 2 front upper floor console bolts.

Torque: 18 lb.in (2 Nm)

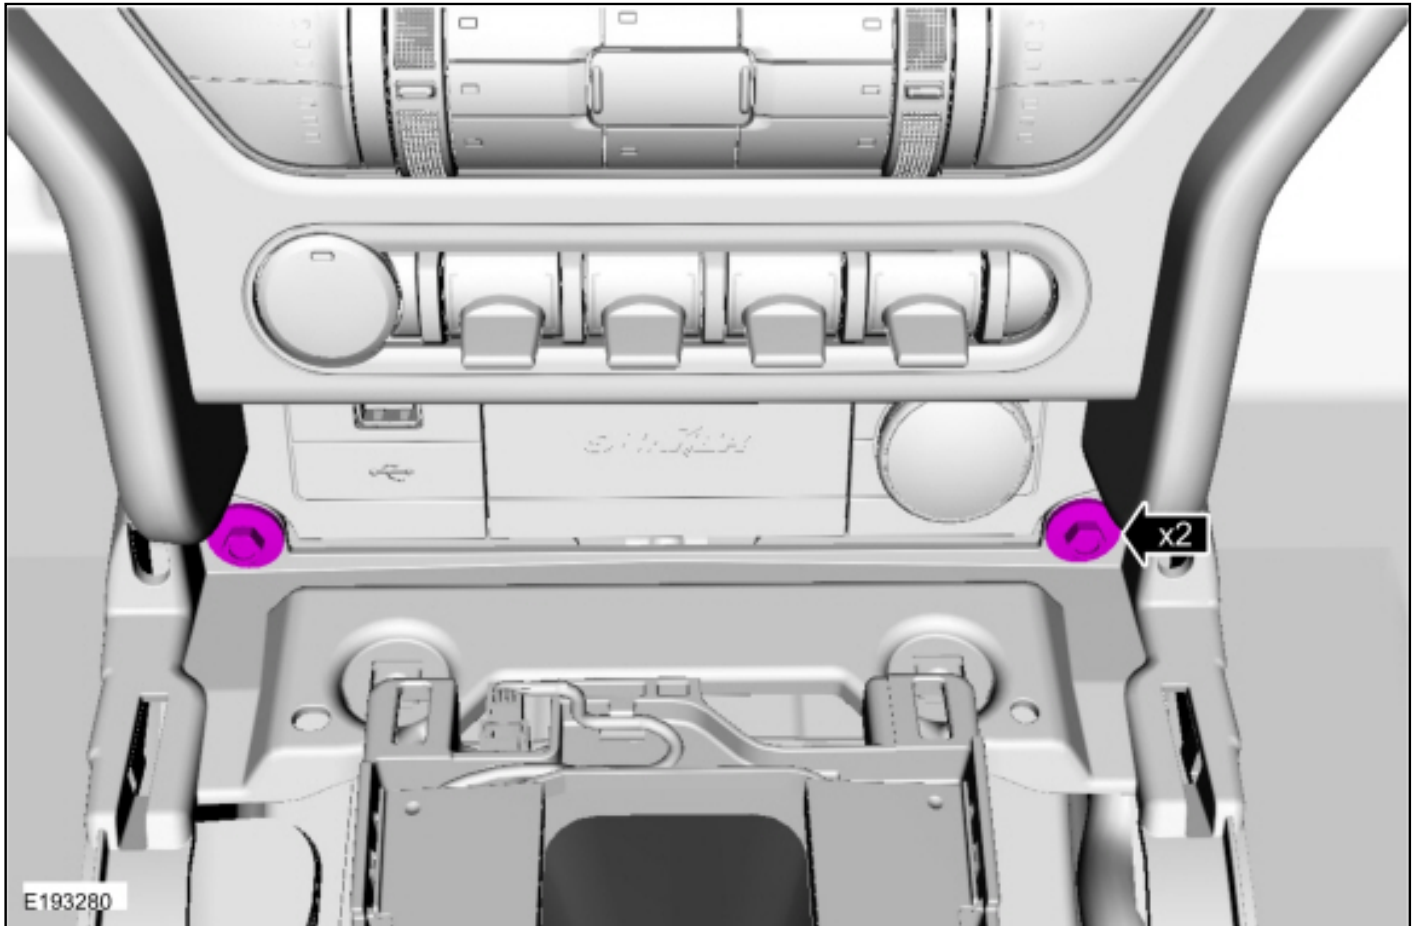

All vehicles

18. Remove the floor console.
 1. On both sides.
Release the clips.
 2. Remove the screws and position aside the parking brake boot from the console.
 3. Disconnect the electrical connectors.

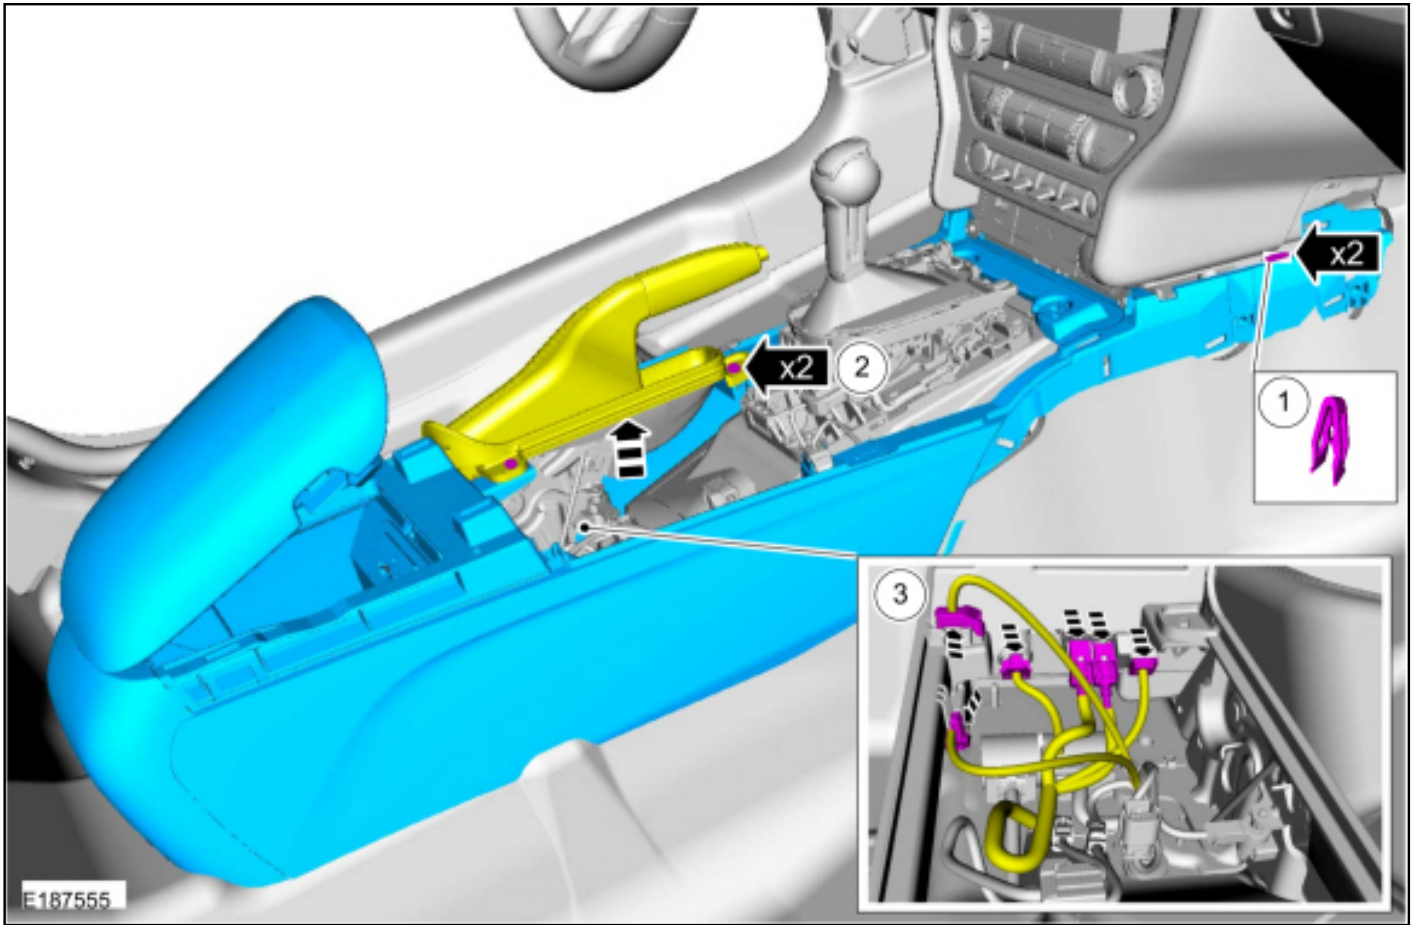

Installation

1. To install, reverse the removal procedure.