


## Driver Airbag

### Removal


**⚠️ WARNING:** The following procedure prescribes critical repair steps required for correct restraint system operation during a crash. Follow all notes and steps carefully. Failure to follow step instructions may result in incorrect operation of the restraint system and increases the risk of serious personal injury or death in a crash.

1. Depower the SRS.  
Refer to: [Supplemental Restraint System \(SRS\) Depowering](#) (501-20B Supplemental Restraint System, General Procedures).
2. At the side of the steering wheel cover, locate the hole and insert a 3 mm (0.125 inch) Allen key.

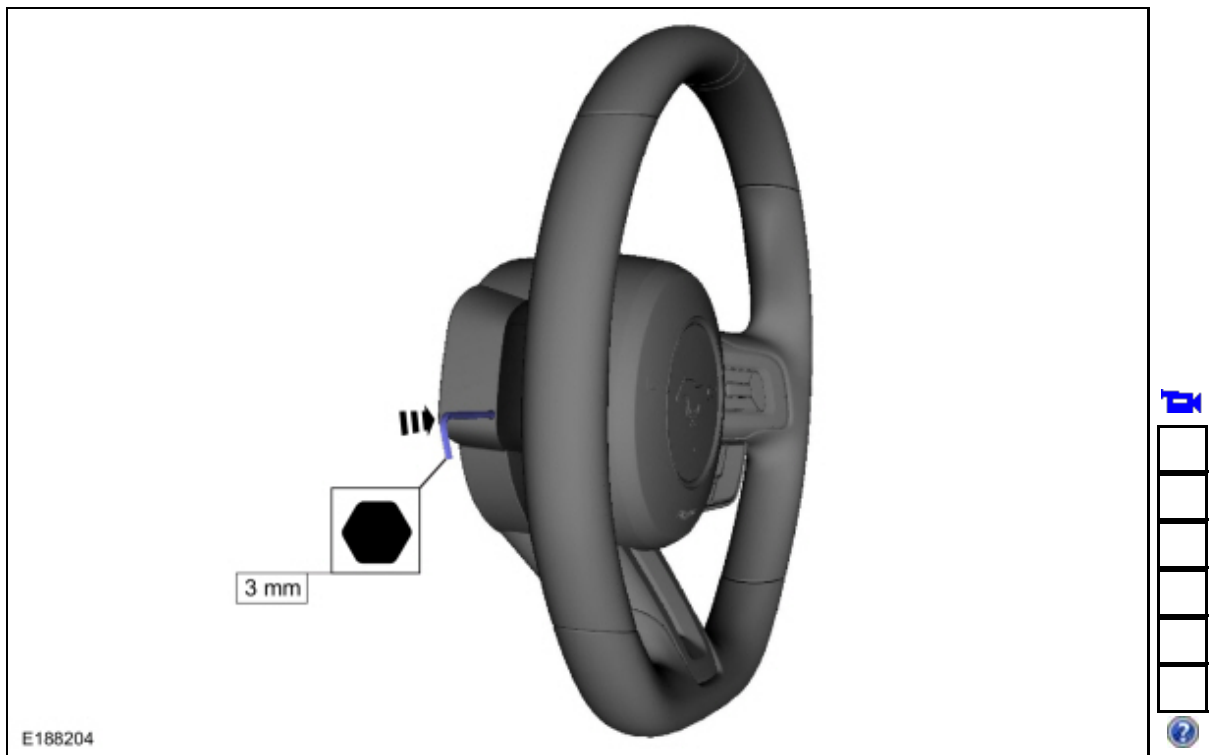


3. **NOTE:** The driver airbag has been removed for clarity.


Angle the inserted end of the Allen key up and toward the front of the vehicle for ideal contact with the spring clip.

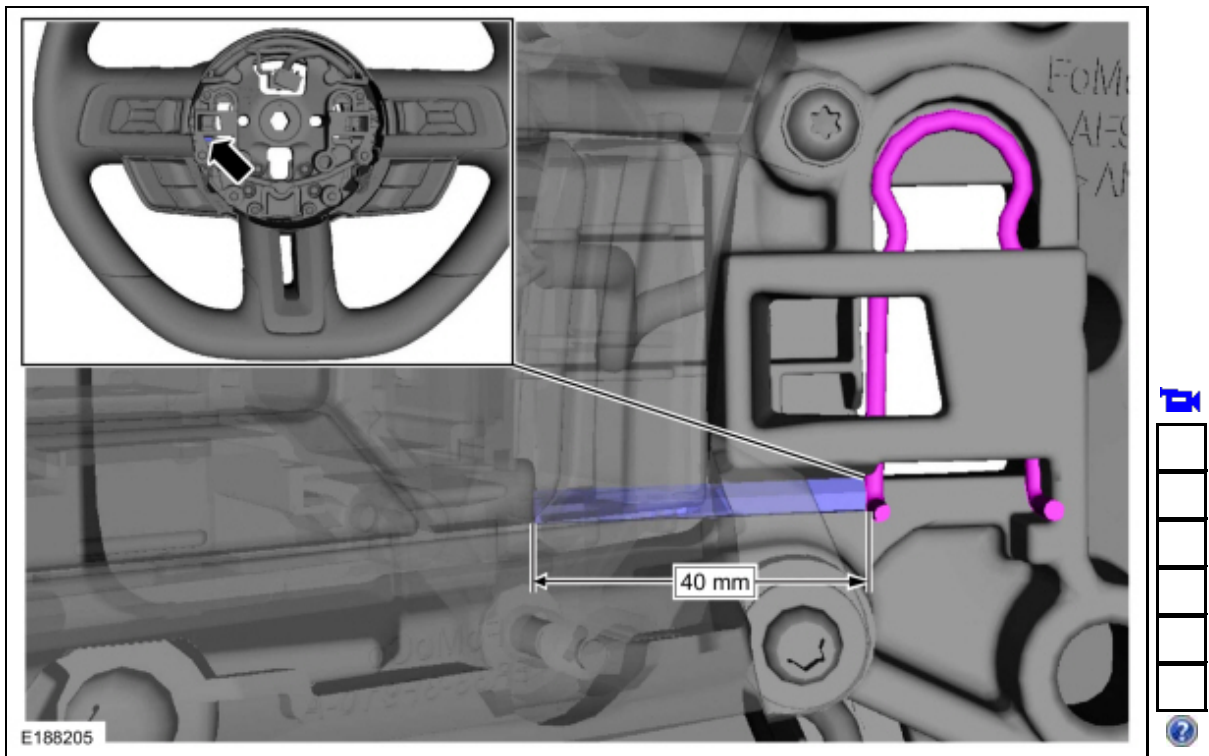

4.
  1. Push in on the steering wheel spring clip to release the driver airbag retainer.
  2. Pull the driver airbag out and separate it from the steering wheel.

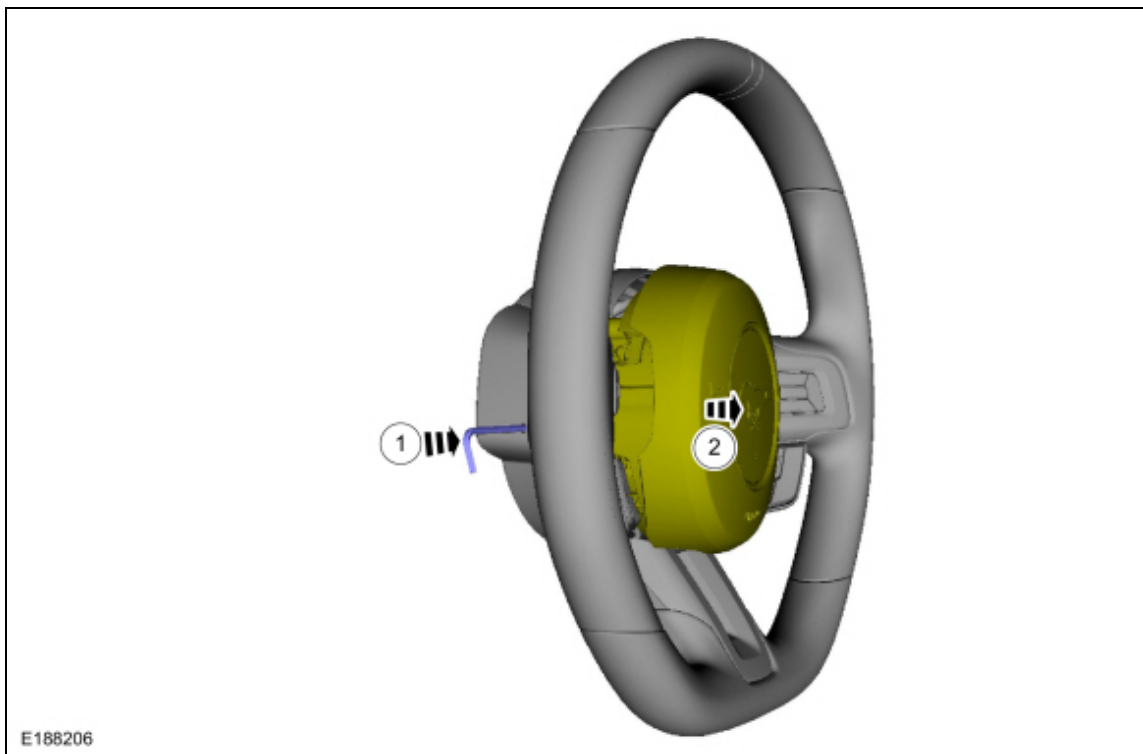


5. At the side of the steering wheel cover, locate the hole and insert a 3 mm (0.125 inch) Allen key.

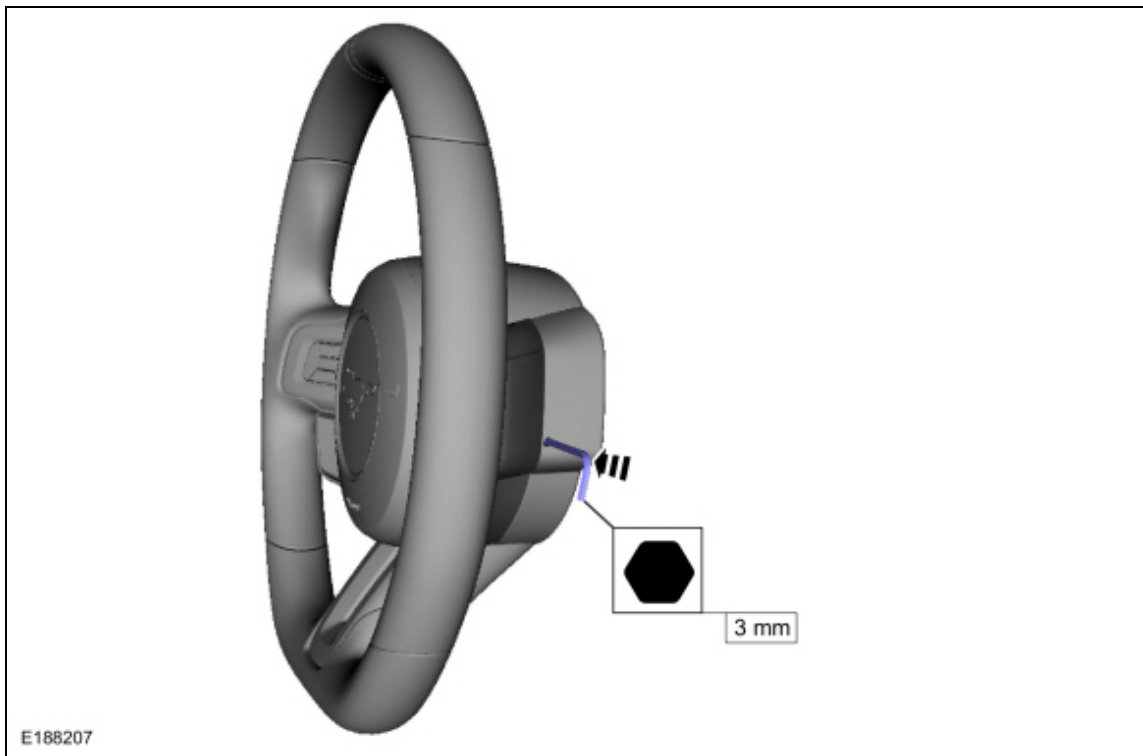


6. **NOTE:** The driver airbag has been removed for clarity.


Angle the inserted end of the Allen key up and toward the front of the vehicle for ideal contact with the spring clip.

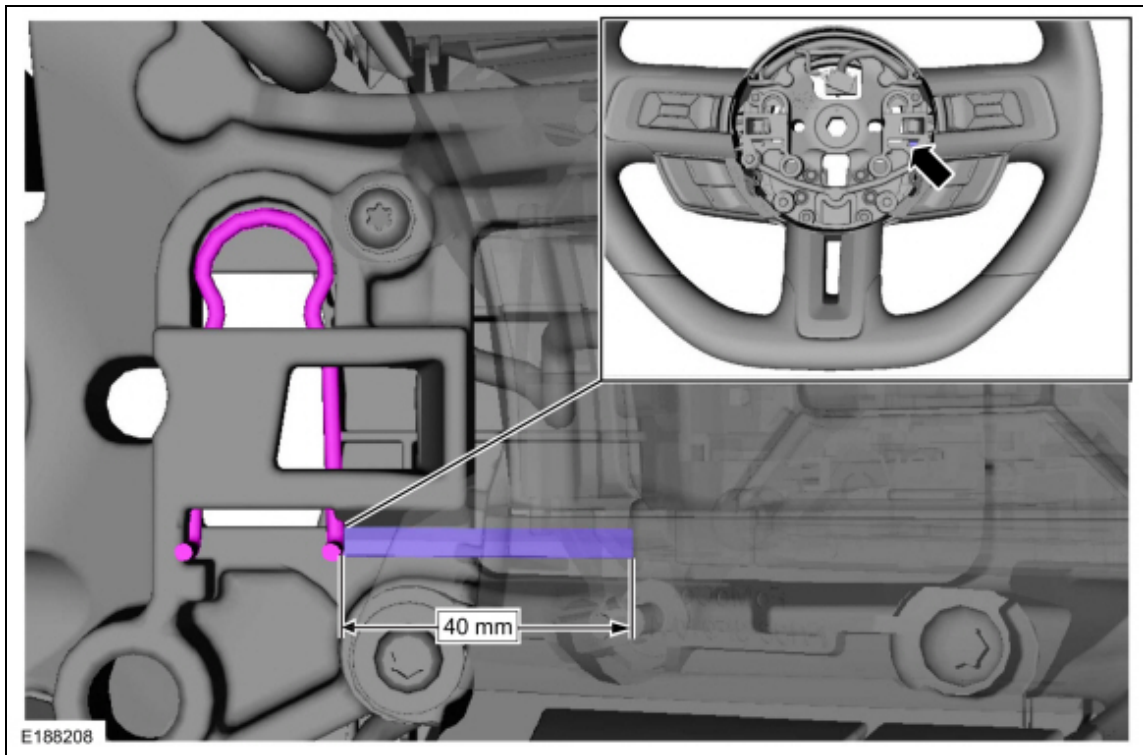

7.
  1. Push in on the steering wheel spring clip to release the driver airbag retainer.
  2. Pull the driver airbag out and separate it from the steering wheel.

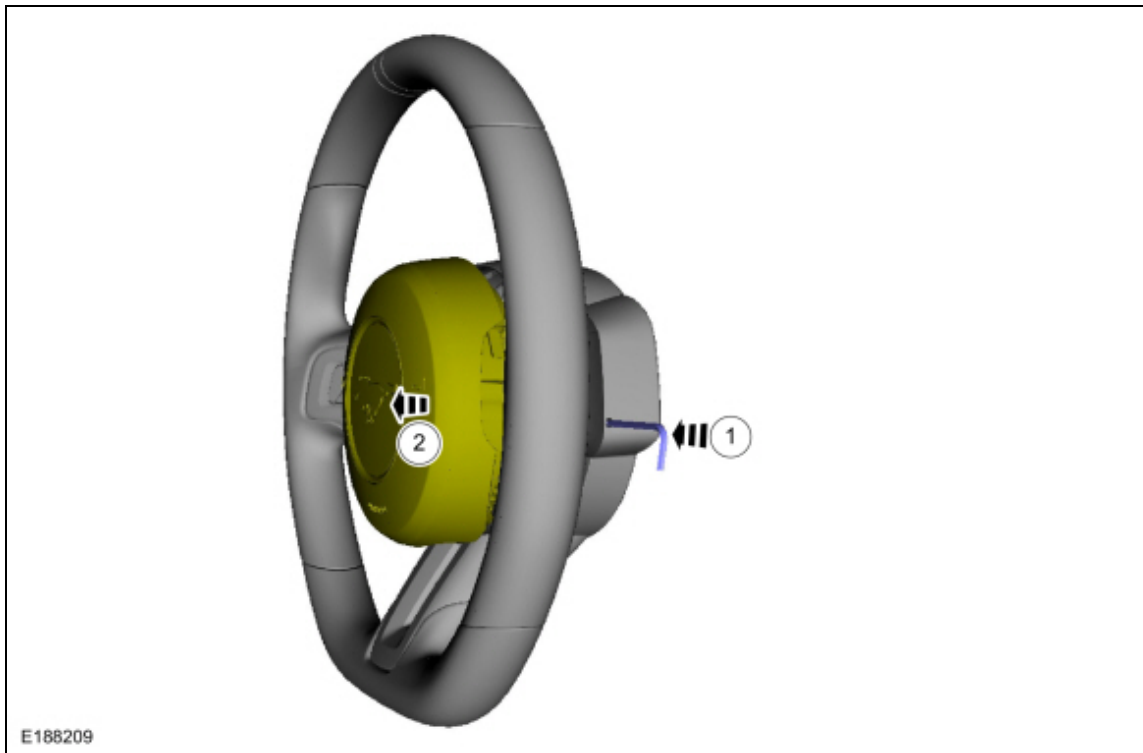


8. Disconnect the 3 driver airbag electrical connectors.

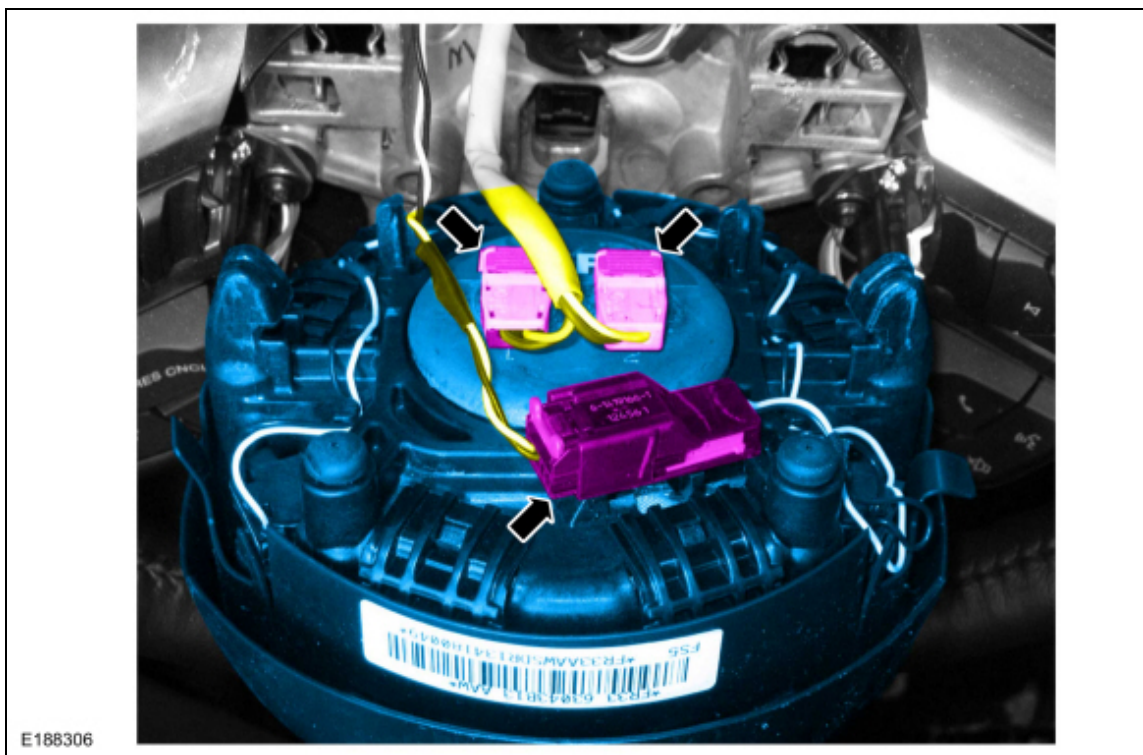


## Installation

**⚠️ WARNING:** Incorrect repair techniques or actions can cause an accidental Supplemental Restraint System deployment. Make sure the restraint system is depowered before reconnecting the component. Refer to the Supplemental Restraint System depowering General Procedure in section 501-20B. Failure to precisely follow depowering instructions could result in serious personal injury from an accidental deployment.

1. Connect the 3 driver airbag electrical connectors.

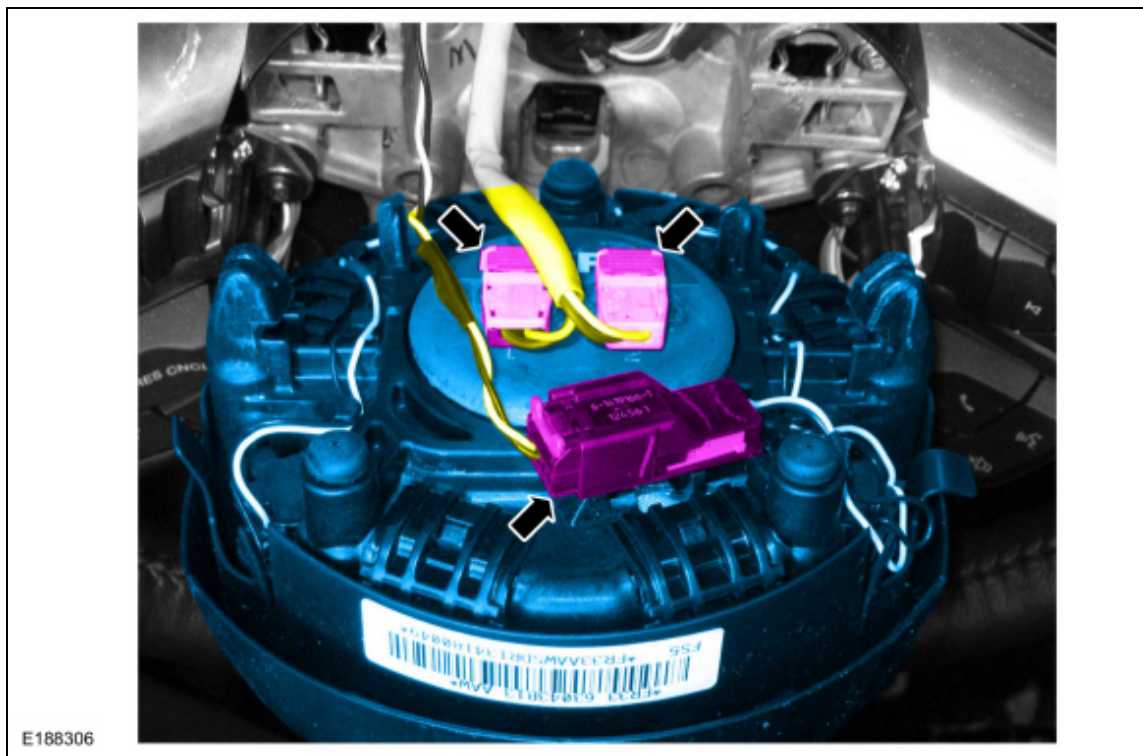

2. Align the driver airbag to the steering wheel and push in, engaging the driver airbag retainers to the spring clips.

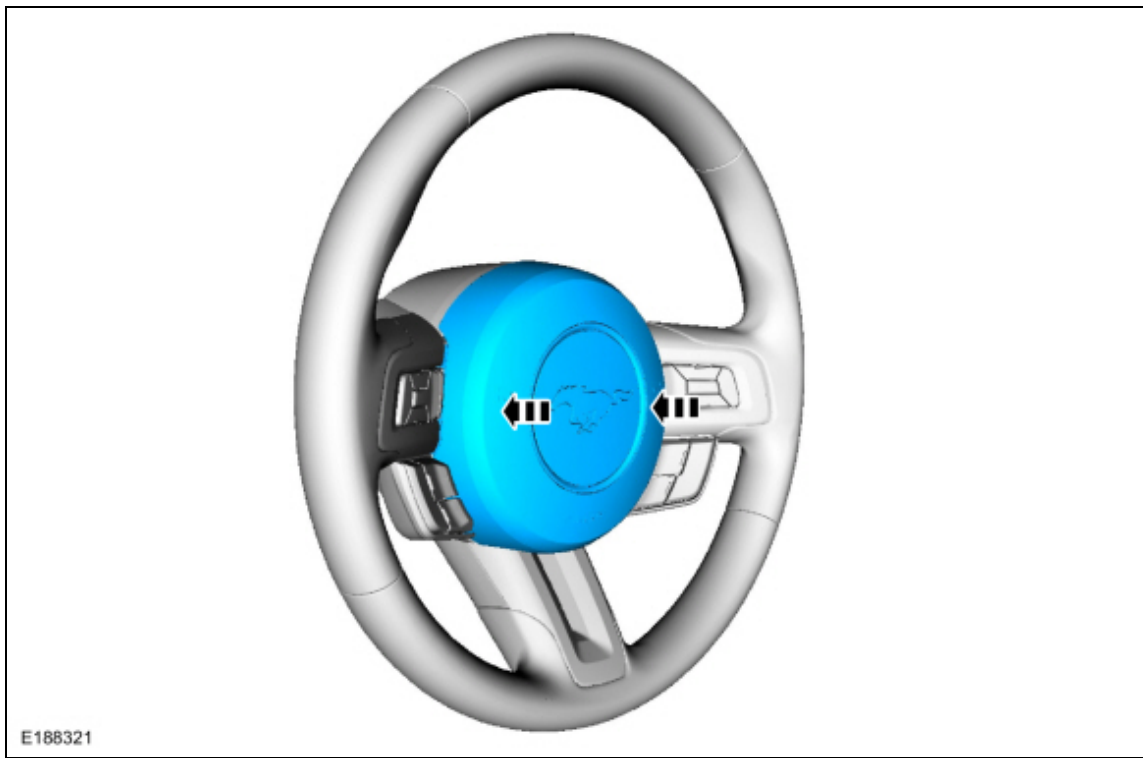

3. Repower the SRS.

Refer to: [Supplemental Restraint System \(SRS\) Repowering](#) (501-20B Supplemental Restraint System, General Procedures).