


Ford Mustang (2016) – fuse box diagram – (EU version)

(<http://www.autogenius.info/en/ford-mustang-2016-fuse-box-diagram-eu-version/>)

Posted on 6 September 2015 (<http://www.autogenius.info/en/ford-mustang-2016-fuse-box-diagram-eu-version/>) by admin (<http://www.autogenius.info/en/author/admin/>)

Ford Mustang (2016) – fuse box diagram – (EU version)

Power distribution box

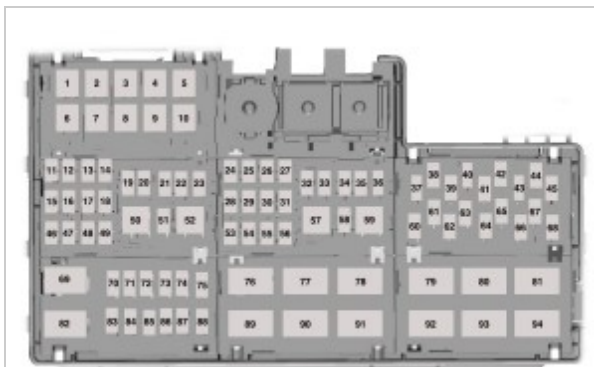

01774963

(<http://www.autogenius.info/wp-content/uploads/2015/09/Ford-mustang-2015-fuse-box-power-distribution-box.jpg>)

Ford Mustang (2015) – fuse box – power distribution box

Fuse or relay number	Ampere rating [A]	Protected components
1	—	Not used
2	—	Not used
3	—	Not used


4	—	Not used
5	50*	Automatic brake system pump
6	50*	Body control module
7	60*	Body control module
8	50*	Body control module
9	40*	Rear window defroster
10	40*	Blower motor
11	30**	Left-hand front window
12	30**	Driver seat
13	30**	Passenger seat
14	30**	Climate-controlled seat module
15	20**	Convertible top motor
16	—	Not used
17	20**	Convertible top motor
18	—	Not used
19	20***	Steering column lock relay
20	10***	Brake on-off switch
21	20***	Horn
22	10***	Powertrain control module relay
23	10***	Air conditioning clutch
24	30**	Voltage quality module
25	—	Not used
26	25**	Windshield wiper motor
27	—	Not used
28	30**	Automatic brake system valve
29	30**	Electronic fan 1

30	30**	Starter motor solenoid
31	40**	Electronic fan 3
32	10***	Latch relay coil
33	20***	Left-hand high-intensity discharge headlamps
34	—	Not used
35	20***	Right-hand high-intensity discharge headlamps
36	10***	Alt sense
37	—	Not used
38	20***	Vehicle power 1
39	—	Not used
40	20***	Vehicle power 2
41	15***	Fuel injectors
42	15***	Vehicle power 3
43	—	Not used
44	15***	Vehicle power 4
45	—	Not used
46	—	Not used
47	—	Not used
48	—	Not used
49	30**	Fuel pump
50	—	Steering column lock relay
51	—	Not used
52	—	Horn relay
53	20**	Cigar lighter
54	20**	Auxiliary power point
55	25**	Electronic fan 2

56	—	Not used
57	—	Air conditioning clutch relay
58	—	Not used
59	—	Not used
60	5***	Powertrain control module
61	—	Not used
62	5***	Anti-lock brakes run-start switch
63	—	Not used
64	5***	Electronic power assist steering
65	—	Not used
66	5***	Rear view camera. Air conditioning compressor relay coils
67	—	Not used
68	10***	Headlamp leveling switch
69	—	Auxiliary power point relay
70	10***	Heated exterior mirrors
71	—	Not used
72	5***	Rain sensor module
73	—	Not used
74	5***	Mass air flow sensor
75	—	Not used
76	—	Rear window defroster
77	—	Electronic cooling fan 2
78	—	Left-hand high-intensity discharge headlamp relay
79	—	Right-hand high-intensity-discharge headlamp relay
80	—	Windshield wiper relay

81	—	Starter motor solenoid
82	—	Powertrain control module relay
83	—	Not used
84	—	Not used
85	—	Not used
86	—	Not used
87	—	Not used
88	—	Not used
89	—	Electronic fan 1 relay
90	—	Not used
91	—	Electronic fan 3 relay
92	—	Blower motor relay
93	—	Not used
94	—	Fuel pump relay
*J-case fuses. **M-case fuses. ***Micro fuses.		

Passenger compartment fuse panel

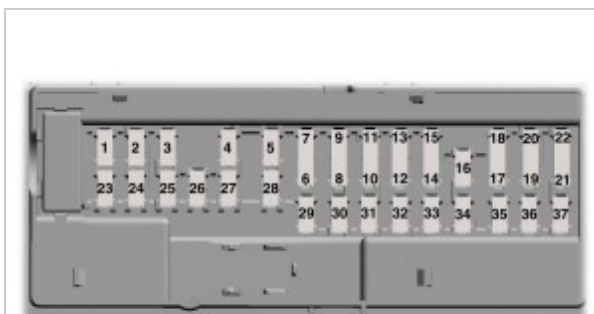

E174904

(<http://www.autogenius.info/wp-content/uploads/2015/09/Ford-mustang-2015-fuse-box-passenger-compartment.jpg>)

Ford Mustang (2015) – fuse box – passenger compartment
--

Fuse or relay number	Ampere rating [A]	Protected components
1	10	Demand lamps
2	7,5	Power mirror memory module
3	20	Driver console unlock
4	5	Not used
5	20	Subwoofer amplifier
6	10	Not used (spare)
7	10	Not used (spare)
8	10	Not used (spare)
9	10	Not used (spare)
10	5	Not used (spare)
11	5	Not used (spare)
12	7,5	Climate control module
13	7,5	Gateway module. Steering column control module. Instrument cluster
14	10	Not used (spare)
15	10	Gateway module
16	15	Decklid release
17	5	Battery backed sounder
18	5	Intrusion sensor module
19	7,5	Passenger airbag deactivation indicator
20	7,5	Not used (spare)
21	5	In-vehicle temperature and humidity sensor
22	5	Occupant classification system module

23	10	Switches. Power windows. Rear-view mirror
24	20	Central lock unlock
25	30	Not used (spare)
26	30	Right-hand front-window motor
27	30	Amplifier
28	20	Auxiliary body module
29	30	Left-hand rear-window power
30	30	Right-hand rear-window power
31	15	Not used (spare)
32	10	Remote keyless entry. Multi-function display. SYNC. Global positioning system module. Gauges
33	20	Audio head unit
34	30	Run-start bus
35	5	Restraints control module
36	15	Auxiliary body module
37	15	Power distribution box run-start bus
—	30	Not used (spare)

WARNING: Terminal and harness assignments for individual connectors will vary depending on vehicle equipment level, model, and market.