


BODY CONTROL MODULE (BCM)

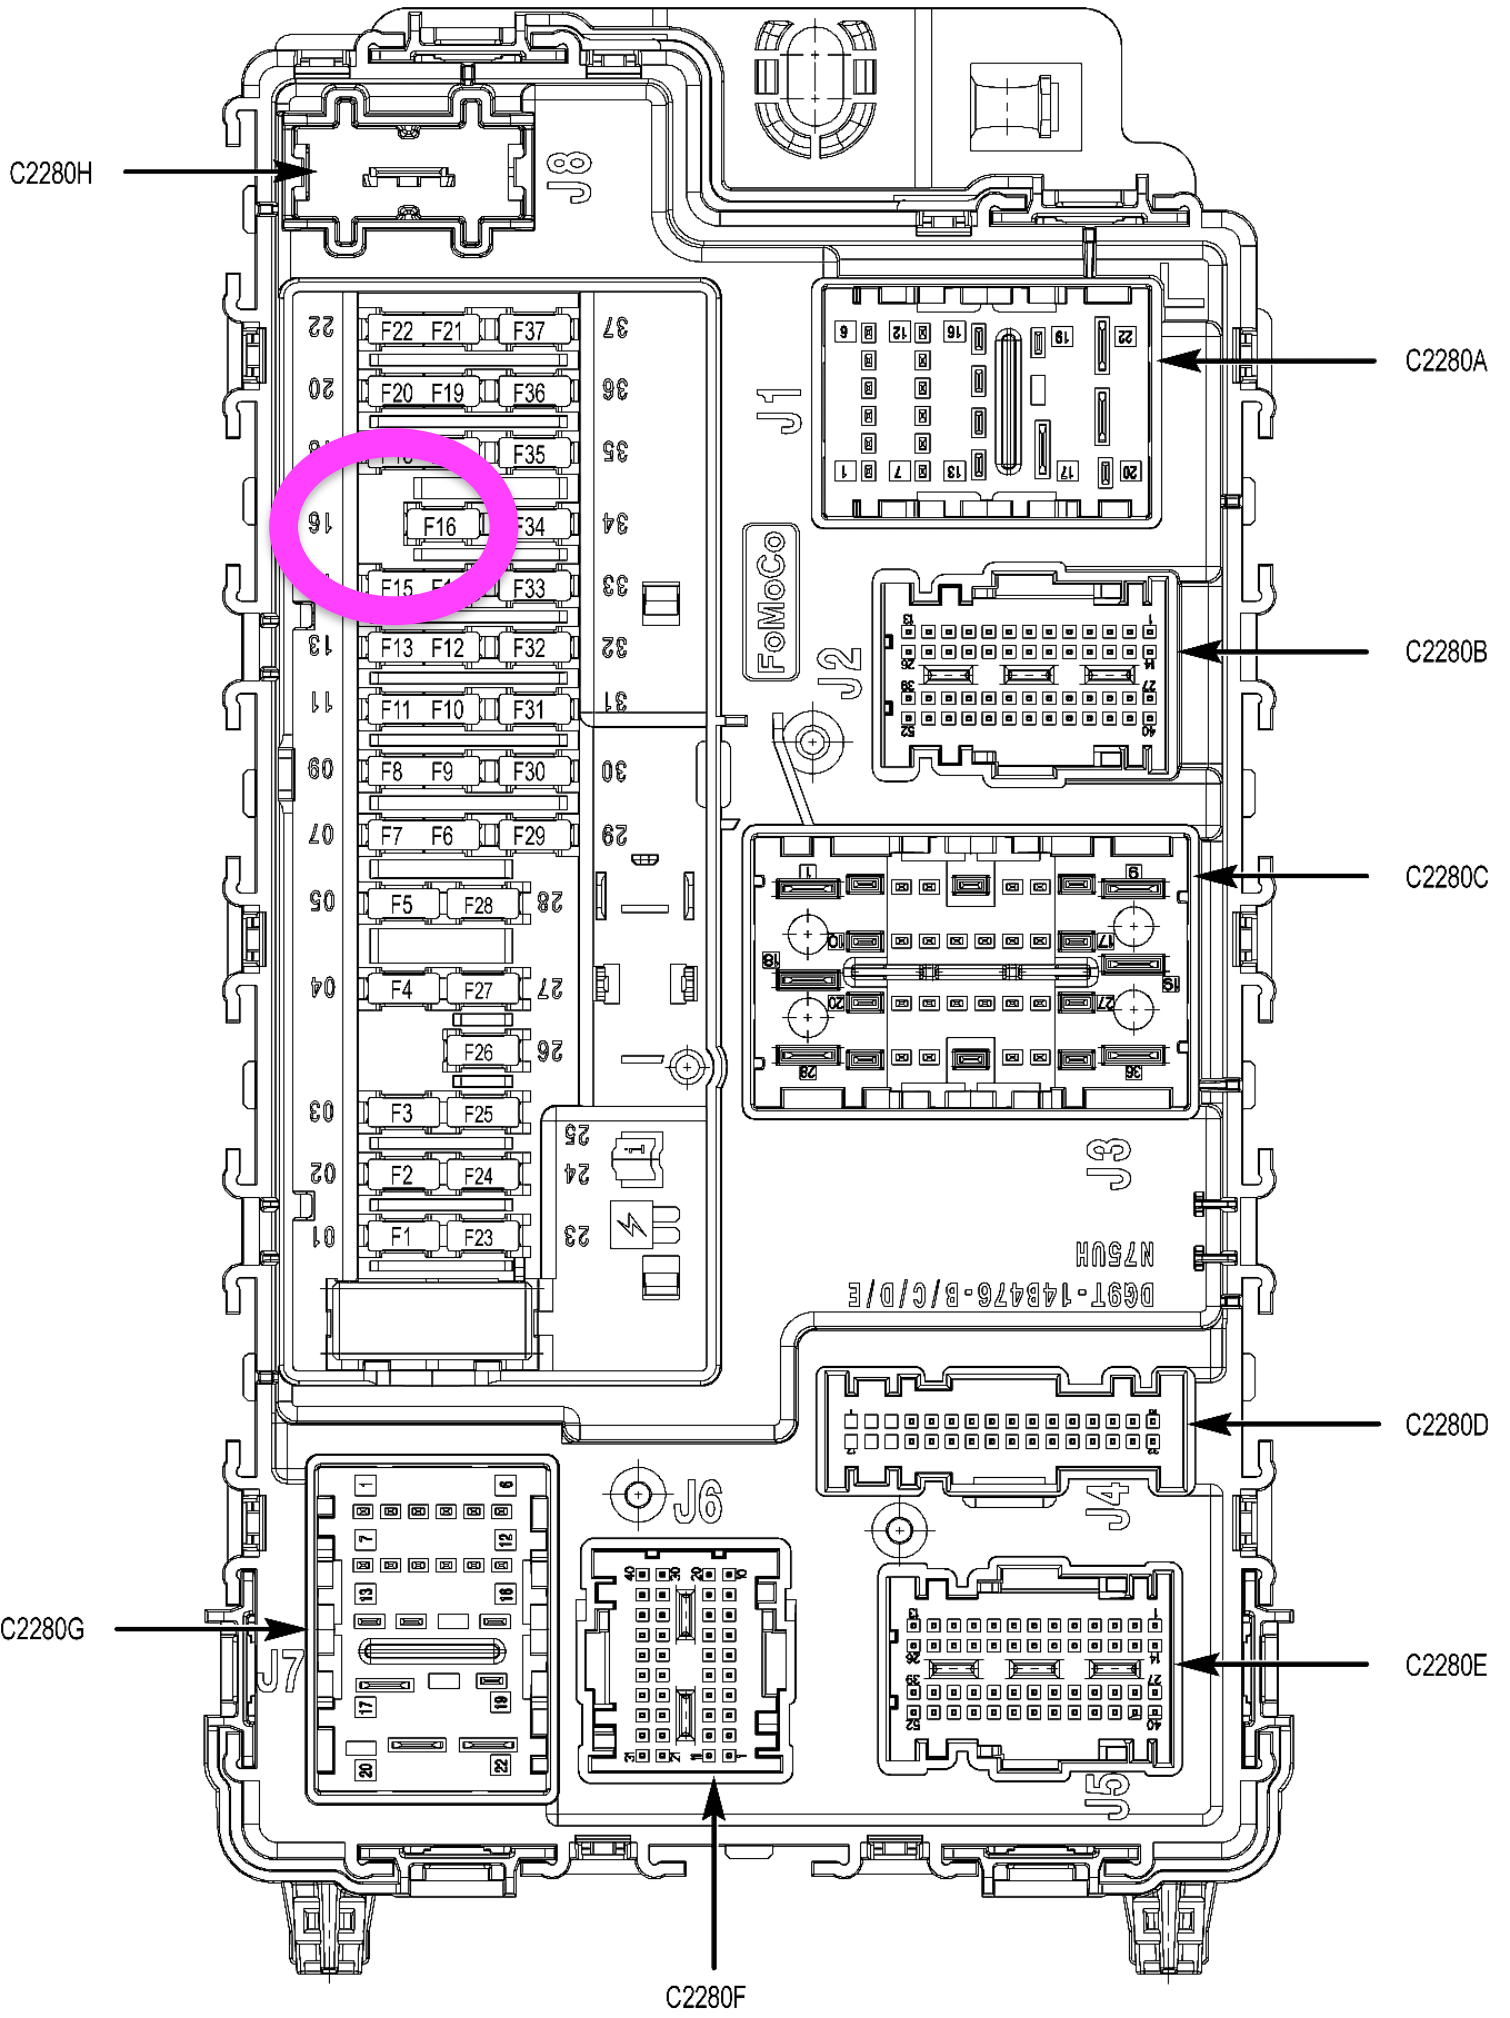

C2280H

C2280A

C2280B

C2280C

C2280D

C2280E

C2280G

C2280F

BODY CONTROL MODULE (BCM)

Fuse	Amps	Circuits protected
F1	10	Battery saver relay, Center console lock assembly, luggage compartment, Glove compartment lamp, Overhead console, Vanity mirror lamps
F2	7.5	Power folding mirror relay, Driver Seat Module (DSM)
F3	20	Driver unlock relay, Center console lock assembly, Front door latch motor LH
F4	5	Not used
F5	20	Subwoofer amplifier rear
F6	10	Not used
F7	10	Not used
F8	10	Security horn relay, Anti-theft horn
F9	10	Not used
F10	5	Not used
F11	5	Not used
F12	7.5	Front Controls Interface Module (FCIM)
F13	7.5	Gateway module, Instrument Panel Cluster (IPC), Steering Column Module (SCCM)
F14	10	Not used
F15	10	Gateway module
F16	15	Luggage relay, Luggage compartment lid latch
F17	5	Not used
F18	5	Not used
F19	7.5	Passenger Airbag Deactivation (PAD) indicator
F20	7.5	Not used
F21	5	In-vehicle temperature sensor

Fuse	Amps	Circuits protected
F22	5	Occupant Classification System Module (OCSM)
F23	10	Power window motors (Rear), Passenger door window regulator motor, Front door lock switch RH, Passenger door window control switch, Master window control switch, Driver door window regulator switch, Front door lock switch LH, Auto-dimming interior mirror
F24	20	Central lock and unlock relays, Front door latch release motor RH, Front doors latch release motors
F25	30	Not used
F26	30	Passenger Door Module (PDM), Passenger door window regulator motor
F27	30	Audio Digital Signal Processing (DSP) module
F28	20	Body control module B
F29	30	Power window motor left rear
F30	30	Power window motor right rear
F31	15	Not used
F32	10	Global Positioning System Module (GPSM), Accessory Protocol Interface Module (APIM), Front Control/Display Interface Module (FCDIM), Information control module, Radio Transceiver Module (RTM)
F33	20	Audio Control Module (ACM)
F34	30	Run/start relay, BCM F19, F20, F21, F22, F35, F36, F37
F35	5	Restraints Control Module (RCM)
F36	15	Body control module B
F37	15	Battery Junction Box (BJB) F60, F62, F64, F66, F68