



## Front Door Alignment

Base Part Number: [20124](#)

### Inspection

**NOTE:** Coupe shown, convertible similar.

1. Check front door to body dimensions.  
Refer to: [Body and Frame](#) (501-26 Body Repairs - Vehicle Specific Information and Tolerance Checks, Description and Operation).

### Adjustment

#### All alignments

**NOTE:** Removal steps in this procedure may contain installation details.

**NOTE:** LH side shown, RH side similar.


1. Remove the bolts and the striker assembly.  
*Torque:* 18 lb.ft (25 Nm)




### Front door in and out, up and down alignment

2. Open the door.



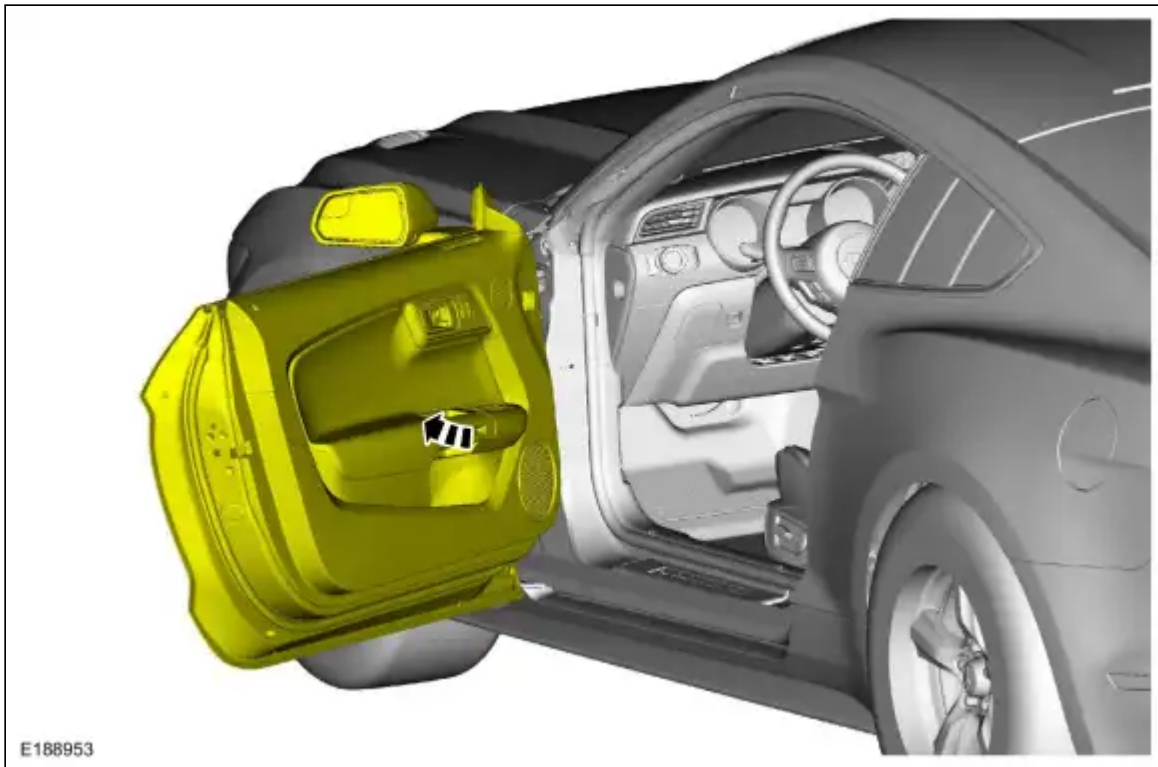



3. Loosen the nuts to permit movement of the door.  
Loosen:  
: 2 turn(s)

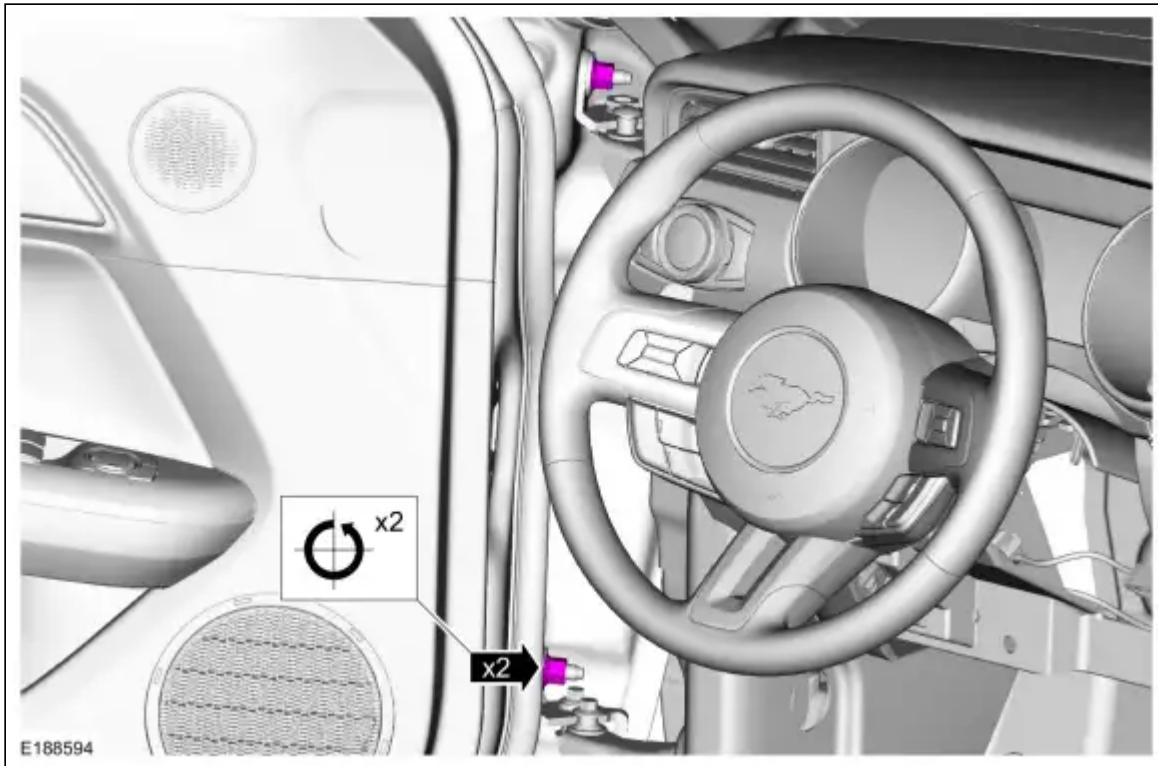


4. Adjust the door to specification.

 Refer to: [Body and Frame](#) (501-26 Body Repairs - Vehicle Specific Information and Tolerance Checks, Description and Operation).



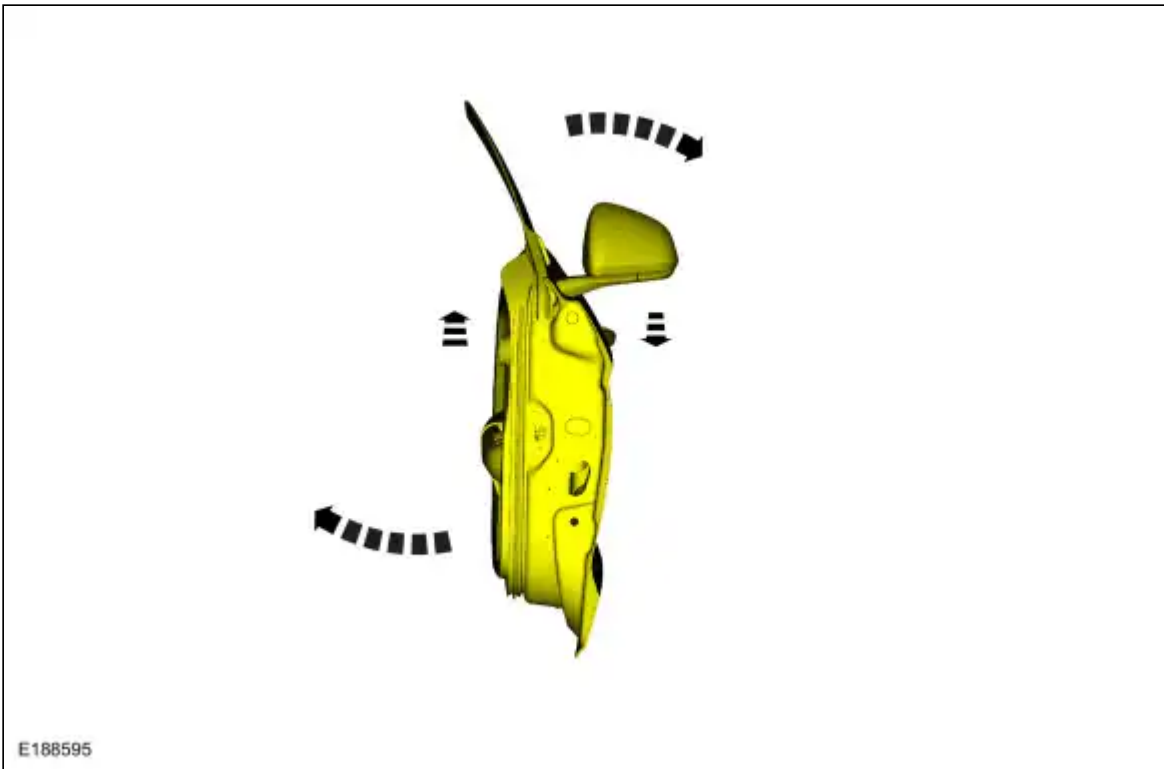


5. Tighten the nuts.  
*Torque: 22 lb.ft (30 Nm)*

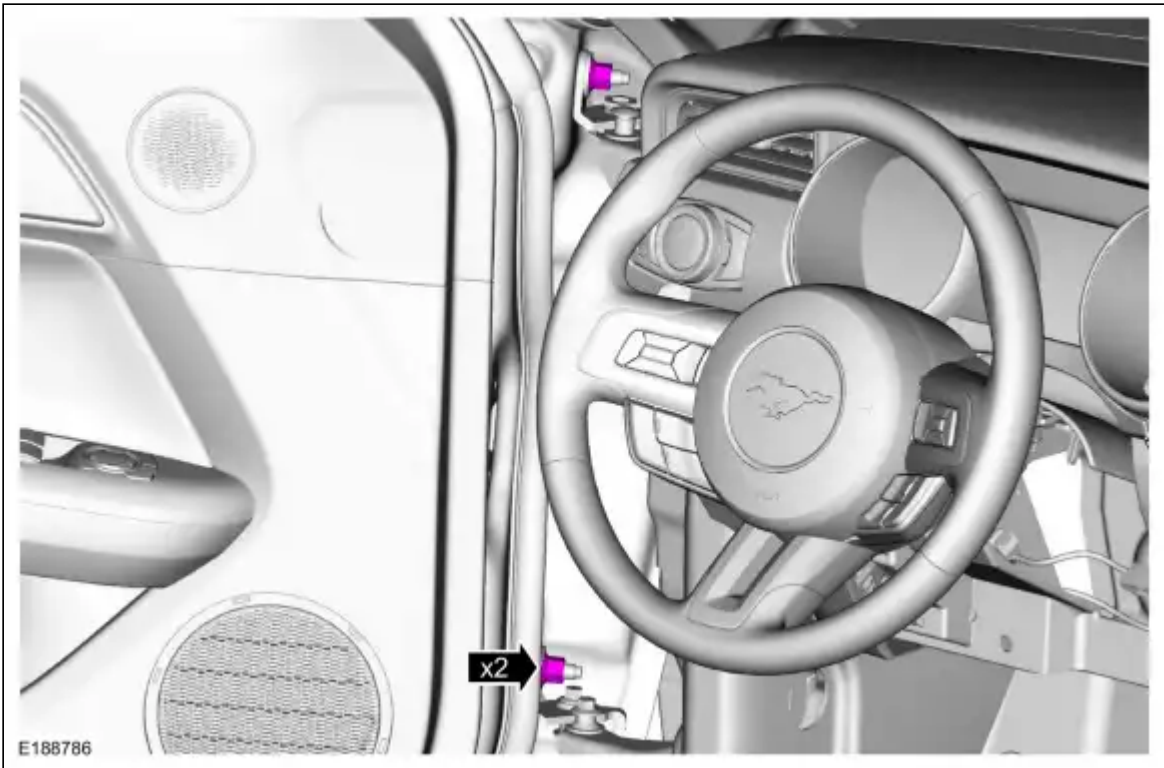


**Front door fore, aft and tilt alignment**

6. Open the door.




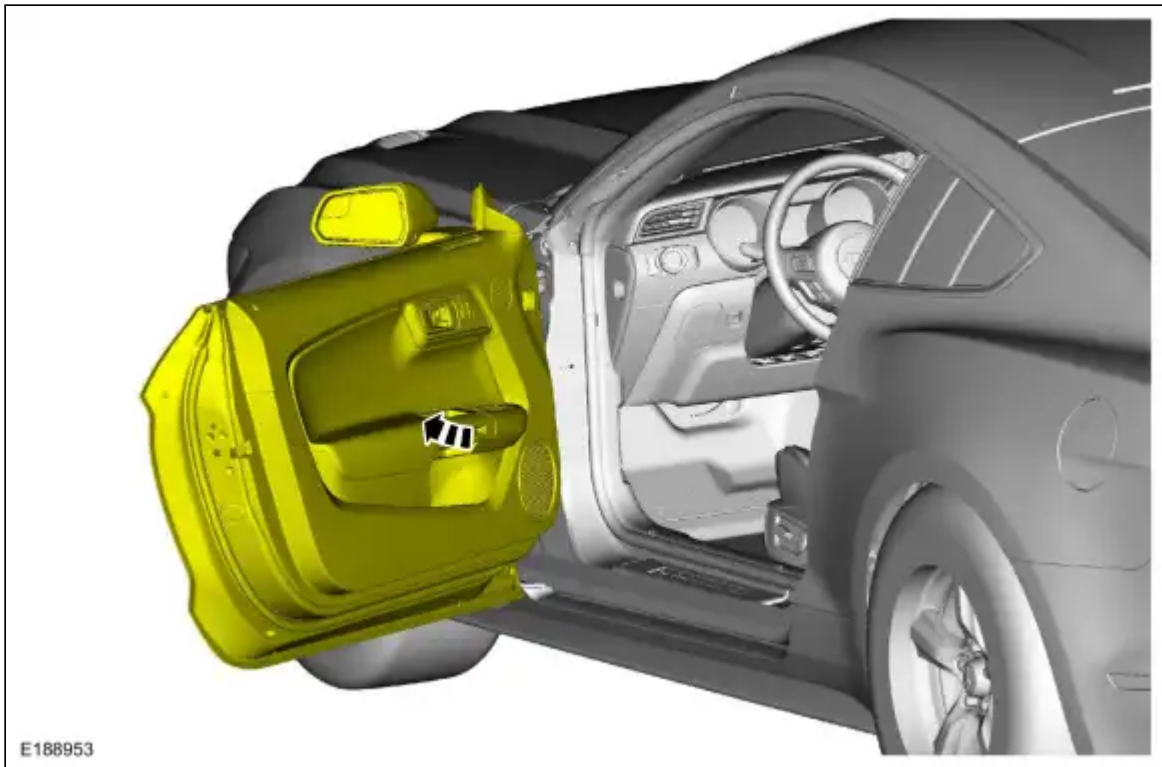


7. Loosen the bolts to permit movement of the door.  
Loosen:  
: 2 turn(s)

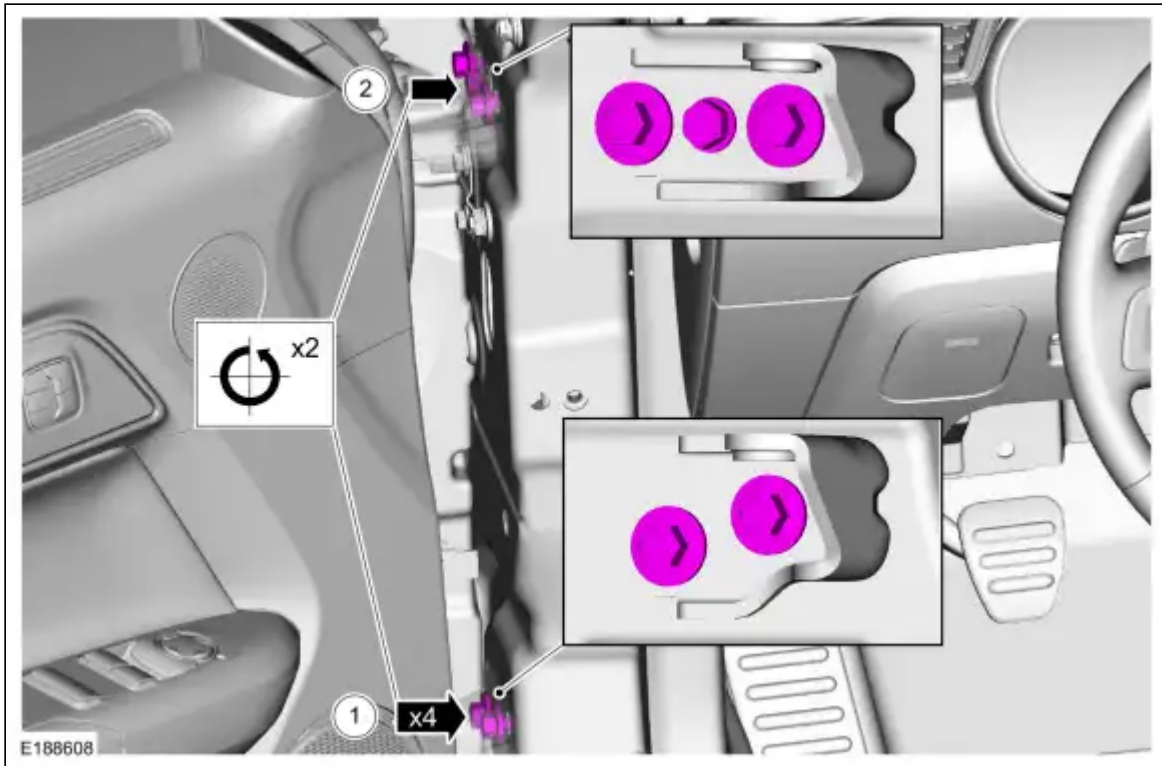


 8. Carefully close the door.




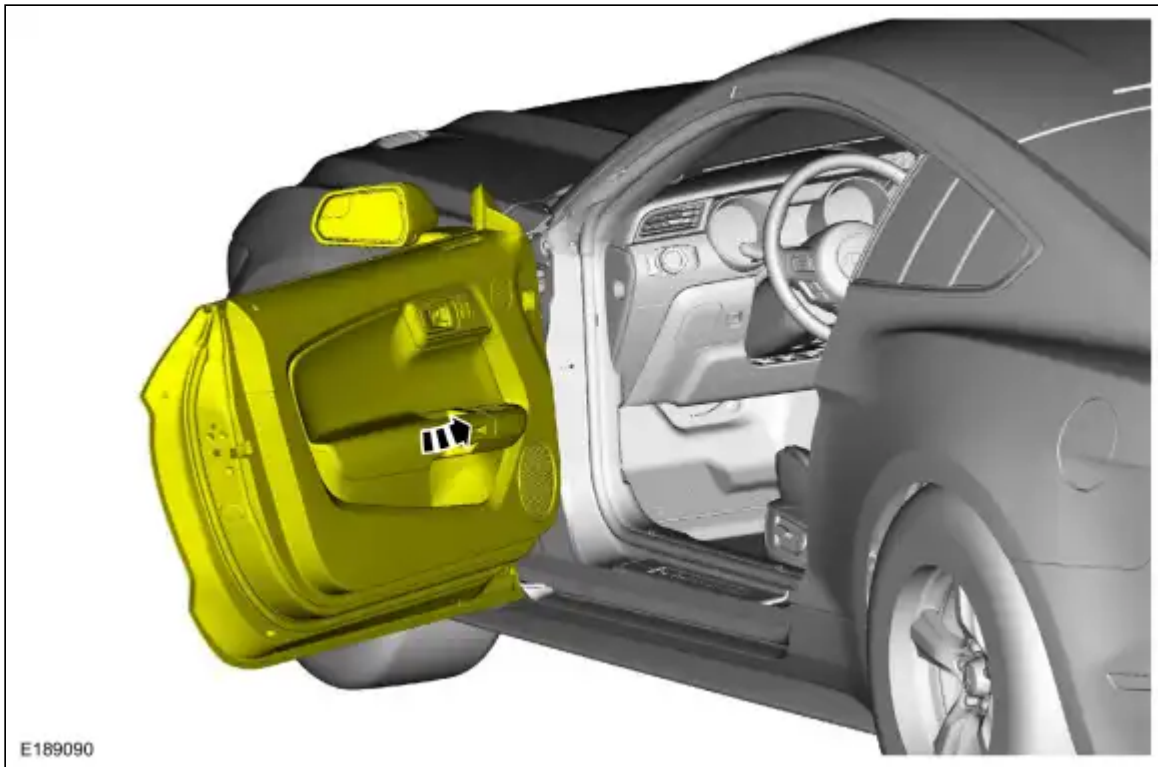


E189090

 


9. Adjust the door to specification.  
Refer to: [Body and Frame](#) (501-26 Body Repairs - Vehicle Specific Information and Tolerance Checks, Description and Operation).


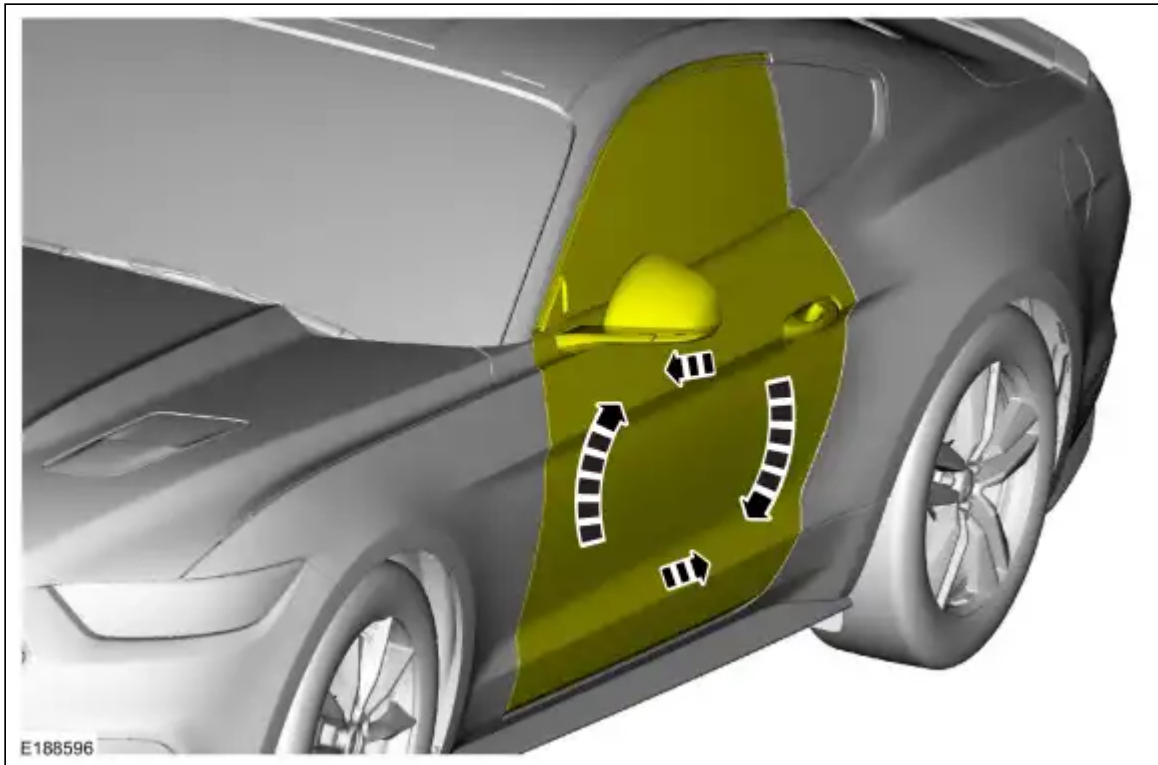


E188596

 

  10. Carefully open the door.




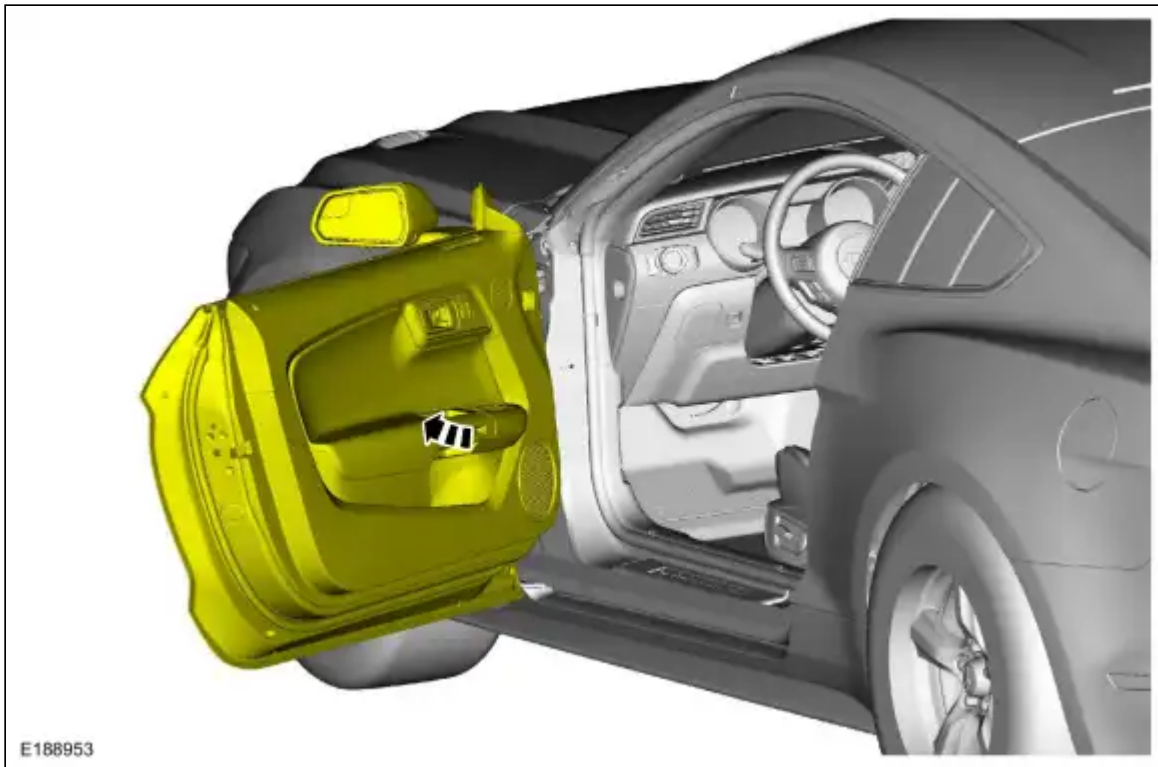

11. Tighten the bolts.

*Torque:*

- 1.: 22 lb.ft (30 Nm)
- 2.: 89 lb.in (10 Nm)

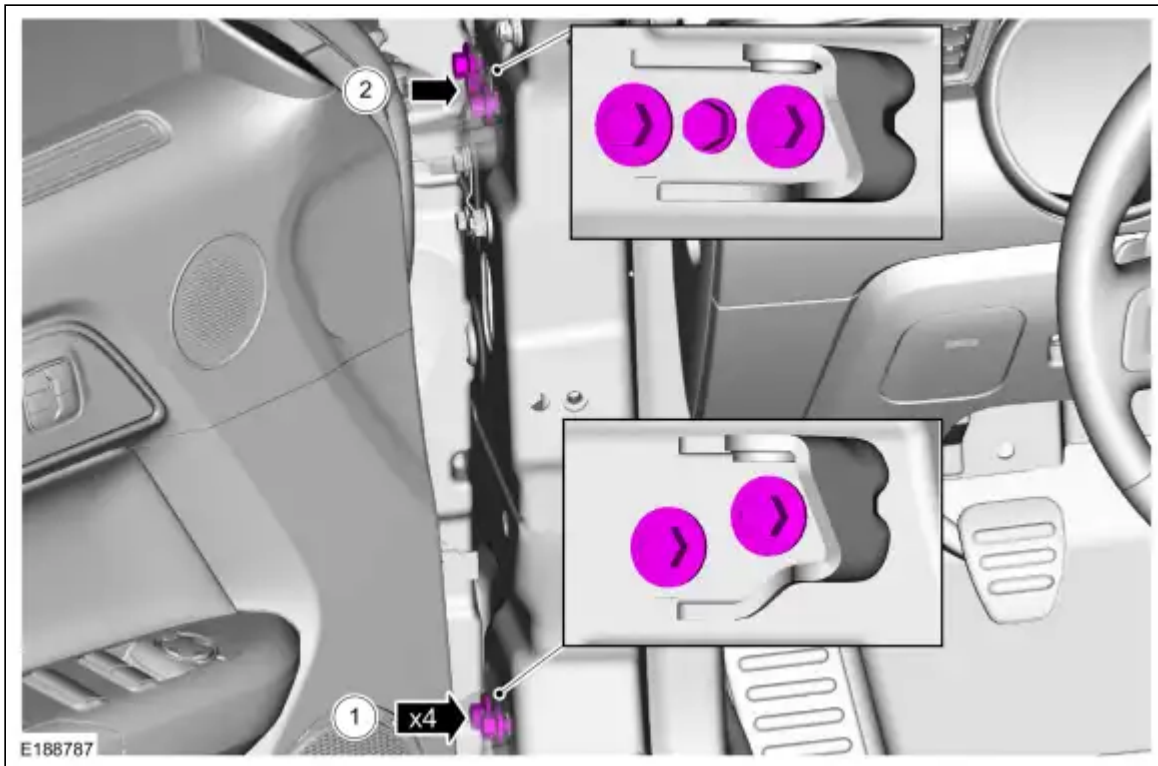


**All alignments**

12. Loosen the bolts to permit movement of the striker assembly.



Loosen:

 - : 2 turn(s)





 13. Check body to front door dimensions.  
Refer to: [Body and Frame](#) (501-26 Body Repairs - Vehicle Specific Information and Tolerance Checks, Description and Operation).

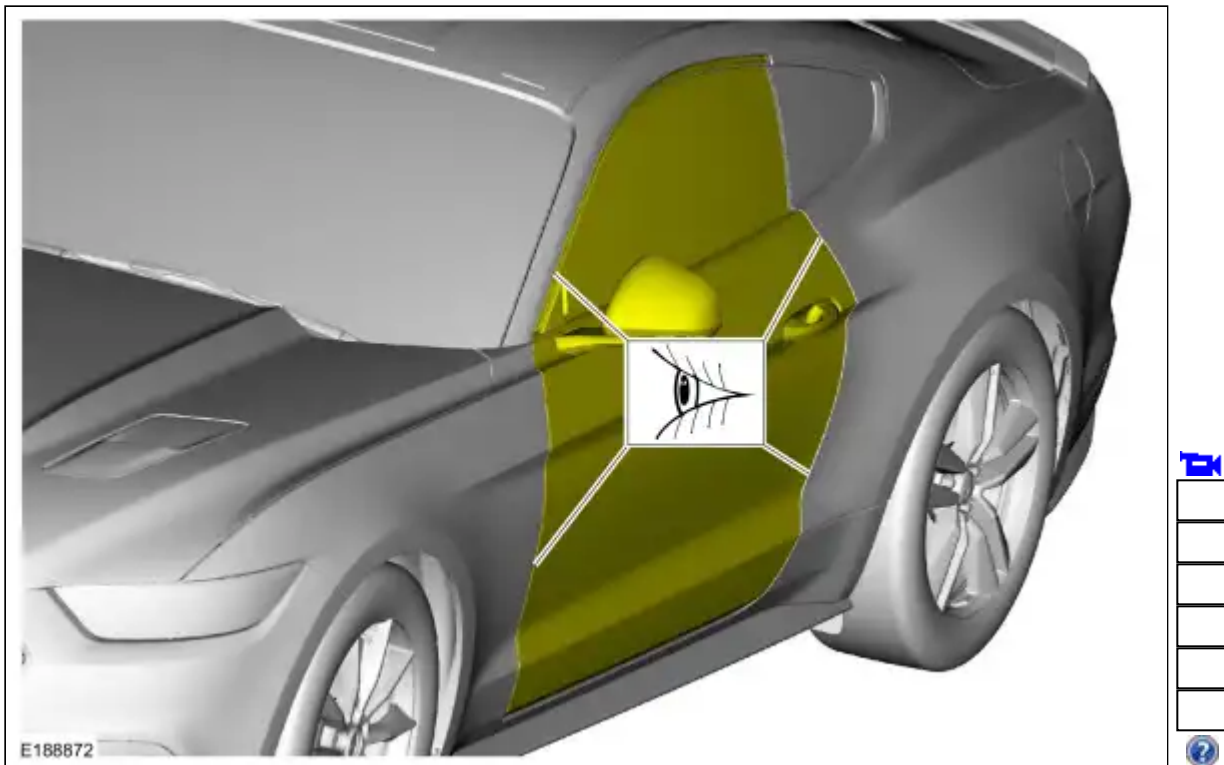

14. Check the front door glass alignment.  
Refer to: [Door Window Glass Adjustment - Convertible](#) (501-11 Glass, Frames and Mechanisms, General Procedures).  
Refer to: [Door Window Glass Adjustment - Coupe](#) (501-11 Glass, Frames and Mechanisms, General Procedures).
15. Install the removed components.

