

Engine Oil Pressure (EOP) Sensor

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: [Jacking and Lifting - Overview](#) (100-02 Jacking and Lifting, Description and Operation).
2.
 - Disconnect the EOP sensor electrical connector.
 - **NOTE:** If the oil pressure sensor is to be reused, apply thread sealant.


Remove the EOP sensor.

Material : Thread Sealant with PTFE / TA-24-B (WSK-M2G350-A2)

Torque :

Stage 1: 124 lb.in (14 Nm)

Stage 2: 180°

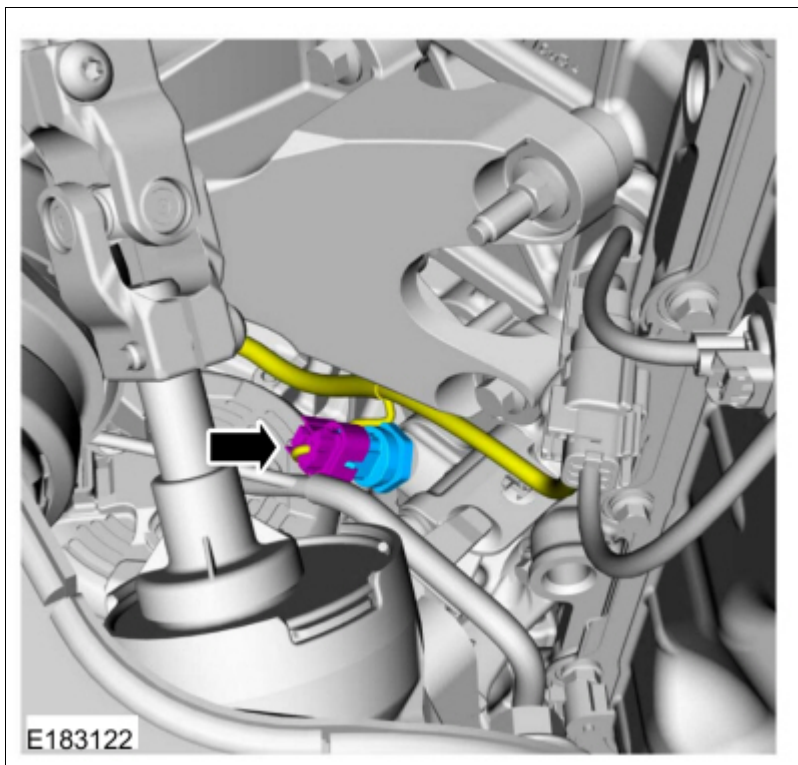

Installation

1. To install, reverse the removal procedure.

Copyright © Ford Motor Company
