

M-12029-M52 HI-ENERGY ENGINE IGNITION COILS


NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

PRIOR TO INSTALLATION READ THESE INSTRUCTION COMPETELY For questions, Call the FORD PERFORMANCE Techline 1-800-367-3788

Please visit https://www.performanceparts.ford.com for warranty information



New

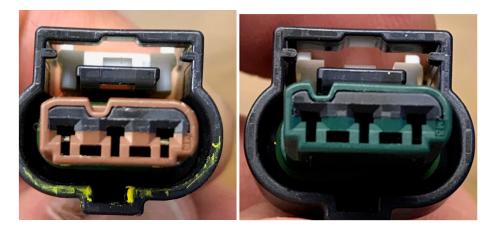

- 1) Notice the difference between the 5.0L connector on left and the new supplied connector on right.
- 2) Using a small screwdriver, unsnap the colored shell from the connector. It will click upward one position then move screwdriver to side and click upward for removal exposing the terminals.




Ford Factory Shop Manual purchase options www.motorcraftservice.com

Techline 1-800-367-378




M-12029-M52 HI-ENERGY ENGINE IGNITION COILS

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

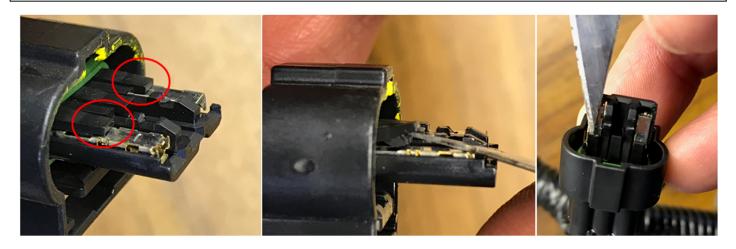

- 3) Locate the two locking tabs that retain the terminals in the connector.
- 4) **CAUTION Look** at the connector mark the Wires Right and Left. These positions are required in the New Connectory Shell. **Look** at to observe the side (orienation) engage the locking tab.
- 5) Gently push the two wires up into the connector, then GENTLY pry up the locking tab to release the terminal. As you GENTLY pry up the locking tab, start pulling the wire out of the connector. Repeat for the second wire.

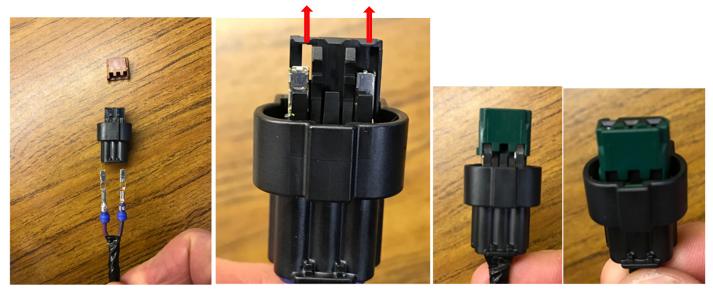

- 6) **CAUTION** Do not change the orientation or location of the two terminals/wires. They should go into the new connector just as they came out.
- 7) Push terminals/wires up into new connector, making sure rubber seals also go into connector and ensure the terminals click into final position. Install new green shell over c onnector end and snap down into final position.

Ford Factory Shop Manual purchase options <u>www.motorcraftservice.com</u>

Techline 1-800-367-378