

206-03 Front Disc Brake
Removal and Installation

2016 Mustang
Procedure revision date: 11/2/2015

Brake Pads - Vehicles With: SVT Performance Package

Base Part Number: 2001


Removal

NOTICE: Do not pry in the caliper sight hole to retract the pistons as this can damage the pistons and boots.


NOTICE: Do not allow the brake caliper to hang from the brake hose or damage to the hose can occur.

NOTE: Removal steps in this procedure may contain installation details.


1. Remove the wheel and tire.
Refer to: [Wheel and Tire](#) (204-04A Wheels and Tires, Removal and Installation).
2. Remove and discard the upper brake caliper bolt.
Torque: 136 lb.ft (185 Nm)

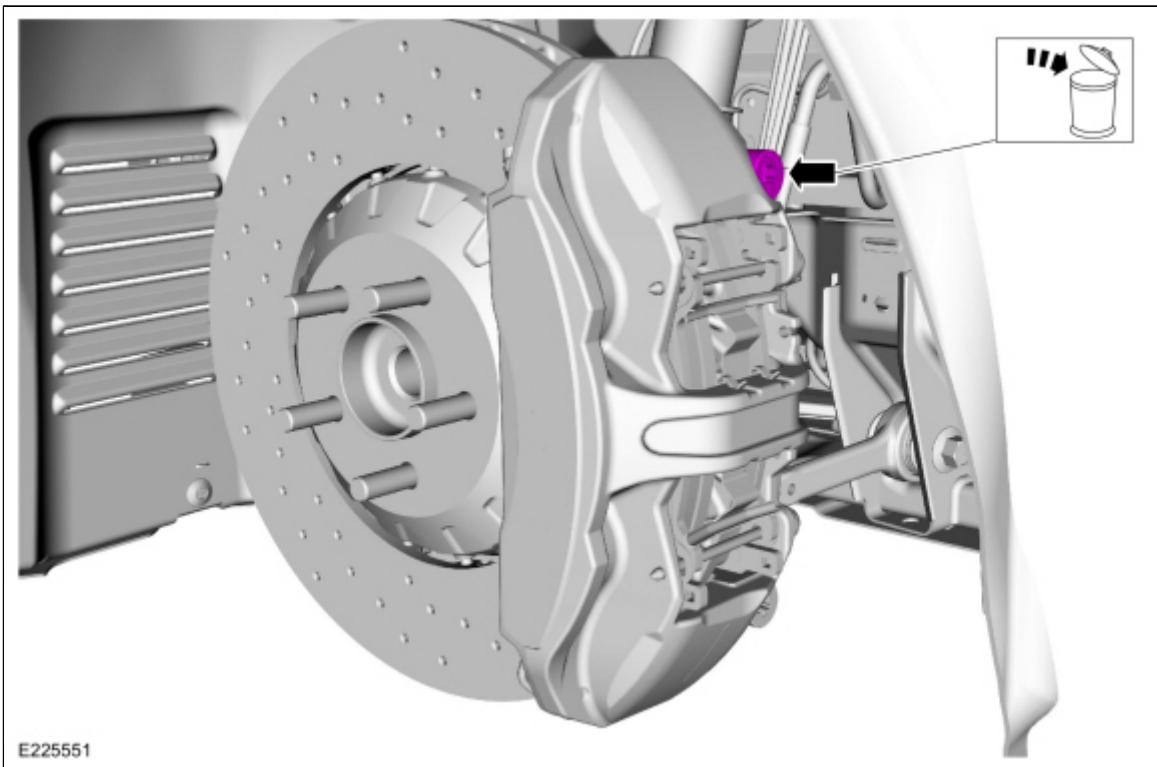


3. Loosely install a larger bolt (M14 x 180) turning 7 full turns.

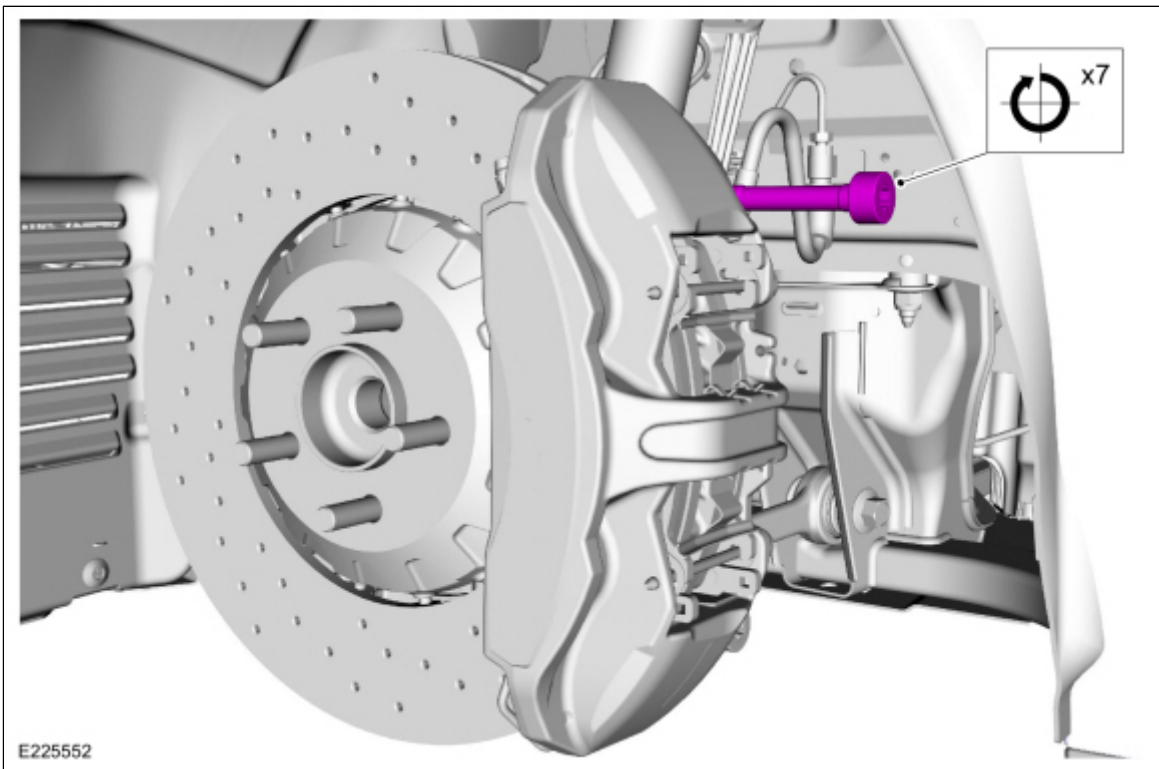

4. Remove and discard the lower brake caliper bolt.
Torque: 136 lb.ft (185 Nm)

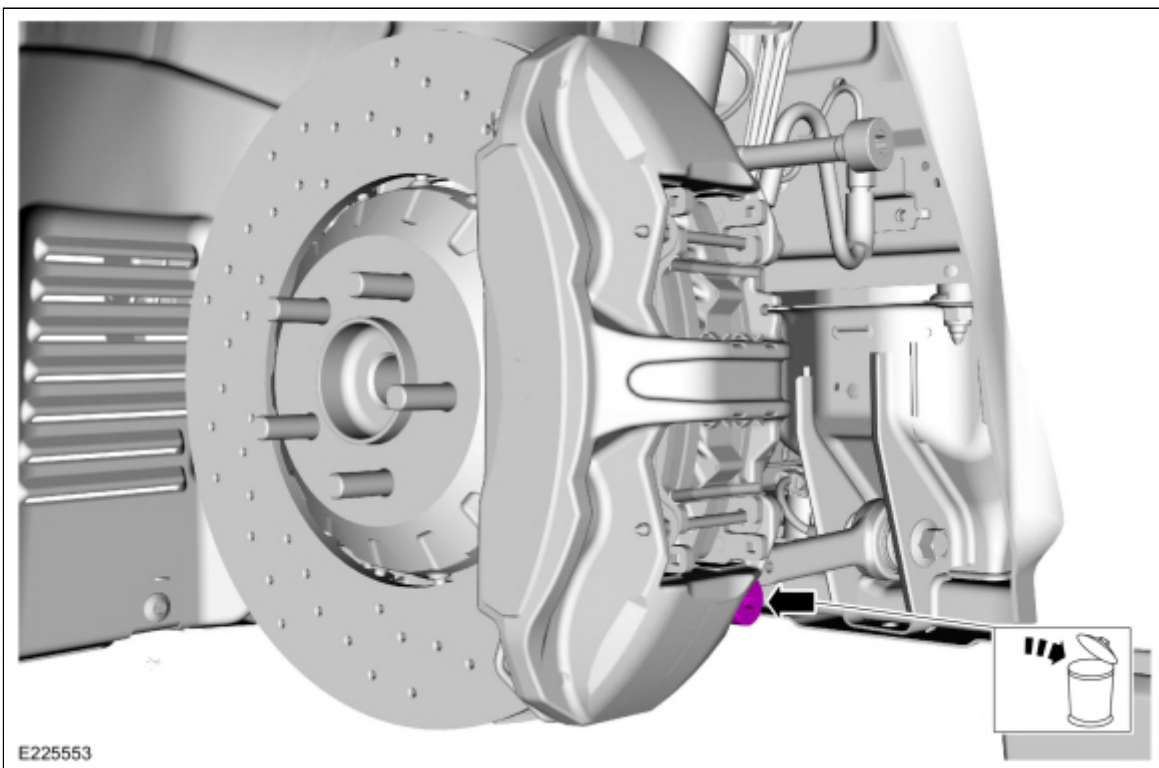

5. Loosely install a larger bolt (M14 x 180) turning 7 full turns.

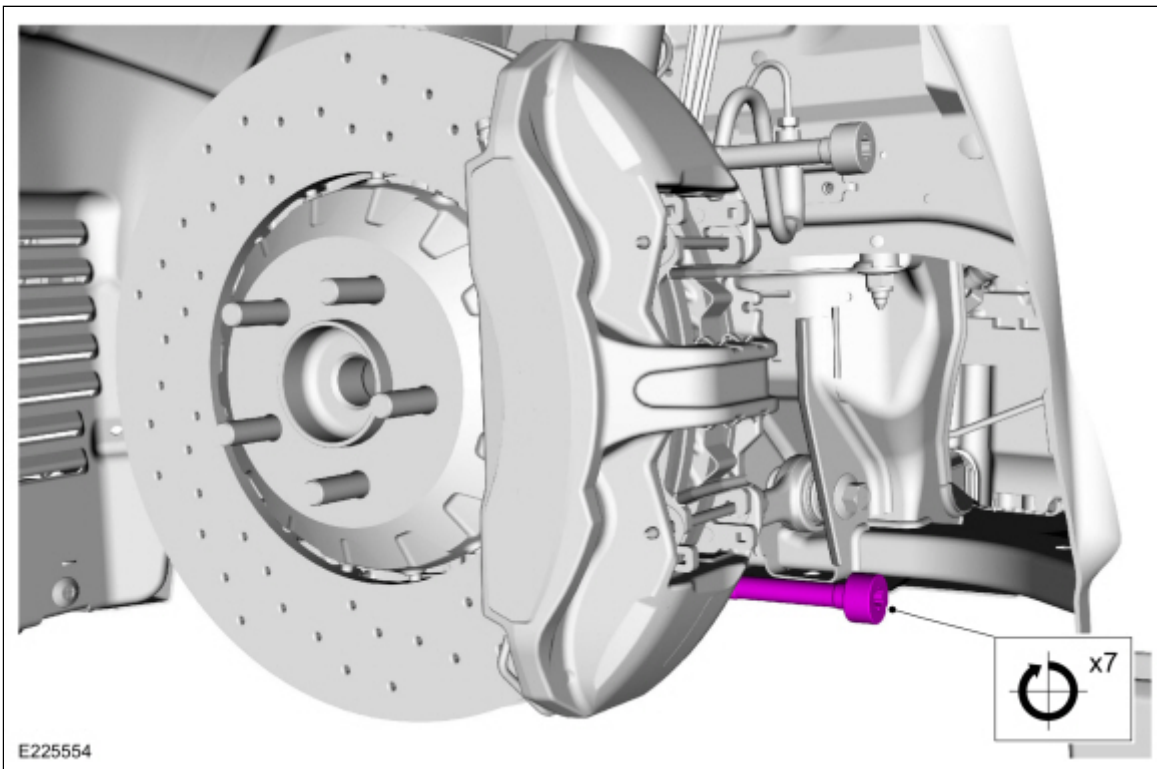


6.

1. **NOTICE:** Make sure the wheels are in the straight-ahead position before moving the brake caliper or damage to the brake hose may occur.


Slide the brake caliper back on the longer bolts.

2. **NOTICE:** Use care when handling the brake disc.


Remove the brake disc.

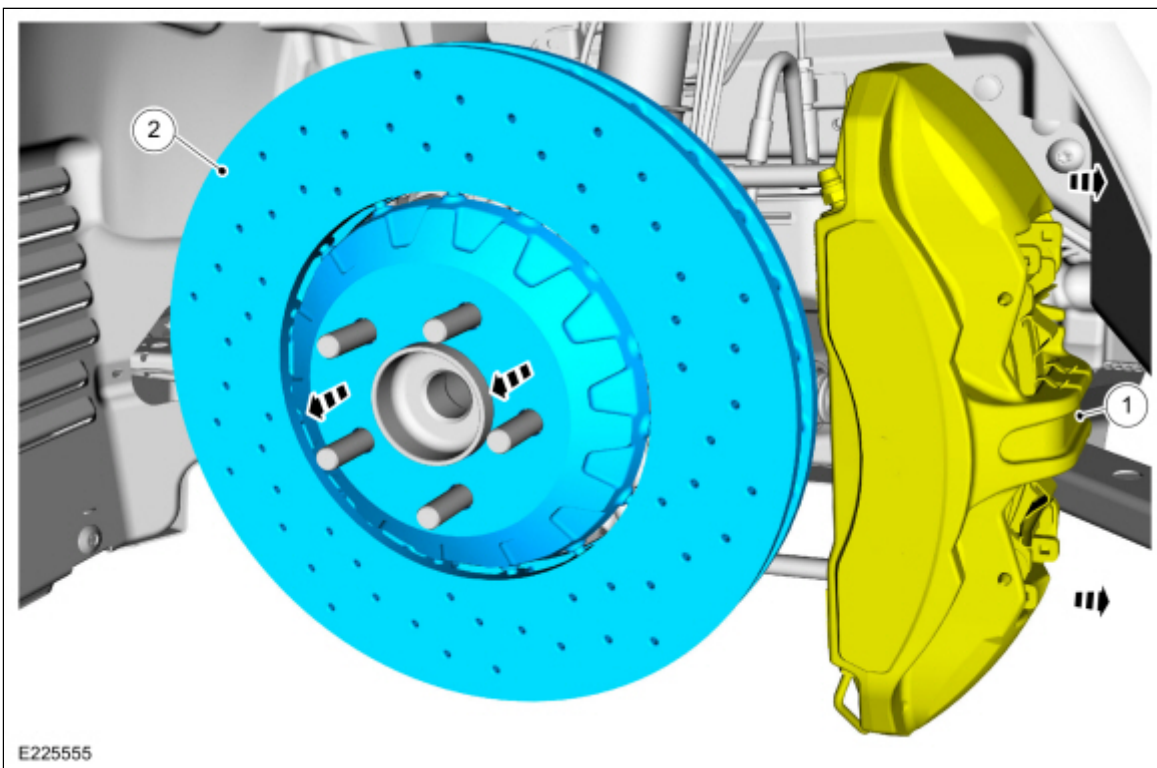

7. Compress the brake caliper pistons using the brake pad spreader tool.

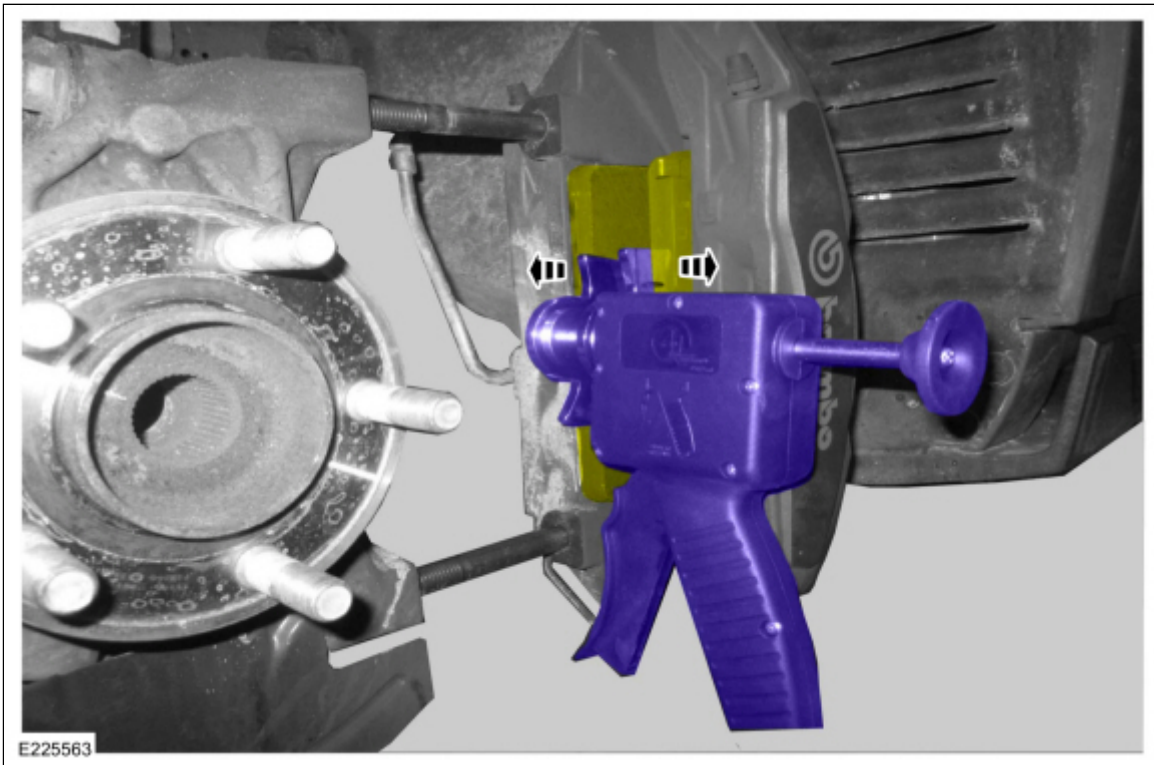


8. Remove the brake pad pins.

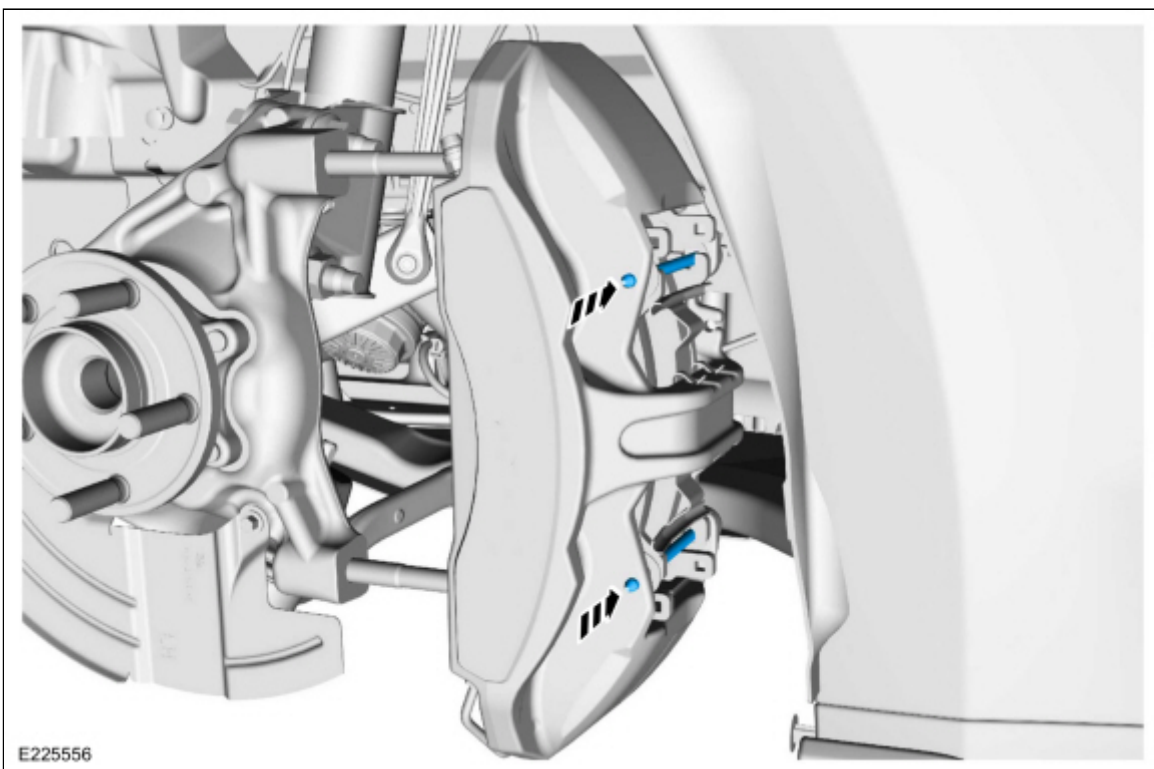

9. Remove the brake pads.



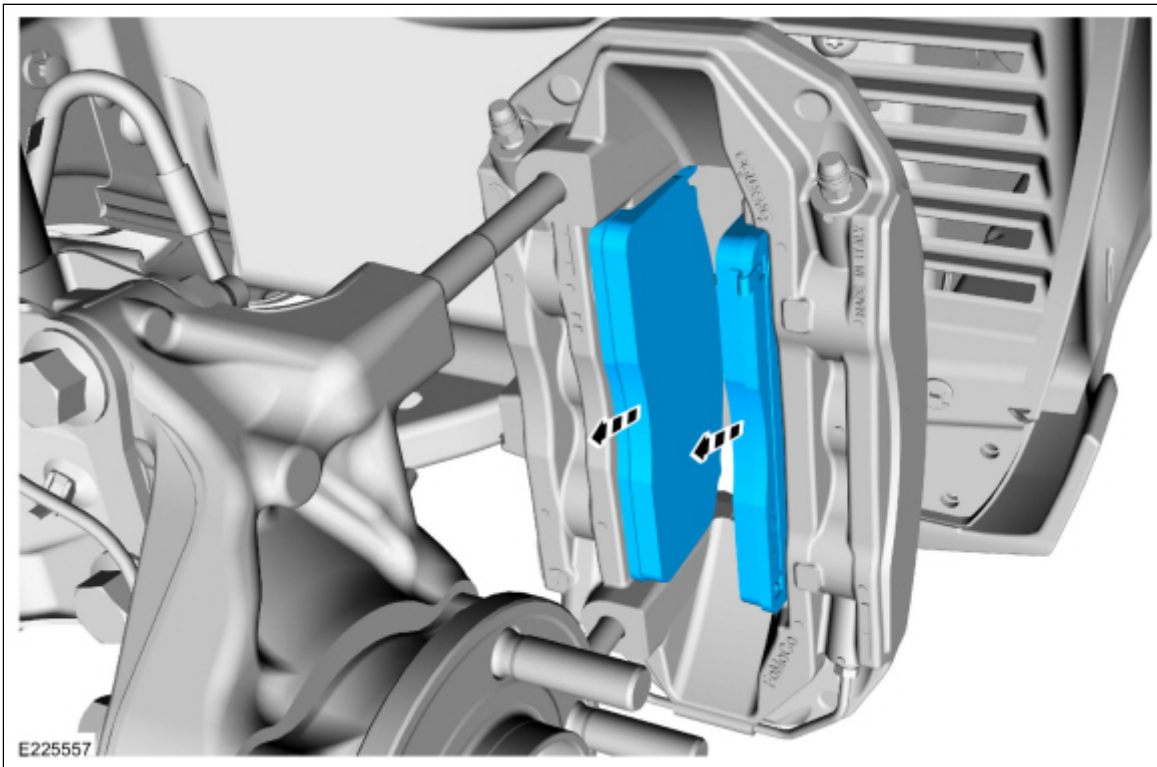

Installation

NOTE: If installing new brake pads, make sure to install all new hardware and lubricant supplied with the brake pad kit. Refer to the brake pad instruction sheet when applying lubricant.

1. To install, reverse the removal procedure.
2. Depress the brake pedal, check the brake fluid level in the brake fluid reservoir and top up as necessary with brake fluid.
Refer to: [Specifications](#) (206-00 Brake System - General Information, Specifications).

Copyright © 2017 Ford Motor Company

