


Engine Emission Control - Vehicles With: Race Track Pack - Component Location



5.2L 32V Ti-VCT Supercharged

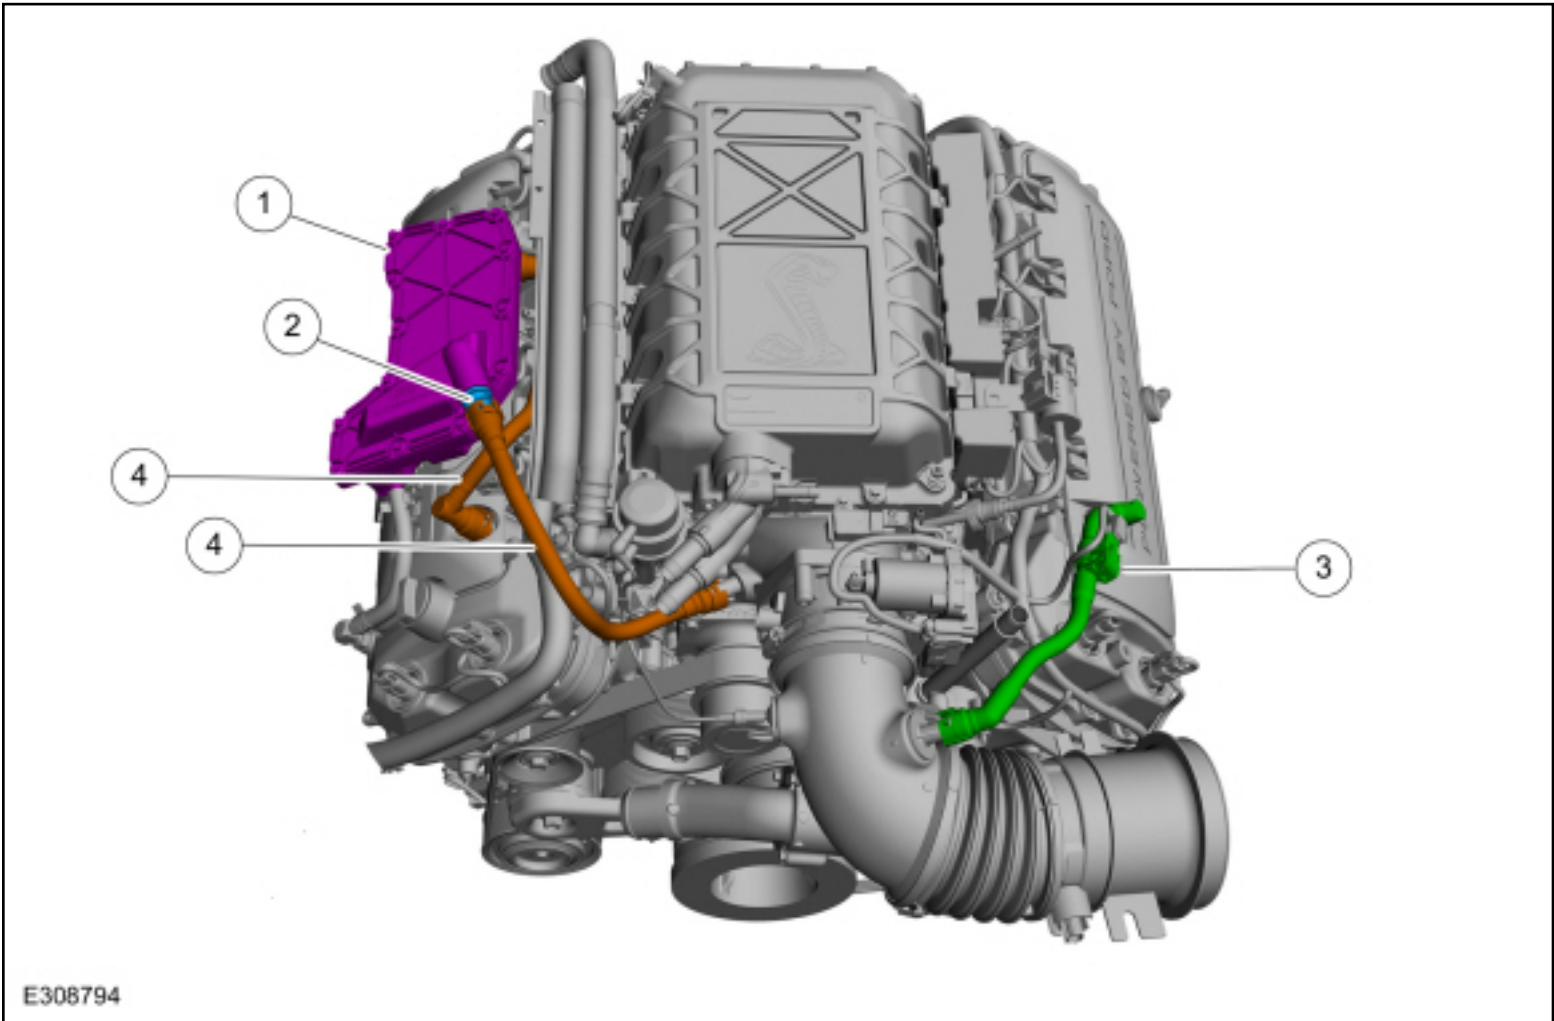

Item	Description
1	Crankcase vent oil separator.

2	PCV valve.
3	Crankcase vent hose.
4	PCV hose.

Copyright © 2020 Ford Motor Company

Positive Crankcase Ventilation (PCV) Valve - Vehicles With: Race Track Pack




Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Disconnect the quick connect coupling.


Refer to: [Quick Release Coupling](#) (310-00B Fuel System - General Information - 5.0L Ti-VCT V8 (308kW/418PS), General Procedures).

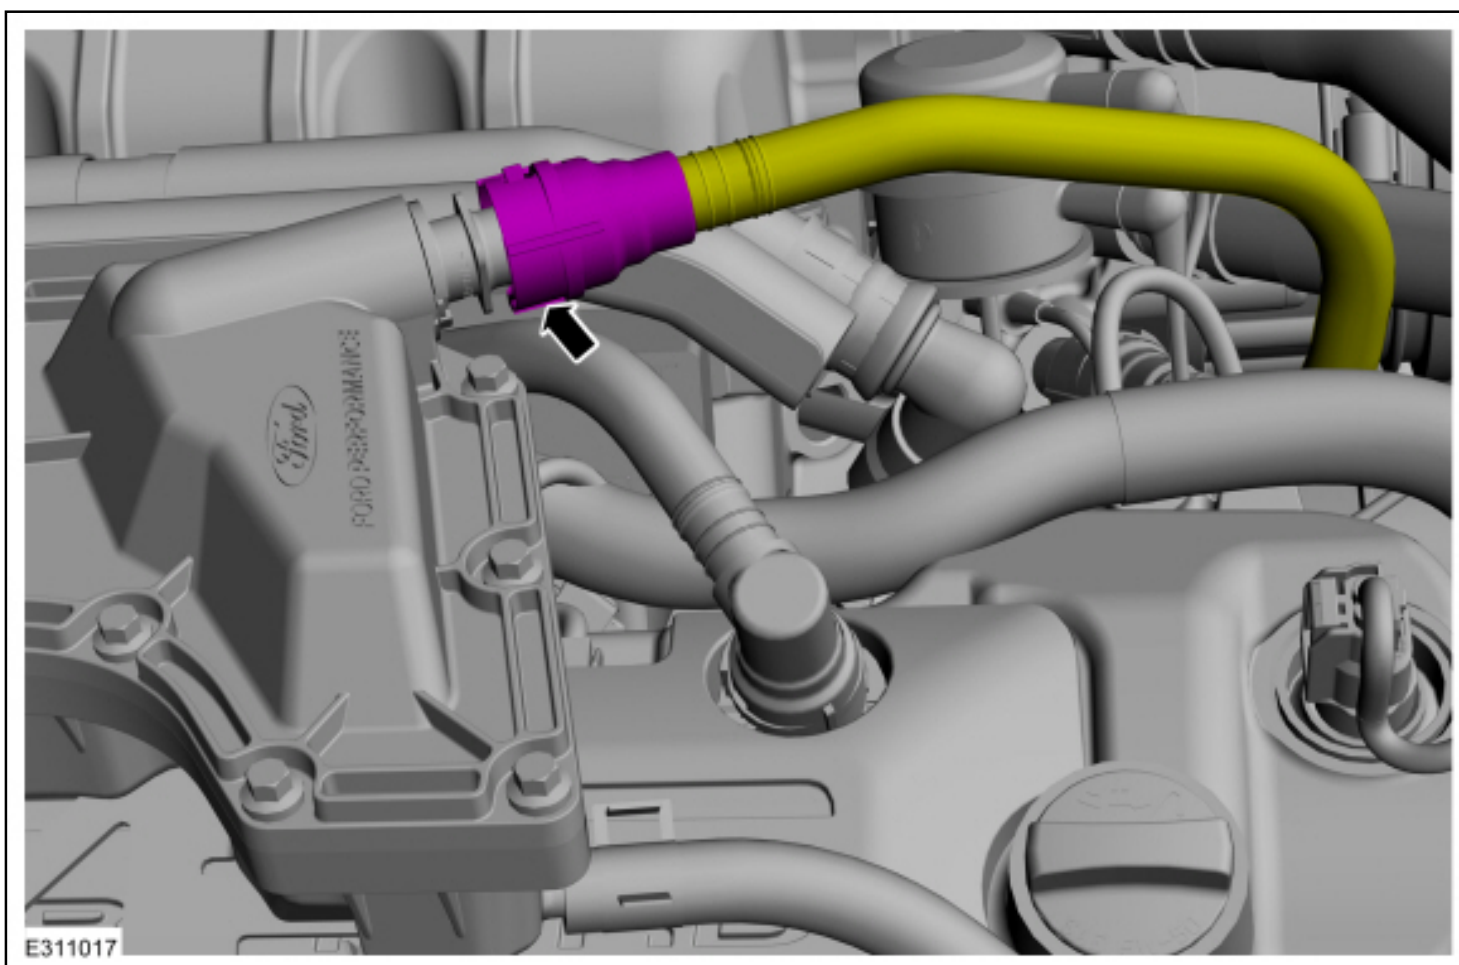

2. **NOTE:** A new PCV valve must be installed if removed. Damage will occur to the locking mechanism


on the PCV valve.

Rotate the PCV valve counterclockwise and remove the PCV valve. Discard the PCV valve.

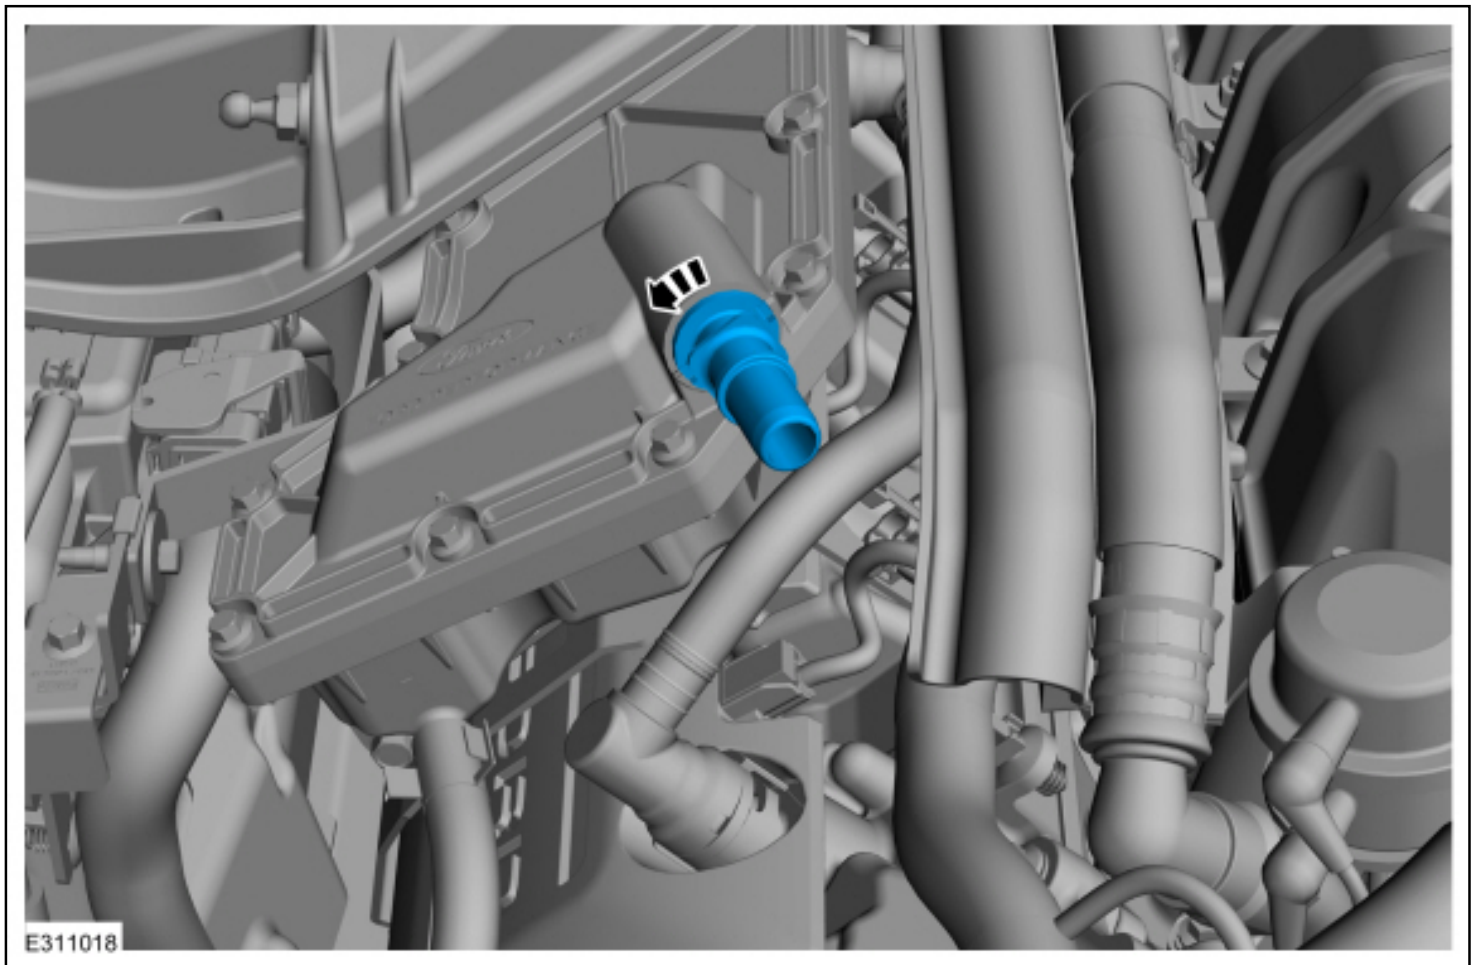

Installation

1. Lubricate the new PCV valve O-ring seal with clean engine oil.

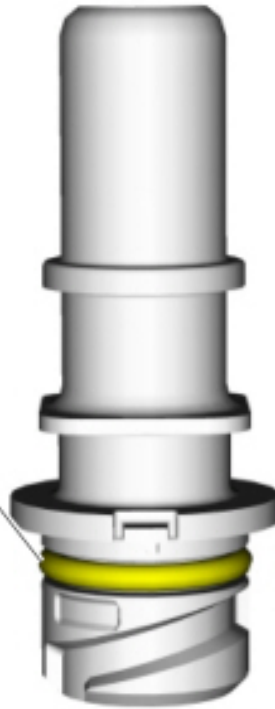

E180567



2. To install, reverse the removal procedure.

Copyright © 2020 Ford Motor Company