

Steering Wheel



Removal

NOTICE: To prevent damage to the clockspring, make sure the front wheels are in the straight-ahead position.


NOTE: Removal steps in this procedure may contain installation details.

NOTE: LHD shown, RHD similar.


1. Remove the driver airbag module.

Refer to: [Driver Airbag](#) (501-20B Supplemental Restraint System, Removal and Installation).

1. Disconnect the steering wheel switches electrical connector.
2. Remove the steering wheel bolt and the steering wheel.
Torque: 35 lb.ft (47.5 Nm)

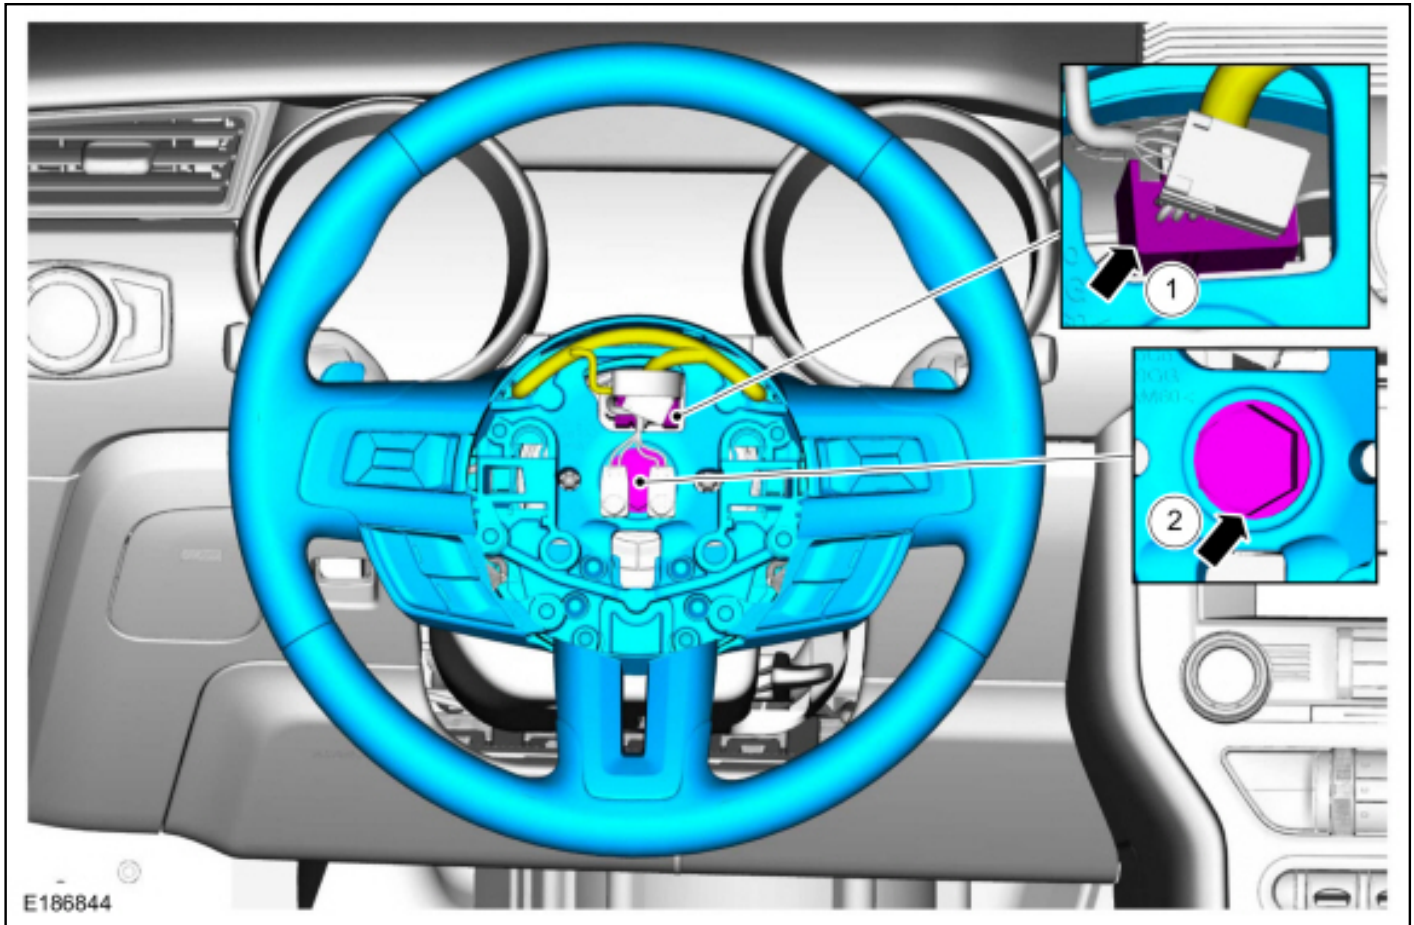

3. Tape the clockspring rotor to the outer housing to keep it from rotating.

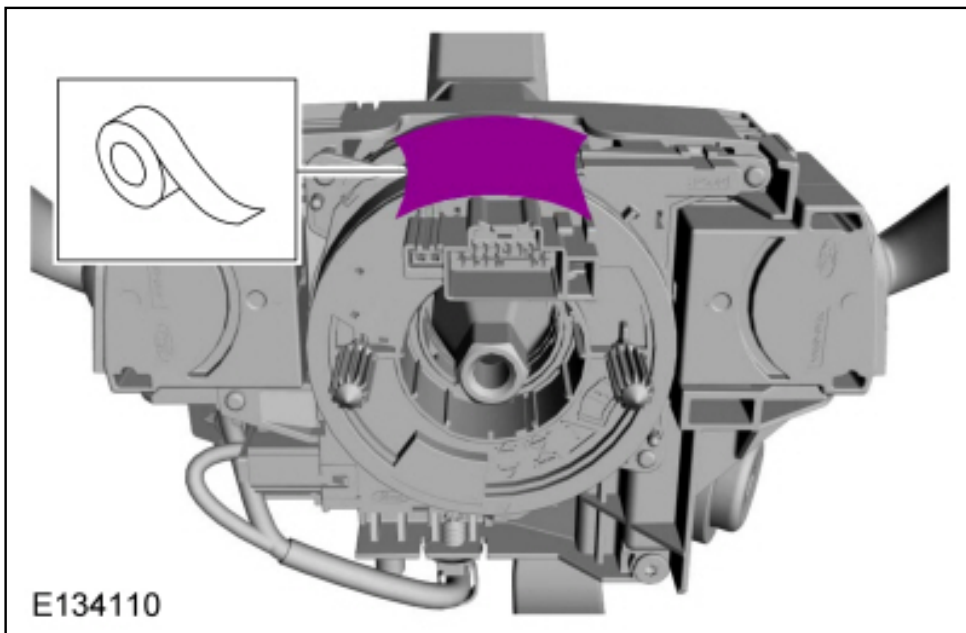

Installation

1. To install, reverse the removal procedure.