

Maintenance


1. Stop your vehicle as soon as it is safe to do so. Fully apply the parking brake, shift into park (P) or neutral (N).
2. Leave the engine running until the coolant temperature gauge needle returns to the normal position. If the temperature does not drop after several minutes, follow the remaining steps.
3. Switch the engine off and wait for it to cool. Check the coolant level.
4. If the coolant level is at or below the minimum mark, add prediluted coolant immediately.
5. If the coolant level is normal, restart the engine and continue.
2. Remove the filler plug.
3. Start the engine and allow it to idle for two minutes with the clutch engaged.
4. Add fluid through the filler hole.
5. The correct fluid fill level is 0.0–0.1 in (0–3 mm) below the bottom edge of the filler hole.
6. Install the filler plug.
7. Tighten the filler plug until you feel a strong resistance.

Only use fluid that meets our specifications. See **Capacities and Specifications** (page 335).

MANUAL TRANSMISSION FLUID CHECK - 6-SPEED MANUAL TRANSMISSION – 3160

Note: Make sure the vehicle is on a level surface.


1. Clean the filler plug.

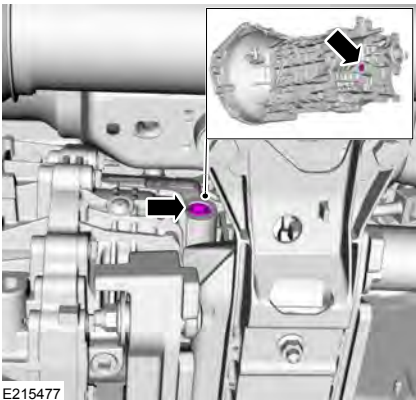

E215477

MANUAL TRANSMISSION FLUID CHECK - 6-SPEED MANUAL TRANSMISSION – MT82

1. Clean the filler plug. The filler plug is on the right-hand side of the transmission.

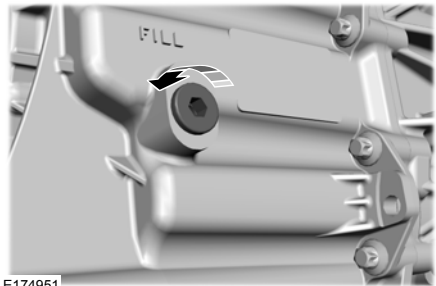

E174951

2. Remove the filler plug.
3. The correct fluid fill level is 0.0–0.1 in (0–3 mm) below the bottom edge of the filler hole.
4. Add fluid through the filler hole.
5. Install the filler plug.