


78. Use a 3/8" breaker bar to rotate the tensioner clockwise, finish installing the supplied belt according to the routing diagram shown below.

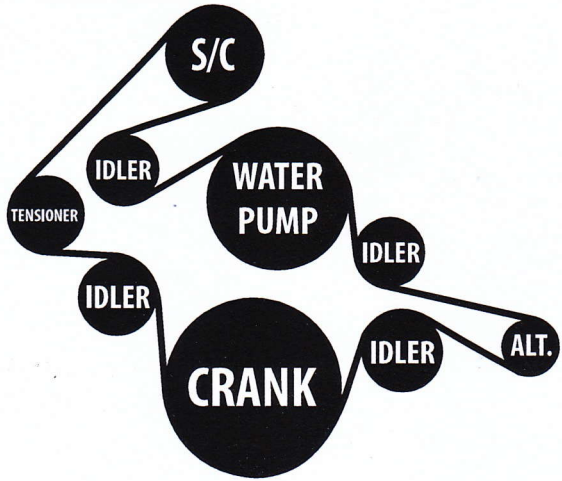

79. Using the two (2) factory bolts, reinstall the coolant reservoir with a 10mm socket.

