


Shelby GT350R R-Splitter Installation Instructions

INSTALLATION VIDEO


1. Raise front of vehicle to access the fastening locations for the GT350R Front Splitter.
Always use an approved floor jack and jack stands. See Owners Guide for proper jacking instructions

2. Remove (2) screws on outboard edges of Belly Pan.

**Note: Screws should be set aside as spares.
Replacement screws included in kit.*

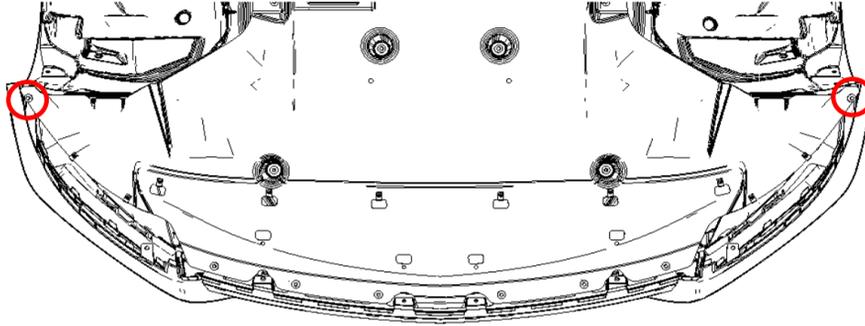


3. Install (4) W714205-S307 M4.2 Black J-Clips to Belly Pan.

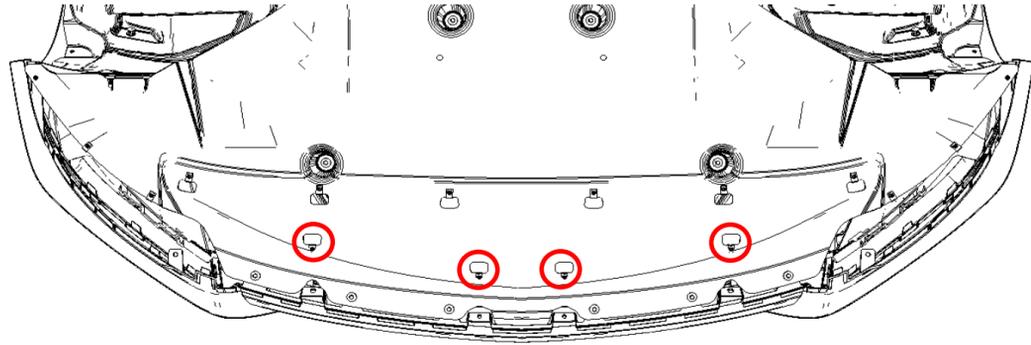


4. Locate the Splitter Assembly to the Front Fascia and ensure snap features have positively engaged to Front Fascia.

**Note: For easier installation place a bundled up shop rag on the Splitter leading edge directly below each clip location and tap with a rubber mallet. Press down on leading edge while observing clip to ensure it has been positively engaged in the Front Fascia.*


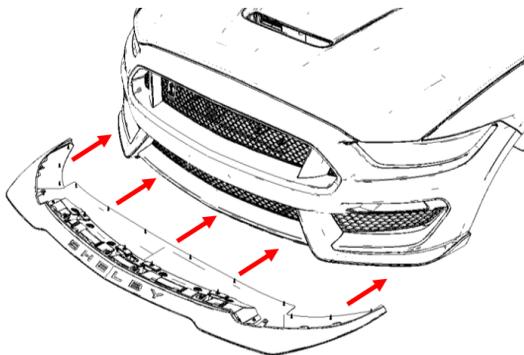


5. Remove Wheel Liner fasteners and peel back Wheel Liner.


**Note: Save Wheel Liner fasteners for re-use.*

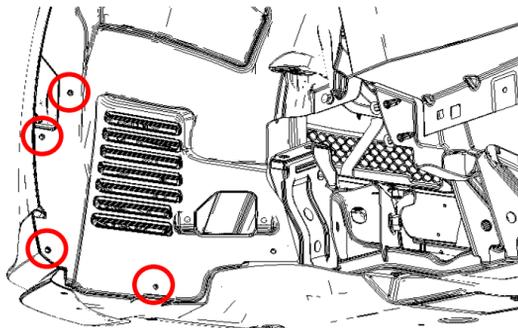


6. Remove J-Clip from rear outboard edge of Front Fascia and replace with W700528-S439 M6 Silver J-Clips on both LH and RH sides.

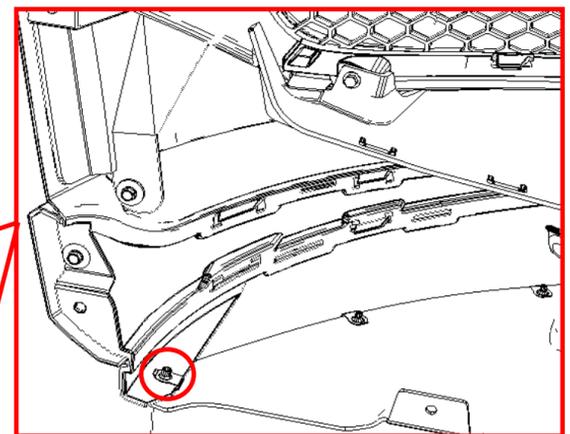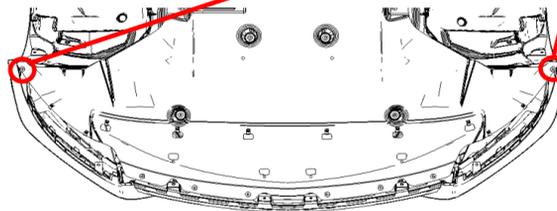

7. Reaching in through Wheel Liner openings, install (4) half moon clips from top down. Flat back of half moon clip should be facing towards the Front Fascia.

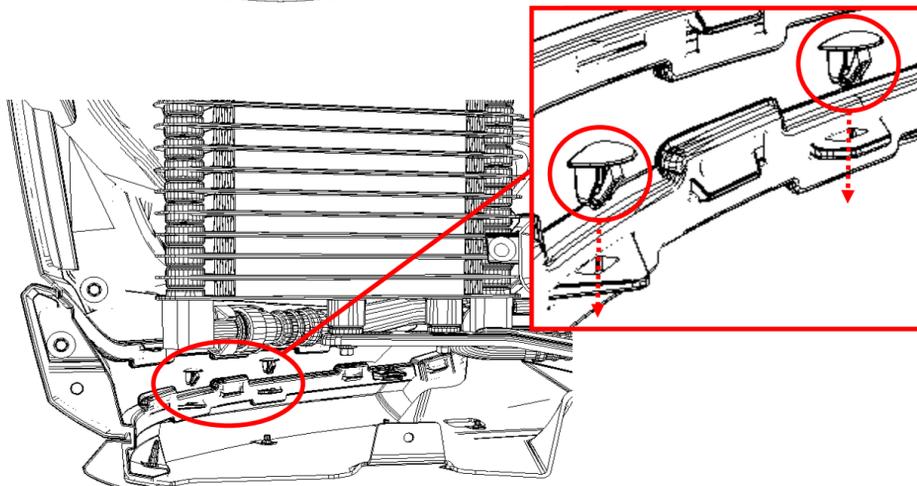


8. Secure Wheel Liner using original fasteners from Step 5.

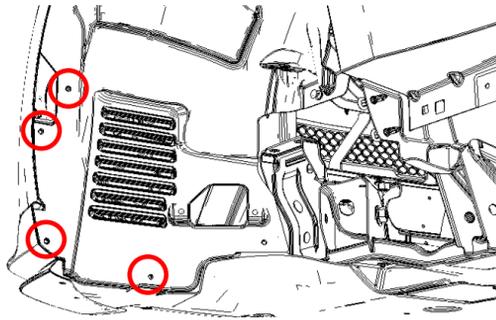


9. Using access holes on bottom of Splitter, install (4) W715060-S450B M4.2x25 Black screws at ~45° angle. Torque fasteners to 1.9 N-m.


**Note: Recommend using magnetic socket or socket with tape inside to securely hold fastener for easier installation.*

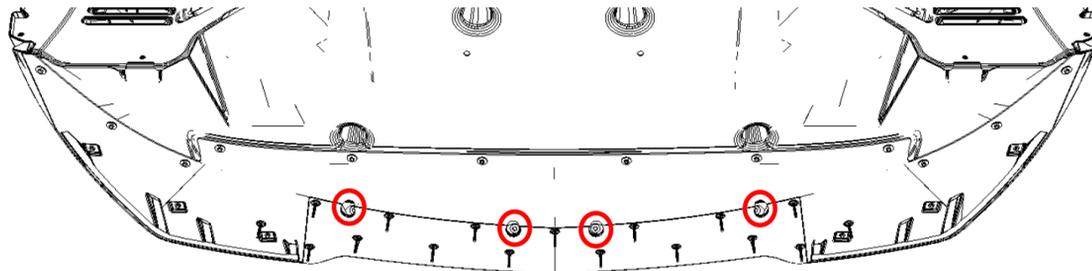


10. Using access holes on bottom of Splitter, install (4) W715060-S450B M4.2x25 Black screws vertically securing Splitter Reinforcement Bracket to Belly Pan. Torque fasteners to 1.9 N-m.

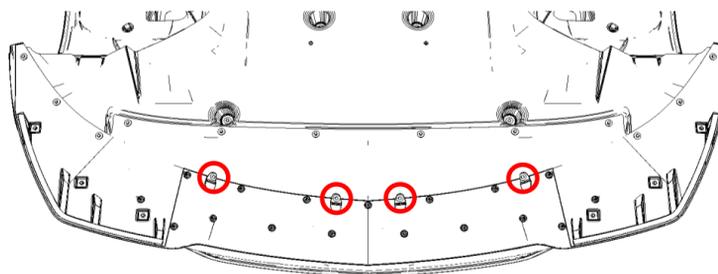


11. Install (12) W708464-S450B M6x15 Black screws securing Splitter to Belly Pan. Secure center fasteners first and work outboard. Torque fasteners to 8 N-m.

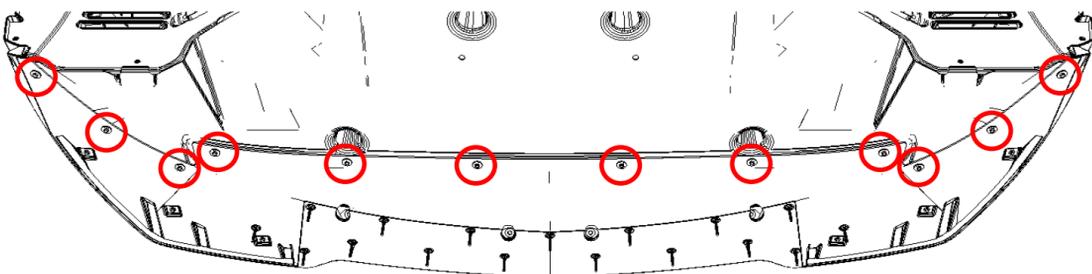

12. Using access holes on bottom of Splitter, install (2) W715060-S450B M4.2x25 Black screws securing Splitter to Front Fascia. Torque fasteners to 1.9 N-m.

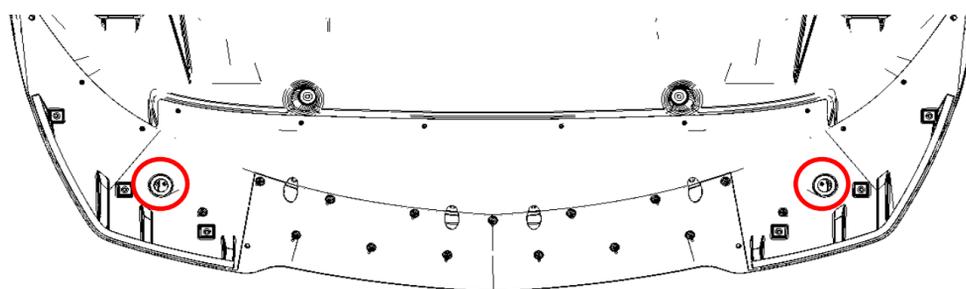

13. Install (2) plugs to Splitter by applying upward pressure while slightly rotating the plug clockwise.

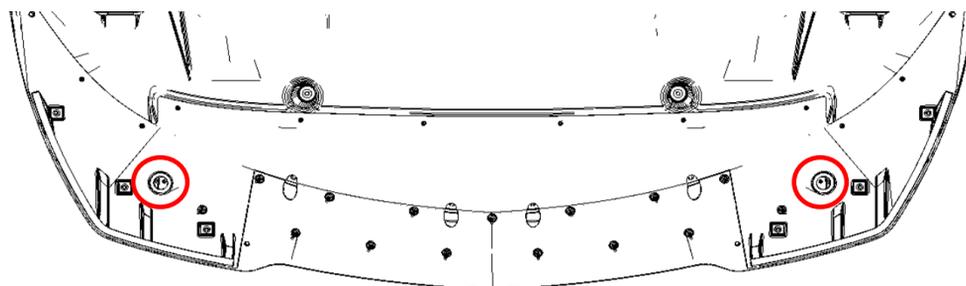

QTY	PART NUMBER	DESCRIPTION
1	FR3V-17F775-ACW	GT350R FRONT SPLITTER ASSEMBLY
10	W715060-S450B	SCREW BLACK M4.2x25
4	W714205-S307	J-CLIP BLACK M4.2
4	W716460-S300	HALF MOON CLIP WHITE
2	#251514000	PLUG
12	W708464-S450B	SCREW BLACK M6X15
2	W700528-S439	J-CLIP SILVER M6