



204-02 Rear Suspension Removal and Installation

2015 Mustang

Procedure revision date: 01/13/2015

Rear Stabilizer Bar Link

Removal


NOTE: Removal steps in this procedure may contain installation details.

1. **NOTICE:** Do not use power tools to remove or install the stabilizer bar link nuts. Damage to the stabilizer bar link ball joints and boots may occur.

NOTE: The stabilizer bar links are designed with low friction ball joints that have a low breakaway torque.

NOTE: Use the hex-holding feature to prevent the ball stud from turning while removing the stabilizer bar link nut.

Remove and discard the 2 rear stabilizer bar link nuts and remove the rear stabilizer bar link.
Torque: 85 lb.ft (115 Nm)

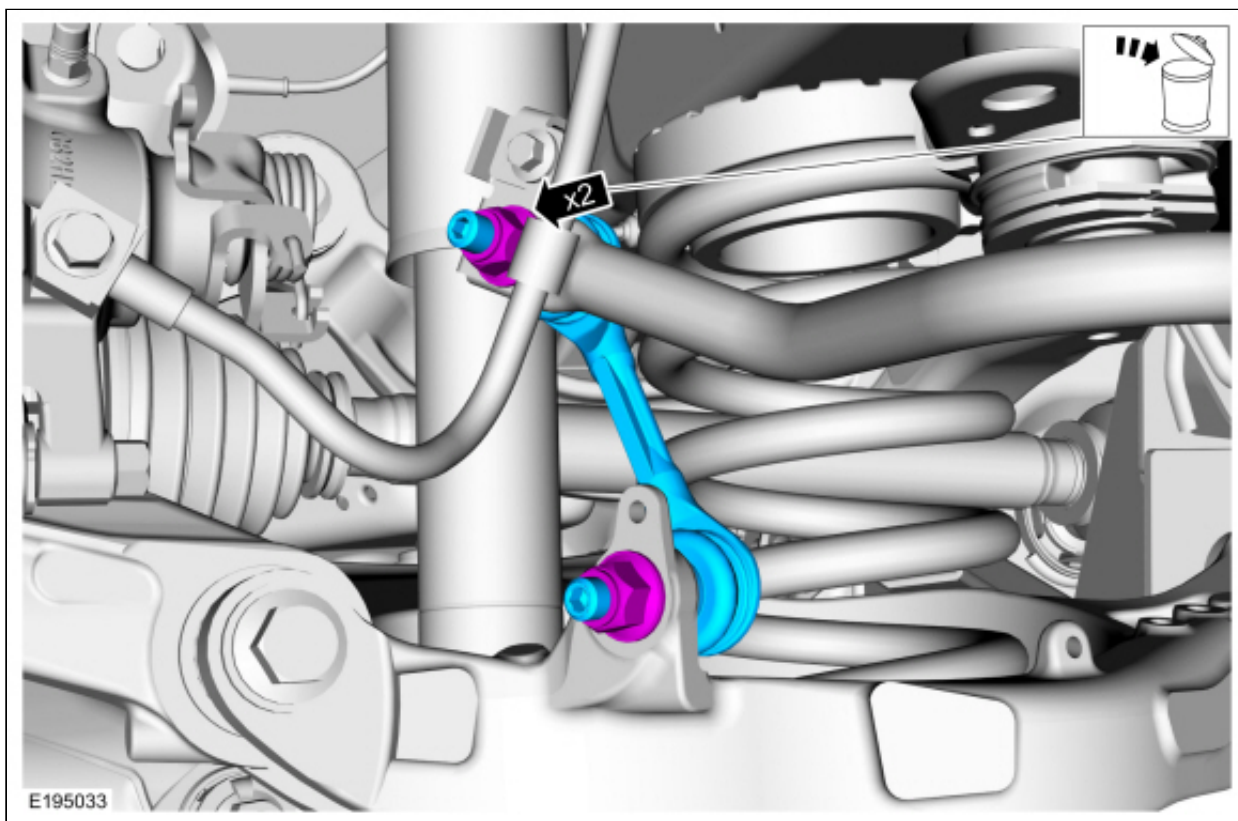

Installation

1. To install, reverse the removal procedure.

Copyright © 2015 Ford Motor Company

