

Rear Spoiler

Removal

NOTE: Removal steps in this procedure may contain installation details.

- 1. Remove the luggage compartment lid trim panel.



E184653


- 2. Remover the rubber grommets.



E184323



3. Remove the nuts.
Torque: 48 lb.in (5.4 Nm)

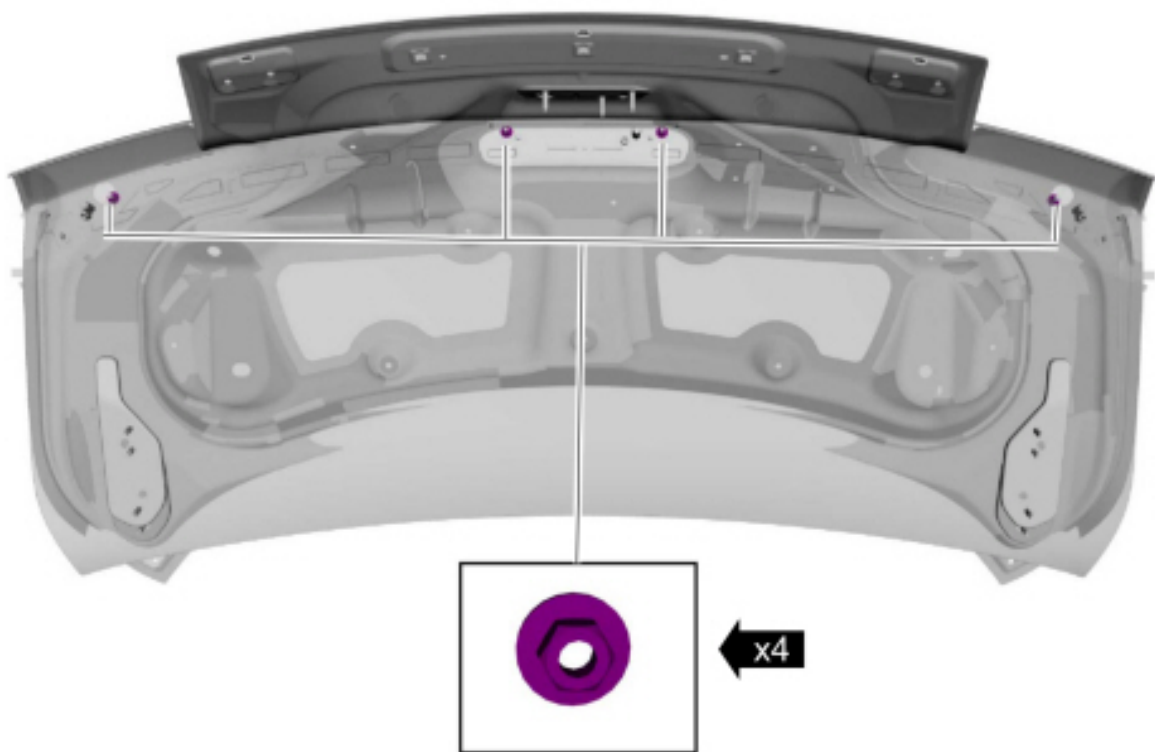



E184324



4. **NOTE:** *Single wing rear spoiler shown, all others similar.*

NOTE: *The rear spoiler uses two-side adhesive tape to fasten the spoiler to the luggage compartment lid.*

Lift the rear spoiler to detach from the luggage compartment lid.

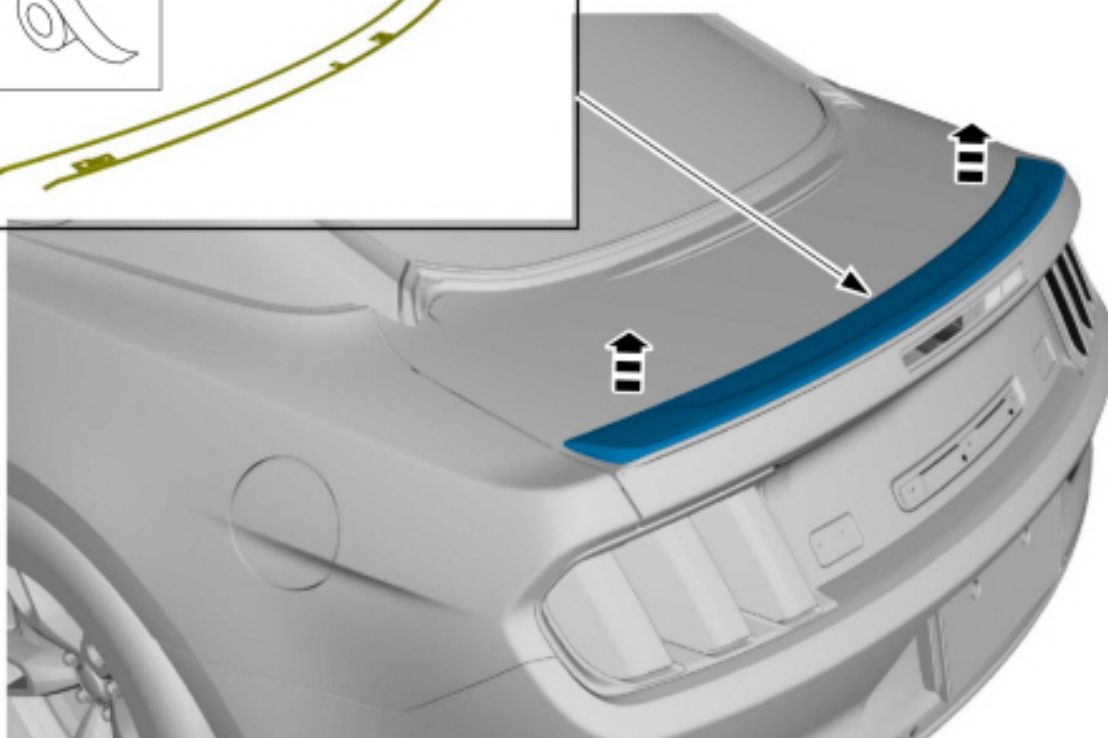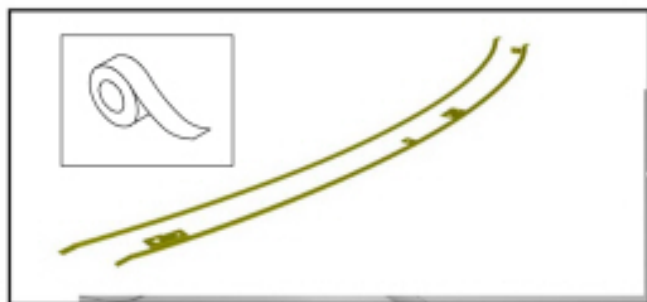

E184325



5. Clean any residual adhesive and dirt from the luggage compartment lid surface.



E184326



Installation

1. **NOTE:** *When installing the spoiler, apply approximately 15 lbs. of pressure along the length of the spoiler to ensure adhesion of the two-side tape.*

To install, reverse the removal procedure.